

IMPORTANT NOTES for your **Jet Spray**.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Jet Spray.



DISPOSAL

- Dispose of all paper, cartons and plastic in accordance with your local recycling regulations. At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

Use your Hose Jet Wash Set to turn your hose into a high pressure washer. Clean cars, gutters, bins and floors at a faster rate than with an ordinary hose, eliminating dirt quickly and effectively. The kit contains a soap dispenser allowing you to wash with either pure water or with the power of soap while you clean.

SAFETY INSTRUCTIONS:

- Keep out of reach of children.
- Do not leave the jet washer unattended when connected to the hose.
- Store in a cool dry place when not in use.
- Do not use the device if it is damaged in any way.
- Ensure that all attachments and nozzles are screwed tightly to prevent leaking while you work.
- Do not the washer towards people, pets or plants when in use.

Jet Spray 9933

Instructions for Use

v1.0: 10/11/14

Description of parts:

- A. M connector
- B. F connector
- C. Jet nozzle
- D. Jet nozzle
- E. Valve pressure setting
- F. Ultra solid metal body
- G. Soap Dispenser
- H. Washing brush
- I. Flexible tip



G



H



I

Instructions for use:

- Attach the F connector directly onto your garden hose, ensuring that it is screwed on tightly and will not leak.
- Screw the M connector onto the end of the jet washer, and then connect this to your hose by screwing it into the F connector.
- Your device can now be used as a pressure washer as soon as you turn the hose on.
- Depending on what work you are using the washer for, you can choose from the three different nozzle attachments.
- Use the nozzle with single hole for high pressured direct spraying.
- Use the nozzle with slit for a wider spray.
- The flexible tip can also be added when washing hard to reach areas.

To use the soap dispenser:

- Fix one end of the soap dispenser directly to the lance then attach the M connector to the other end of the valve.
- Once connected, attach your hose via the F connector.
- When using the soap dispenser you can choose from three options;
 - OFF- neither soap nor water will come through the washer.
 - SOAP- Soap is passed through the lance for disinfecting power when you are cleaning.
 - RINSE- Only water will pass through the lance.
- You can now choose to either use pure water pressure or add soap to aid your high pressured cleaning.

Cleaning and maintenance:

- Always store the device in a cool dry place.
- Wipe the device clean with a damp cloth.
- To prevent rusting, always ensure that the device is fully dry before putting away.
- Rinse out soap dispenser after each use and check that no soap residue remains in either the dispenser or the washer by rinsing thoroughly with clean water.
- Always check the device for signs of damage before use. Do not use a damaged washer.

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.