

IMPORTANT NOTES for your Folding Gazebo.


- Size when opened: 3 x 3m
- Mass of item: 11.8 Kg
- Minimum 2 person assembly

Contents:

- 1 x Folding Gazebo
- 1 x Carry Bag
- 4 Guy Ropes, 8 Ground Pegs

CAUTION:


- Do not use or try to erect in windy conditions – this may cause injury or damage to the Gazebo.
- Keep away from fire!
- Keep your hands away from moving parts as the frame opens and closes to avoid pinching.
- Minimum of 2 Persons required to erect.

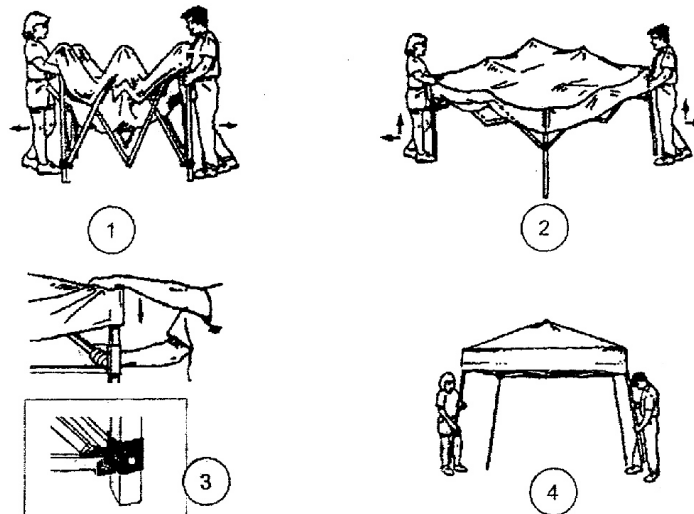

Setting up:

- Site your Folding Gazebo where you want to use it. Remove the Carry Bag and stand the Folding Gazebo on its feet. With your partner on the opposite side, grasp 2 outer legs each, slightly lift the frame off the ground and take a step backwards, stepping to fully outstretched arms length. (Fig. 1).
- With a person on diagonally opposite corners, gently tease the frame/ legs apart whilst stepping backwards until the shelter is fully opened. Take care not to pinch your fingers. Do not pull too hard as this will result in the side supports bending. (Fig. 2).
- Engage the slider at each corner by pushing up with one hand whilst holding down the top of the leg with the other hand until the snap button locks in the locating hole. Repeat with the other legs. (Fig. 3).
- Pull out the sliding inner leg until the snap button engages in the locking hole. Repeat for the two legs on the other side. (Fig. 4).
- Square up your Folding Gazebo, attach the Velcro tabs located on the underside of the top cover around the frame struts and fasten the hooks attached to the bottom of the fabric legs to the holes situated at the bottom of the legs.
- Attach the Guy Ropes from each corner and stake the ropes and the feet with the Ground Pegs provided.

Putting away your Folding Gazebo:

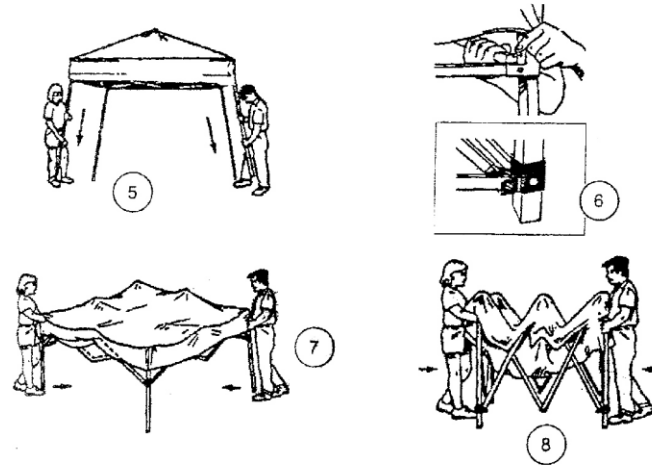

- Remove any Ground Pegs and Guy Ropes. Undo the Velcro tabs securing the cover to the frame.
- Lift up two adjacent outer legs slightly, depress the snap button and push the inner leg up into the outer leg. Repeat for the other 2 legs. (Fig. 5).
- Release the slider at all four corners by a slight upward pressure with one hand while depressing the snap button to release it. With the other hand push the slider down past the snap button. (Fig. 6).
- With a person on each of the diagonally opposite corners, gently tease the frame/ legs together whilst stepping inwards until the shelter is almost closed. Take a few steps at a time then change to adjacent corner. Take care not to pinch your fingers. Do not push too hard as this will result in the side supports bending. (Fig. 7).
- Grasp two outer legs each; slightly lift off the ground and push together to fully close. Take care to keep your fingers clear. Do not push hard, as damage may result to the frame. (Fig. 8).
- Make sure the canopy material is completely dry before returning your Folding Gazebo to its Carry Bag.

DISPOSAL

- Dispose of all paper, cartons and plastic in accordance with your local recycling regulations. At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.