

Warnings and Safety Precautions:

Please read these instructions thoroughly before using this appliance or connecting to the mains supply. Retain for future reference



- This appliance must not be earthed.
- Do not allow this product to be exposed to rain or moisture during use or storage. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating label. Connecting it to any other power source may cause damage.
- This product has been designed to mash food. It is intended to be hand held and to be used in pots, pans or the like, after they have been removed from a cooking surface. It should not be used for any other purpose.
- Although the blade is plastic, do not place hands or fingers in the blade area when the power is connected to the appliance.
- Never touch the blade when it is spinning.
- Keep hair and loose clothing away from the masher to avoid any chance of them becoming entangled in the blade.
- Always turn the power off at the power source before you insert or remove the wall plug. Remove by grasping the plug – never pull on the cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children shall not play with the appliance. Children must be supervised to ensure that they do not play with the appliance.
- Do not use in a pot still on the cooktop, as the power cord may accidentally become damaged by heat.
- Do not place this appliance on or near a hot gas flame, electrical element or heated oven.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate this appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. It must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- For household use only.
- Use the masher only as intended. Do not use near water, outdoors or in a bathroom.
- Do not immerse the motor unit in water or any other liquid. The mashing attachment is simply removed from the motor unit for washing separately.
- Never blend hot oil or fat.
- Remove all packaging inside and out before use.


Electric Potato Masher 10098

Instructions for Use

Please read and retain these instructions for future reference

v001: 24/06/15

Knowing your Potato Masher:

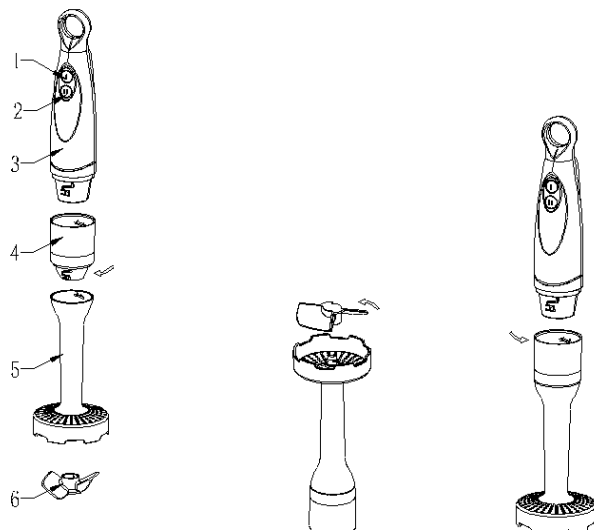

1. Low speed
2. High speed
3. Handle
4. Stirrer
5. Blending shaft
6. Masher blade

Using your Potato Masher:

- Peel and cut the required amount of Potato into approximately 2.5cm (1") cubes.
- Place the potatoes in cool water and heat to boiling.
- Boil gently until the pieces of potato offer little resistance to a knife. This should take around 15-20 minutes.
- Cutting the potatoes into smaller pieces and heating the water from cold allows the potatoes to cook through evenly.
- Drain the water from the potatoes.
- Place the potato masher into the power source.
- Select either the I or II power function depending on the speed at which you want. Hold either the I or II button down whilst you mash your ingredients. To stop mashing simply stop pressing on the button.
- Move the masher up and down through the ingredients until they have all been processed. This should only take a few seconds.
- Keep the potato masher running as you lift it from the ingredients (but still within the bowl or dish you are using), to clear any excess mash from the masher.
- DO NOT USE for longer than cycles of 1 minute at a time. Allow to rest for 1 minute in between each 1 minute cycle.
- Turn the masher off at the power point and then remove the masher head from the unit to clean by turning it clockwise.

*Calls cost 7 pence per minute plus your telephone company's network access charge.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Cleaning your potato masher:

- Before cleaning your potato masher you must remove it from the power source.
- The mashing head can be removed from the stirrer and handle for washing, by twisting clockwise.
- For further cleaning you can remove the mashing blade from the mashing head by twisting clockwise.
- Wash both the mashing head and mashing blade in warm soapy water. It is not suitable for washing in a dishwasher.
- Once the mashing head and blade are completely dry you can re-attach to the motor. Simply slot the mashing head onto the bottom of the stirrer and click clockwise into place. So that it is securely fitted to the stirrer.
- To re-attach the blade to the mashing head slot onto the plastic know in the centre, push down and then twist anti-clockwise so that it clicks firmly into place.
- Store the potato masher in a clean, dry place.

Technical Specifications:

220-240V, 50/60Hz, 200W, Class II

Certificates and Directives

This product complies with Low Voltage Directive 2006/95/EC, Electromagnetic Compatibility Directive 2004/108/EC & RoHS Directive 2011/65/EC.

Disposal of Packaging:

Dispose of the packaging at your local recycling centre.

Dispose of the paper and carton separately from plastic bags at your local recycling centre.

Dispose of the unit at the end of its lifespan at your local authorised household waste recycling centre.

