


SAFETY WARNINGS:

- Please read the instructions and warnings before using the wet and dry vacuum for the first time.
- Always check for damage prior to using your device. Any damage should be repaired properly by a qualified service engineer. If experiencing any difficulty consult your local dealer.
- Never carry out modifications to this product.
- This device is intended to be used to suck up dry and wet dirt and small quantities of liquid.
- The water and cleaning agent container can be filled with water or cleaning agents only. Do not pour any other liquids into the container.
- Do not use this vacuum cleaner to suck up the following:
 - Hot ash, cigarette ends, matches, etc.
 - Inflammable or explosive substances.
 - Very fine dust (concrete dust), ash or toner.
 - Pointed, hard objects such as large pieces of broken glass.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This unit is for domestic use only.
- Keep the motor unit, charger, and the cable away from water or other liquids to avoid electric shocks. Never touch these parts with wet or damp hands.
- Keep the packaging material away from children and animals.
- Keep animals, hair, jewellery, loose clothing, fingers and all other body parts away from the nozzle of the device.
- Take particular care when cleaning stairs with device.
- Do not use the device if highly flammable gases are present in the air.
- Do not cover the device during operation in order to prevent it from catching fire.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Unplug from outlet when not in use and allow the item to cool thoroughly before cleaning.
- Do not operate appliance with a damaged cord or plug or after the appliance malfunctions in any manner. We recommend that the power cord is not stored kinked or twisted, and that you regularly check its condition.
- Do not use this appliance for any other use than the intended use it is designed for.
- Take care not to drop the appliance as heavy impacts may cause internal damage.
- Before switching the product on, make sure that the voltage of your electricity supply corresponds with what is indicated on the rating label.
- Connecting the appliance to any other source may cause damage or risk of electrical hazard.
- Children should be supervised to ensure that they do not play with the unit.
- The unit is not intended to be operated by means of an external timer or separate remote-control system.

- Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by an approved service centre.
- Keep the appliance and the power cable out of the reach of children when the unit is plugged in or cooling down.
- Do not use outdoors.
- In the event of damage/faults, switch the device off immediately.
- The device should only be used when it is fully and correctly assembled. The dust container and the filter must be inserted and must not be used damaged.
- Do not pull on the cord to unplug the device. To unplug the appliance, grasp the device by the plug housing. Do not allow dirt to get into the motor as this could damage the motor.
- Do not expose the device to extreme temperatures, wide temperature fluctuations, open fire, direct sunlight, moisture or wet conditions.
- Do not insert anything into the opening/ nozzle of the device and make sure that these do not become clogged.
- Empty and clean the container after each use. The filter must also be regularly cleaned in order to prevent overloading the motor.
- Never leave the device switched on when it is unsupervised.
- Switch off the device if it stops working, are no longer using the device or before you change or clean the accessories.
- The dust container and filter must be completely dry before you put them back inside the device.
- Do not use appliance for other than its intended use.
- Unplug the unit when it is not in use and before you clean it. Turn it off before unplugging it.
- Do not plug in or unplug the unit with wet hands.
- Store the device in a cool, dry place.
- Do not use the charger with any other device or charge up the device using another charger. Only ever use the charger which is supplied with this device.
- Only ever connect the charger to a properly installed plug socket.
- Make sure that the connected cable does not present a trip hazard, and does not come into contact with hot surfaces.

PARTS OVERVIEW:

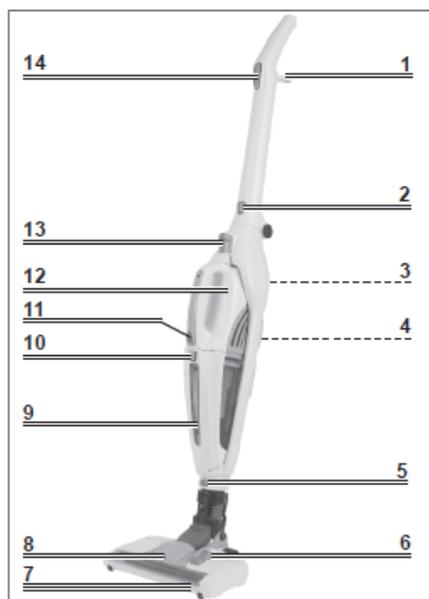

- 1, spray trigger for cleaner.
- 2, release button for tilting the folding handle.
- 3, port opening for battery charger.
- 4, cleaning agent container.
- 5, release button for cleaning foot.
- 6, switch for flipping function between wet/dry cleaning function.
- 7, cleaning foot.
- 8, spray nozzle for cleaning foot.
- 9, dust container.
- 10, release button for removing the dust container.
- 11, on/ off switch when used handheld vacuum cleaner.
- 12, motor unit.
- 13, release button for removing the handheld vacuum cleaner unit.
- 14, on/off switch when used as a floor cleaner.

NOT SHOWN:

Dust filter, charger, accessories & bottle of cleaning agent.

ACCESSORIES WHEN USED AS A HANDHELD VACUUM CLEANER



Brush nozzle: Use the brush nozzle to remove dust from delicate objects such as picture frames, lamp shades, keyboards, books etc.



Crevice nozzle: Use the crevice nozzle to vacuum in folds in fabrics, corners, recesses or other places which are hard to reach.



Wet nozzle: You can use this nozzle to suck up small quantities of liquids (e.g. spilt water).

BEFORE FIRST USE:

- Unpack all parts and check the items supplied are not damaged. Note: that the two nozzles may be packed inside off each other.
- Charge up the battery (see below).

CHARGING UP THE BATTERY:

- Charge up the battery fully before first use. Approx. charge time 3-4 hours.
- Disconnect the charger from the mains power and then the device. Store the charger in dry, cool place.

ASSEMBLY (FLOOR CLEANER):



- 1, Flip the handle upwards until it clicks into place.
- 2, Attach the cleaning foot to the body of the device.
- 3, Insert the handheld vacuum cleaner (the motor unit with the dust container).
- 4, Fill the container (see section on Filling the Cleaning Agent Container section) and insert into the device with the seal cap pointing downwards.
- 5, Your cleaner is now ready for use.

FILLING THE CLEANING AGENT CONTAINER:

The water and cleaning agent container can be used with just water or cleaning agent. Press the spray trigger on the handle and this will dispense the solution from the nozzle at the front of the cleaning foot.



1. Turn the seal cap clockwise.
2. Fill the cleaning agent container with cleaning agent.
3. Place the seal cap back on and twist it shut by turning it anticlockwise.
4. Insert the cleaning agent container into its holder on the device with the seal cap pointing downwards.

HANDHELD VACUUM CLEANER



1. Remove the handheld vacuum cleaner (i.e. the motor unit with dust container) by sliding the release button downwards and removing the handheld vacuum cleaner.



2. Attach one of the accessory nozzles (brush nozzle, crevice nozzle or wet nozzle) by sliding them onto the suction opening of the handheld vacuum cleaner. To remove it, simply pull out the accessory nozzle.

FLOOR CLEANER

1. Make sure that the cleaning foot, the motor unit with dust container and the cleaning agent container has been correctly attached to the device (see the "Assembly" chapter).



2. Use the switch for changing between the wet/dry function to set whether you want to clean the floor dry (front switch position (1)) or want to clean the floor wet with cleaning agent (rear switch position (2)).



3. Press the On/Off switch on the handle to switch on the floor cleaner.



4. Guide the cleaning foot over the surface to be cleaned.
5. In order to spray cleaning agent out of the spray nozzle on the cleaning foot, press the spray trigger on the handle. **Make sure that you have switched on the wet function if you press the spray trigger!**

6. Press the On/Off switch to switch off the vacuum cleaner.

7. Empty and clean your dust container on a regular basis to get optimum performance from your device.

CLEANING AND STORAGE:

- Empty the dust container when the MAX mark has been reached and clean the filter regularly to prevent the motor overheating.
- Keep the motor unit, charger and cable away from all liquids. Make sure that water does not get into the motor unit during cleaning.
- Only the filter and the dust container may be cleaned with water. Ensure they are completely dry before they are put back into the device.
- The filter, the dry cleaning and the microfibre roller are not machine washable. Hand wash and dry the parts with a clean, dry cloth. Allow to fully dry before further use.
- Do not use any sharp or abrasive cleaning agents or cleaning pads to clean the device, as these could damage the surface.
- Clean the housing using a damp, soft cloth. Dry with a soft cloth.
- Remove hair and fluff from the nozzles at regular intervals.
- Store the vacuum cleaner and all accessories in a cool, dry place.
- The filter may lose some of its colour over time. This is normal and does not have any adverse effect on function.

EMPTYING THE COLLECTING CONTAINER AND CLEANING THE FILTER:

1. Switch off the device.



2. Press the release button to remove the dust container and pull the dust container away from the motor unit.




3. Take the filter (1) and the filter insert (2) out of the dust container (3).

4. If you have sucked up dry dirt, empty the dust container into a rubbish bin. Tap the filter insert and filter out over the rubbish bin. If there is wet dirt in the collecting container, rinse the dust container, the filter insert and the filter under running water.
5. Let all parts dry completely in the air before you put them back together. **CAUTION: Never re-insert the filter and insert if they are still damp.** The device is assembled in the reverse order.

CLEANING THE CLEANING FOOT:Dry Cleaning Brush

1. To clean the dry cleaning brush, release the locking catch next to the brush (see arrow).
2. Remove the catch and pull out the dry cleaning brush.
3. Remove hair, dust etc. If necessary, you can wash the brush under running water.
4. Let the brush dry completely in the air before you reinsert it. **CAUTION: Do not insert the dry cleaning brush under any circumstances if it is still damp.**
5. Reinsert the brush by first inserting the side opposite the catch and then engaging the brush on the side of the catch.
6. Reinsert the locking catch. It must engage audibly.

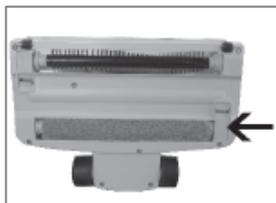Microfibre Roller

1. To clean the microfibre roller, release the locking catch next to the brush (see arrow).
2. Remove the catch and pull out the microfibre roller.
3. Remove hair, dust etc. You can wash the microfibre roller with warm water and mild cleaning agent.
4. Let the microfibre roller dry completely in the air before you reinsert it. **CAUTION: Do not insert the microfibre roller under any circumstances if it is still damp.**
5. Reinsert the microfibre roller by first inserting the side opposite the locking catch and then engaging the roller on the side of the catch.
6. Reinsert the locking catch. It must engage audibly.

TROUBLESHOOTING:

Should your device stop working properly at any time, exhibit signs of damage or require a spare part, please contact the customer service department. For your own safety, do not attempt to carry out repairs yourself. The following table contains tips on how you can remedy small problems yourself.

Problem	Possible cause / solution / tips
The device generates no suction.	<ul style="list-style-type: none"> • Is the motor unit inserted correctly in the device frame? • Is the dust container too full? Empty the container. • Is the filter clogged? Clean the dust filter (see the "Cleaning and Storage" chapter).

Problem	Possible cause / solution / tips
The performance is weak.	<ul style="list-style-type: none"> • Is the dust container too full? Empty the container. • Is the filter heavily clogged up? Clean the dust filter (see the "Cleaning and Storage" chapter). • Is the nozzle which is being used blocked? Remove any objects blocking it (see the "Cleaning and Storage" chapter). • Is the rotating brush of the cleaning foot dirty? Remove the blockages. • Is the microfibre roller of the cleaning foot dirty? Remove the blockages.
Dust escapes from the device during cleaning.	<ul style="list-style-type: none"> • Is the dust container not closed correctly and / or not (correctly) inserted into the device? Correct this.
During vacuum cleaning, an unpleasant smell is detected.	<ul style="list-style-type: none"> • Is the device being used for the first time? A smell often develops when new devices are first used. The smell should disappear after you have used the device several times.

TECHNICAL SPECIFICATION:**MULTI WET & DRY VACUUM CLEANER / MODEL NUMBER:****VOLTAGE SUPPLY: 18.5V****POWER: 150W****PROTECTION CLASS II****Disposal:**

- Dispose of the packaging at your local recycling centre.
- Dispose of the paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the unit at the end of its lifespan at your local authorised household waste recycling centre.



Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD