



Appliance parts

1. Electrical unit
2. Power On / Off button.
3. Rotary Ring adjustment

Settings:



Knives



Scissors



Screwdriver



Saw Knives

Power Details: Voltage details:	220-240V a.c.
Frequency detail:	50Hz
Nominal Power absorbed:	20W
Reference Model:	026308

INSTRUCTIONS FOR USE AND MAINTENANCE - For indoor use only.

BEFORE FIRST USE:

- Place the appliance on a suitable surface.
- Familiarise yourself with the device before connecting to the power supply.
- Make sure that the kitchen knives and scissors that you want to sharpen do not show traces of oil or water.

HANDLING:

- Ensure the mains plug is not connected.
- Ensure that the power button is not pressed.
- Rotate the adjusting ring (3) to place the appropriate guidance slot on the upper part of the sharpener.
- Connect the device to the power supply.
- Turn the device on by pressing and holding down the power button (2).

SHARPENING KNIFE/SCISSOR BLADES:

- Insert the blade into the slot by placing the blade supports on the guide and draw the blade through the sharpener in order to sharpen the entire length of the blade. Always draw the knife blade away from your body.
- Once the blade is sharpened, release the push button and disconnect the device.

NOTE:

1. Keep the pressure and speed of guiding the blade through the sharpener consistent and steady for best results.
2. Do not interrupt the process of sharpening or modify the pressure exerted during sharpening of knives. This could cause roughness of the blade, rather than sharpness.
3. Take the knife firmly by its handle, do not hold too tightly, simply guide the blade through the sharpener.
4. In the event of a slowdown or a lock of the engine, release the power button immediately before trying all other actions.

TIPS:

1. We advise you to practise with lower qualities knives in order to familiarise yourself with the sharpening technique.
2. Kitchen knives as well as steel and stainless steel scissors can be sharpened. However, it is not recommended to sharpen fish knives or sewing scissors.

MAINTENANCE:

After use, switch off the mains supply and remove the plug from the mains socket.

Carefully clean the device using a cloth dampened with water.

Dry with a dry cloth.

Do not use abrasive or corrosive cleaning agents.

Do not immerse in water.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Electric Knife Sharpener and follow the safety precautions below:

- Read all instructions before use.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. We recommend that the power cord is not kinked or stored in a twisted manner, and that you regularly check its condition.
- The use of any accessory attachments not recommended by Coopers of Stortford may cause injuries and invalidate any warranty you may have.
- Do not use outdoors.
- Do not let cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near heat sources, and use the Electric Knife Sharpener on a level, stable surface.
- NEVER cover the item in any way when in use,

- Do NOT place under or near flammable materials such as curtains, draperies, shelves, loose wall paper etc.
- Do not use this appliance for any other use than the intended use it is designed for.
- Ensure there is sufficient distance between the Electric Knife Sharpener and other items on the work surface or work station, or sufficient distance between the Electric Knife Sharpener and the confines of the area in which it is situated. We recommend a minimum clearance around all faces of at least 10cm.
- Before use, check thoroughly for any defects and do NOT use if defects are found. Take care not to drop the appliance as heavy impacts may cause internal damage.

WARNING:

- Check the appliance and power cable carefully for damage before each use.
- Keep the appliance away from children.
- Before connecting the appliance, check if the voltage indicated on the bottom of the appliance is in accordance with the mains voltage in your home.
- This appliance is for adult use.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall be conducted by adults.
- Do not use if the power cord or plug is damaged. Item should be repaired by a qualified electrician or replaced by the manufacturer, service agent or similarly qualified person, in order to avoid a hazard.

Plug Wiring (UK & Ireland)

This appliance is fitted with a moulded BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely.

Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean.
- Allow to dry thoroughly before further use.
- Store the unit safely away from children.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

