



## TECHNICAL:

POWER: 220-240V ac

POWER FREQUENCY: 50-60Hz

WATTAGE: 85W

## USER INSTRUCTIONS:


### BEFORE USE:

- Before using the appliance for the first time, clean the bowl and the cutter dish with hot water.
- Before each use, make sure the potato peeler is positioned on a clean/dry surface and that the machine is stabilized on its rubber feet.
- Check that the power is switched off before you plug in the appliance.
- Place the bowl on the base station and the cutter dish on the axis. Check that both parts are correctly placed.

### OPERATING THE POTATO PEELER:

1. Make sure the power switch is in the OFF position.
2. Check that all the parts are in the correct position, otherwise the machine will not function.

Make sure the lock is properly aligned  
(see arrow position)

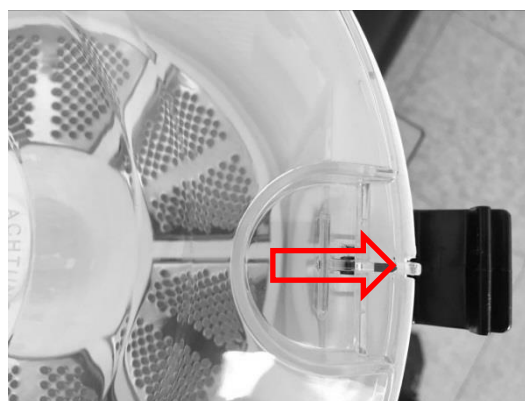

Ensure the bowl is locked with the base properly.



3. Add enough potatoes to the bowl to cover the cutter disk (but never more than 1kg each time). Close the top lid carefully.
4. Switch the power 'ON' and the light will illuminate then the machine will start working. Please note that it will vibrate but the rubber feet will keep it in place during use.
5. The peeler will take about 2 minutes to peel potatoes, but keep an eye on the progress through the transparent lid. Potatoes irregular in shape may take up more space and need a bit longer to peel, but do not allow the potato peeler to run for more than 4 minutes.
6. After the machine has finished peeling, switch off the power, unplug from mains, remove the top cover and take out the potatoes carefully.
7. Wash the potatoes with fresh water and remove any excess peeling with a small knife.

## WARNINGS / CAUTIONS:

When using electrical appliances like the potato peeler, basic safety precautions should be observed and followed, including the following:

- Before using the appliances for the first time, check if the voltage on the rating plate corresponds to the mains voltage in your home.
- Do not use the appliance for any purpose other than for which it was intended.
- To protect against electrical shock, do not immerse the power cable, plug or potato peeler base in water or any other liquid.
- When not in use and before cleaning parts, switch off and unplug the appliance from the mains power supply.
- Do not leave the appliance unattended when plugged in and keep it out of reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and

understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not let the power cable hang over edge of a table or kitchen counter or touch hot surfaces.
- Do not operate this appliance with a damaged power cable/plug, or after the appliance malfunctions or has been damaged in any way. If the appliance is damaged in any way, do not use it and take to your local electrical store or qualified electrician for repair.
- The use of accessory attachments not recommended by the manufacturer may be hazardous.
- Before putting the potatoes in the appliance, make sure the power switched off.
- Do not put more than 1kg of potatoes into the peeler. Do not let the machine work continuously for more than 4 minutes.
- Make sure all the parts are in the correct position; otherwise the machine will not work.
- Do not use outdoors.
- Do not place the appliance on/near a hot gas or electrical burner or in a heated oven.
- **The cutter dish is very sharp: take care when cleaning.**
- **Never open the machine when it is in operation.**

## PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 **13-amp plug**. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **3-amps** should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets.


If the socket outlets in your home or office are not suitable for the plug of this product, the plug must be removed and disposed of safely as insertion of the plug into a socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

### The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

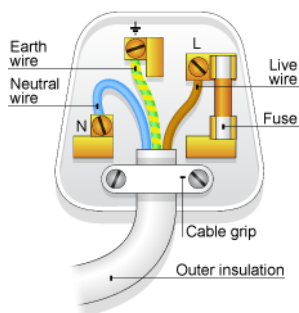

## CLEANING INSTRUCTIONS:

1. Before cleaning, always switch the appliance off and unplug the appliance from the mains power supply.
2. Do not immerse the power cable, plug and the peeler base in water or any other liquid.
3. After each use, wash the bowl and cutter with fresh water.
4. Do not use anything other than fresh water to clean the cutter and top lid.
5. Never use sharp or abrasive cloths for cleaning.

## DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

