



USER INSTRUCTIONS:

1. Make sure that the chair is on a level surface.
2. Do not put your hands or fingers under the mechanism to operate the chair.
3. To open the chair, hold the top of the backrest of the chair and gently pull out the front of the chair until the frame is open and the chair is in an upright position and securely clicked in place.
4. Sit down in the chair slowly.
5. To lock in the upright sitting position simply switch handle to a horizontal position on each side.
6. To recline the chair, sit on the chair with your feet resting on the metal bars at the bottom of the chair. Gently lean back until you have reached the desired reclining position. To lock the position of the chair twist the knobs located on either side of the arm rests until they stop turning and the chair stops.

To fold the chair away

1. Return the chair to the upright position.
2. Do not put your hands or fingers under the mechanism to operate the chair.
3. Ensure the knobs on either side of the arms of the chair are unlocked.
4. Hold the top of the backrest of the chair and gently pull the front of the chair inwards. The chair will then fold into the closed position.

WARNINGS / CAUTIONS:

- This chair holds a maximum weight of 100kg (15st 10lb).
- Designed for use by one person at a time only.
- Do not put your hands or fingers under the mechanism to operate the chair.
- Outdoor use only.
- Always ensure that the chair is in a locked position and fully open before sitting on it.

CLEANING INSTRUCTIONS:

- Wipe clean.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.