
# Hammock 10568


# Instructions for Use

Please read and retain these instructions for future reference


v001: 17/10/2016

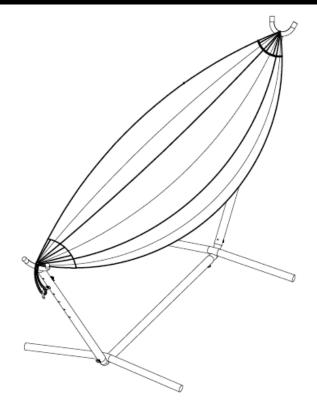

#### Parts List:

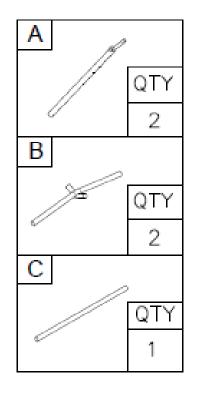

\*Calls cost 7 pence per minute plus your telephone company's network access charge.

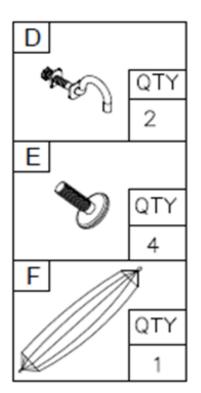



### Hammock 10568


# Instructions for Use

Please read and retain these instructions for future reference

v001: 17/10/2016

#### **Assembly Instructions:**

- Place all the pieces on the floor.
- Connect the Crossbar (Part 3) with the Bases (Parts 5).
- Screw the bolts tightly into place. (1)
- Connect the Hammock Frame Bar (Part 4) with the Bases (Part 5).
- Screw the bolts tightly into place.
- Put the hook and washer in the appropriate hole to suit Hammock size.
- Screw the wing nut to fix the hook. (2) .
- Hang the Hammock, the Hammock should only have a slight curve when first fitted to accommodate the body weight. Adjust as hammock stretches.

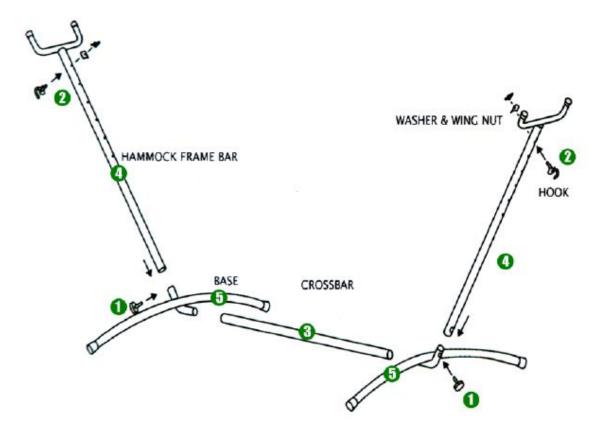

Head Office, 11

Tel: 0844 482



\*Calls cost 7 pence per minute plus your telephone company's network access charge

## Instructions for Use

Please read and retain these instructions for future reference

#### WARNINGS / CAUTIONS:

- It requires at least 2 people to assemble the Hammock. Do NOT attempt to assemble the Hammock on your own.
- Assemble on a firm, flat surface.
- Keep away from fires or heat sources.
- Once assembled, do NOT put any objects directly underneath, in front of or behind the Hammock.
- Only for use on a level surface.
- Maximum weight limit: 120Kgs
- This is NOT a toy. Do NOT let children play with the Hammock or play around it when it is in use.
- Do NOT swing excessively in the Hammock as this may cause the Hammock to become unstable.
- Do NOT smoke while using the Hammock.
- Do NOT use when under the influence of alcohol or drugs.
- Before every use, check that all fastenings are secure.
- Store in a cool, dry place when not in use.
- Do NOT allow to get wet.
- Do NOT use in windy conditions.
- Take care when getting in and out of the Hammock.
- Sudden movements may cause the Hammock to swing erratically.

#### CLEANING INSTRUCTIONS: Wipe over with a damp cloth.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

