Wheeled Garden Cart 10586


Instructions for Use

Please read and retain these instructions for future reference

v001: 18/10/16



Max. Weight: 30kg Parts List:

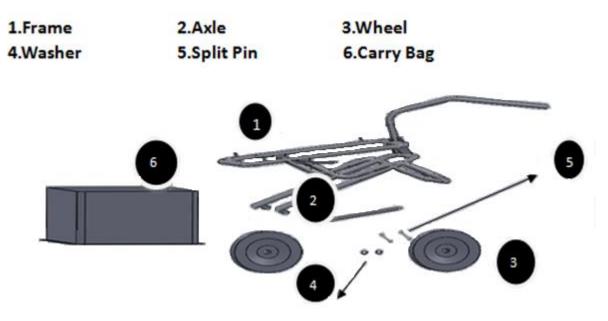

Assembly Instructions:



Step 1: Extend the frame & attach the side hook, lift the handle upward to 'lock' position.



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400 Fax: 01279 756595 www.coopersofstortford.co.uk



Wheeled Garden Cart 10586

Instructions for Use

Please read and retain these instructions for future reference

v001: 18/10/16



Step 2: Insert the Axle Part 2 into the frame. Attach the Wheels Part 3 into place followed by a Washer Part 4. Make sure the Wheels are fixed into place by using the Split Pin Part 5 through the hole in the Axle.



Step 3: Attach the carry bag to the cart by aligning eyelets to the pins on the frame.



WARNINGS / CAUTIONS:

- This Wheeled Garden Cart is NOT a toy. Do NOT allow Children to play in/on this item.
- Before use check all fixings are secure and tighten if necessary.
- Do NOT use if damaged.
- Always distribute weight load evenly.

CLEANING INSTRUCTIONS: Wipe clean with a damp cloth.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

Head Office, 11 Bridge Street Bishop's Stortford CM23 2JL Tel: 0844 482 4400 Fax: 01279 756595 www.coopersofstortford.co.uk

