

Please read and retain these instructions for future reference

v002 15/05/17



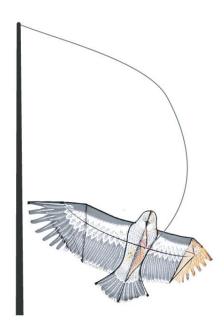


The Flying Kite Bird Repeller deters pest birds, such as crows, gulls and pigeons. For use in open areas such as fields, parks, farms, lawns, buildings, parking lots and marinas etc.

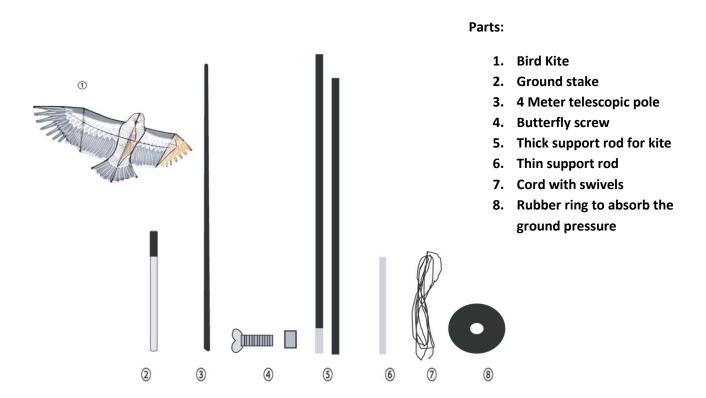

Please read and retain these instructions for future reference

v002 15/05/17

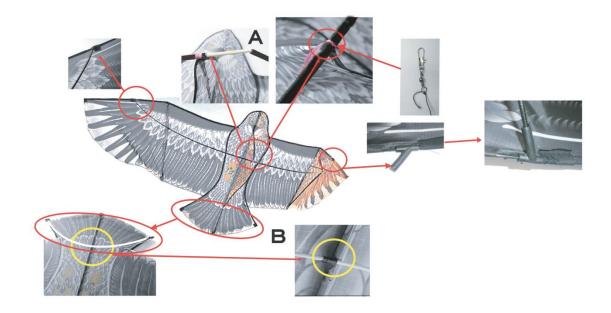

Images A and B show placement of the support rods and ties.

WARNINGS / CAUTIONS:

- 1. Do not use the Flying Kite Bird Repeller in the vicinity of power lines or trees.
- 2. Do not use the Flying Kite Bird Repeller close to roads or where people are present.
- 3. Move the Flying Kite Bird Repeller at least every two weeks to avoid the birds becoming familiar to it. If you notice that they are becoming familiar more quickly, you may need to move the Flying Kite Bird Repeller more frequently.
- 4. Make sure that the length of the cord is sufficient to enable the kite to the suspended at least 1 meter above the area to the protected.
- 5. The Flying Kite Bird Repeller flies best when the wind is consistently over 3m/s. With winds of over 10m/s, take the kite down.
- 6. The kite will get worn out from the effects of the sunlight and wind.

CLEANING INSTRUCTIONS:

Wipe clean with a soft cloth.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

