 


PARTS

1. Adjustable Spray Nozzle
2. Pump Handle
3. Nozzle Connector
4. Trigger
5. Spray Bottle
6. Pump
7. Safety Valve

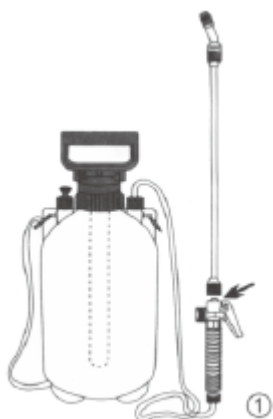

1. Attach the nozzle by screwing it on in a clockwise direction.



 
2. Unscrew the pump handle in an anti-clockwise direction.



3. Fill with the desired liquid to the max fill line as shown on the bottle.



4. Screw the pump handle back down in a clockwise direction.

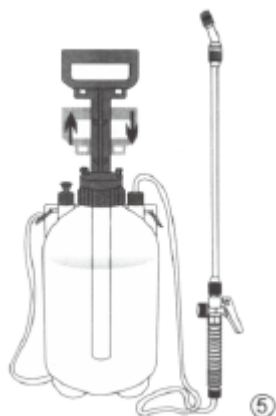


5. Pump the sprayer about 40 times.



6. The safety valve will leak if the air pressure is too high. Do not overfill with air or liquid.



 7. The sprayer will work when the trigger on the nozzle handle is pressed. To spray continuously, slide the trigger forward into lock position after pressing.

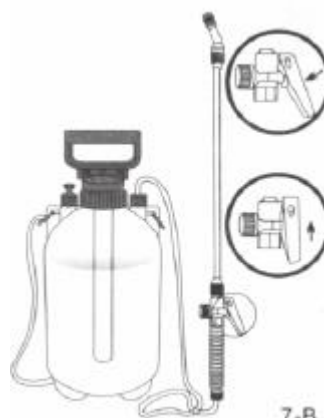

7.B To unlock slide the trigger back.

CARE AND CLEANING INSTRUCTIONS

- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.