




This Touch Phone is 2G only.

Power Details: AC Charger Input voltage: 100-240V; 50/60Hz; 0.18A
AC Charger Output voltage: DC5V, 1.0A

Accessories: Power adapter, USB cable, Earphone, Instruction manual

Thank you for purchasing this Coopers Touch Phone. To ensure best performance please ensure the product is fully charged (see icon) before attempting to use.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Touch Phone.

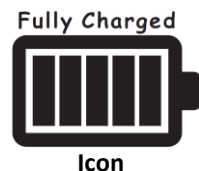

SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM CHARGER WHEN NOT CHARGING AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE CHARGER POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.

- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

Buttons and functions



No.	Buttons	Function
1	Speaker	Speaker
2	Lock	Slide down to unlock
3	Speaker	Speaker
4	Return	Return to last menu
5	Home	Return to home screen
6	Menu	Options
7	Camera	Camera
8	LED light	Flashlight
9	VOL +	Increase volume
10	VOL -	Decrease volume
11	Power	Hold down to turn on/off the phone. Press it to close/open the LCD screen.
12	MIC	Microphone
13	3.5mm headset jack	Insert the earphone
14	Micro USB port	For charging and connecting to computer via USB cable.

Installation

1. SIM Card Installation

- This phone supports dual SIM card dual standby. Please carefully insert the SIM card into the SIM card slot. Make sure the SIM card's contacts are facing inwards.

*** Important: Please turn off the phone and disconnect the charger before removing the battery cover and inserting SIM cards.**



- 2) Before taking out the SIM card, please turn off the phone first.
*** Caution: Please don't bend or scratch the SIM card. Avoid exposing your SIM card to static electricity, water or dirt.**

2. T-Flash Memory Card Installation

- 1) This phone supports up to 16GB T-Flash Memory Card. Insert the T-Flash Memory Card into the TF card slot, shown in the image below, and make sure the contacts are facing downwards. Please do not scratch or bend the contacts on the card. See below image:



- 2) T-Flash Memory Card is used as phone storage, you can use your phone to browse MP3, AVI or pictures on the T-Flash Memory Card. When connecting the phone to a computer via USB cable(supplied), you can copy or store files onto T-Flash Memory Card, you can also cut or delete files from the T-Flash Memory Card.
*** Important: This phone does not support hot-plug (Does not permit insertion or removal of SIM card or T-Flash Memory Cards while phone is ON).**
Please turn off the phone and disconnect the charger before inserting the T-Flash Memory Card. After you insert the T-Flash Memory Card, please turn on the phone and the T-Flash Memory Card will be read as extra phone storage.

3. Battery Installation

- 1) Remove the phone back cover, insert the battery into the battery compartment correctly, and then replace the phone back cover.



- 2) Before first time use, please charge for 4 hours to achieve optimum state of battery.
- 3) Connect the adapter and phone to charge, the battery power icon in the top right corner of the screen will start scrolling, the screen will display "Succeeded" and "Charging". When the battery bar stops scrolling, the charging is completed and you can unplug the charger.


Phone calls and contact

1. Search

You can speed search a contact person by tapping the **Dialpad** and selecting **Contacts**.

2. Add new contact

You can add a new contact to the SIM card or phone.

- 1) Tap **Contacts** and "+" to chose **Phone/SIM 1/SIM2** to edit the name/ Mobile number/ Email box, choose Group and Ringtone.
- 2) Tap **Save** to confirm to add a new contact.
- 3) Also you can add the new contact from **Dialpad**. Tap the **Dialpad** and choose the telephone number and hold 1 second, the menu will appear, you can choose "**Add to new contact**" to add the new contact as per above instructions.
- 4) Once the new contact is saved, you can tap the new contact to view all information saved, also you can tap  to access options: Edit/Delete/Send vCard/Edit before dialling /Add to favourites.

3. Making a Call

You can either dial a number directly or search and call a stored contact or a number from your call history to quickly place a call.

4. Missed call

You can see the missed call icon in the status bar when you miss a call, slide down the notifications panel to return the missed call. Also you can tap the **Dialpad** to open the Call History tab to return the missed call.

5. Answering/ Rejecting / Ending a Call

When you receive a call, the Phone will display an incoming call indicator. You can tap the **Dial Answer** key to answer the call or tap **Hang Up** to reject an incoming call or end current call.

6. Making an emergency call

You can make emergency calls without a SIM card to contact your service provider. **Note:** You will not be able to make an emergency call without a network signal.

7. Call history

In the call history menu, you can check dialled calls, received calls, missed calls, and rejected calls.

Message

1. Sending a text message(SMS)

From the home screen, tap **Message** to enter **Write message** to edit and send the messages.

2. Replying to a message

From the home screen, tap **Message** to select the message and reply to it.

3. Forwarding a message

From the home screen, tap **Message** to select the message and forward it to other contacts.

4. Deleting messages

From the home screen, tap **Message** to select the message and delete it. You can choose to delete an individual message or all messages.

Storage Management

1. Phone storage

This is the internal storage which contains the preinstalled apps and software. You cannot install extra apps or software on the phone.

2. T-Flash Memory Card storage

You can use the T-Flash Memory card as a removable storage to store and access your media and other files on the phone.

Setting

From the home screen, tap **Settings** to set up your phone.

1. Phone settings

Time & date	Set time: Set-up the time. Set date: Set-up the date. Time format: Select either 12 hours or 24 hours. Date display type options: Year-Month-Day / Month-Day-Year / Day-Month-Year.
-------------	--

Language settings	Display language: Auto / English / French / Portuguese / Spanish. Input language: English / French / Portuguese / Spanish.
Input method settings	Keyboard size settings: Large / Normal / Small. Input language: English / French / Portuguese / Spanish.
Auto power on/off	Auto power on: You can set up the phone auto power on time and repeat mode. Auto power off: You can set up the phone auto power off time and repeat mode.
Power management	You can check the current status of total battery usage.
Restore factory settings	You can restore factory settings, the default password is "1234". *All settings and information will be lost and once you restore factory settings.

2. Display

Animation effect	Power on display: Default / More animation / More pictures. Power off display: Default / More animation / More pictures.
Wallpaper settings	Static wallpaper/ More pictures.
Contrast	You can slide left or right to adjust the screen contrast.
Auto lock screen	There are Off / 15 secs / 30 secs / 1 min / 5 mins to choose from.

3. Security

PIN	You can edit the SIM 1 card PIN.
Modify PIN2	You can edit the SIM 2 card PIN.
Phone locked	You can set the password to lock the phone.
Modify the touch phone password	Modify the touch phone password.
Privacy	You can set the password to protect your privacy.
Fixed dial number	You can set the fixed dial number.
Blacklist	You can set the blacklist.

4. Call settings

Dual-SIM	You can set the Standby mode / SIM name / SIM colour.
Call divert	Call forward unconditional. Call forwarding on busy. Call forwarding on no reply. Divert if unreachable. Cancel all diverts.
Call waiting	Activated / Off / Query status.
Call barring	All outgoing calls. All incoming calls. Incoming calls when roaming. ISD calling. Dial when INTL roaming. Cancel all barring. Change password.
Select line	You can choose Line 1 or Line 2.

Others	IP shortcut key. Call time minute reminder. Auto redial. Vibration when connected. Reply SMS after reject. Auto record voice call.
--------	---

5. Connections

Network account	Set the network account.
GPRS service	Select connected or disconnected.
Data connection settings	Connect when needed / Always connect.
Network selection	Auto select / Manual select.

Main menu style

From the home screen, tap **Main menu** to select the **Main menu style** icon to set to Maxtrix menu to slide menu screen up or down, or to U menu to slide menu screen to the left or to the right.



Camera

From the home screen, tap **Main menu** to select the **Camera** icon to take photos.



DV

From the home screen, tap **Main menu** to select the **DV** icon to take videos (Only support AVI format).



Profiles

There are Normal / Silent / Indoor / Outdoor to choose from. You can tap  to access options: Add / Delete / Settings. Tap  to return previous menu.



Calendar

From the home screen, tap **Main menu** to select the **Calendar** icon to enter into the calendar menu to see the Year, Month, Day, schedule, new issues etc. You can tap  to access options: Add new schedule / View schedule / All schedule / Clear today's tasks / Clear all / Go to date. Tap  to return previous menu.



Audio Player

From the home screen, tap **Main menu** to select the **Audio** icon to play the audio files in the phone and T-Flash Memory Card. You can tap  to access options: Music list / Set as incoming call ringtone / Display settings / Add to saved play list / Set as alarm ringtone / Add to new play list / Settings / Exit. Tap  to return previous menu.



Video Player

From the home screen, tap **Main menu** to select the **Video** icon to play the video files in the phone and T-Flash Memory Card. You can tap  to access options: Local play list / Internet browse / Local browse / Settings / Set as power on anim / Set as power on anim / Adjust brightness / File attribute / My favourite / Exit. Tap  to return previous menu.

Ebook

From the home screen, tap **Main menu** to select the **Ebook** icon to view the Ebook files in the phone and T-Flash Memory Card. You can tap  to access options: Recent books / Mark / Auto view. Tap  to return previous menu.

File Management

From the home screen, tap **Main Menu** to select **My Files** to manage all files, you can delete/ Send via Bluetooth / Send via MMS / Details / Rename/ Copy/ Cut the files in the phone and T- flash Memory Card. You can tap  to access options: New folder / Search / sort / Mark / Memory status. Tap  to return previous menu.

Bluetooth



From the home screen, tap **Main Menu** to select **Bluetooth** to Bluetooth menu. Tap  to return previous menu.

Bluetooth	Tap it to turn on or turn off Bluetooth.
Bluetooth visibility	Tap it to turn on or turn off Bluetooth visibility.
Paired device	Tap it to pair the phone with other devices.
Device name	Tap it to edit the phone Bluetooth paired name.
Bluetooth file storage	Tap it to choose the Bluetooth files save into phone or Memory card.
Help	Help guide.



Torch

From the home screen, tap **Main Menu** to select **Torch** to turn on or turn off the torch. Tap  to return previous menu.


Image viewer

From the home screen, tap **Main menu** to select the **Image** icon to play the pictures in the phone and T-Flash Memory Card. You can tap  to access options: Set as wallpaper / Delete / Share / Rename / Slide play / Details. Tap  to return previous menu.







FM radio(earphone required (included))

Insert the earphones supplied. From the home screen, tap **Main menu** to select the **FM radio** icon to enter FM radio. You can tap < / > to select the frequency band. You can tap  to access options: Auto search and save / Record / Save / Open speaker / Manual search / Record file list / Storage / Help. Tap  to return previous menu.



Calculator

From the home screen, tap **Main menu** to select the **Calculator** icon, your phone provides a calculator with 4 basic functions to facilitate simple calculations. Tap  to return previous menu.

Sound Recorder

From the home screen, tap **Main menu** to select the **Recorder** icon to take recorder. Tap  to start recording, tap  it again to end recording, then tap  to save record. In the recording play mode, tap  to enter record list. You can tap  to access options: New folder / Search / Sort / Mark / Memory status. Tap  to return previous menu.

Clock

From the home screen, tap **Main menu** to select the **Clock** icon to set up World clock, Alarm clock and stopwatch. You can tap  to access options or tap  to return previous menu.

STK

From the home screen, tap **Main menu** to select the **STK** enter the STK main menu. Here you can use the value-added services provided by your network operator. If your SIM card and network operator do not provide this service, then you will not be able to use this function. For more information please contact your network operator.

INTERNET

Internet, Facebook, Google, Yahoo & Twitter may be very slow to access or unavailable due to the limited speed of 2G network.

Fun & Games

There are some games in the phone, for detailed operation, please view game operation instruction.

WARNING

- CHECK THE APPLIANCE AND CHARGER POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- DO NOT USE IF THE PHONE OR CHARGER IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the unit in a cool, dry place.

BATTERY

- Keep battery away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

