



Power Details: AC Charger Input voltage: 100-240V ~ 50/60Hz, 200mA
Cradle Input Voltage: DC 5V, 500mA
Cradle Output Voltage: DC 5V, 500mA

Accessories: Cradle, Charger, Instruction manual, Lithium-ion Battery 3.7 V d.c.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Easy Use Mobile Phone

 
SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:


- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.

- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

Parts & Function keys

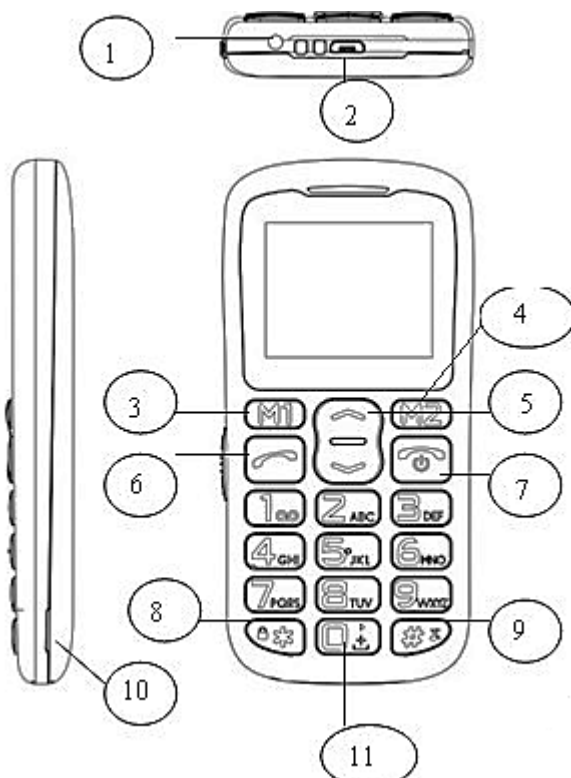

 1. LED light
2. Micro USB port
3. M1 button, in standby mode, press this button to access the main menu.
4. M2 button, in standby mode, press the button to access phonebook.
5. Up/down arrow keys to scroll information.
6. Call button
7. End call /power on/power off
8. * key, in standby mode, long press this key to lock/unlock the keypad, when edit message, press this key to input symbol.
9. # key, long press it change to Silent mode / change input method.
10. Snap joint, please open the battery cover here.
11. 0 key, play music

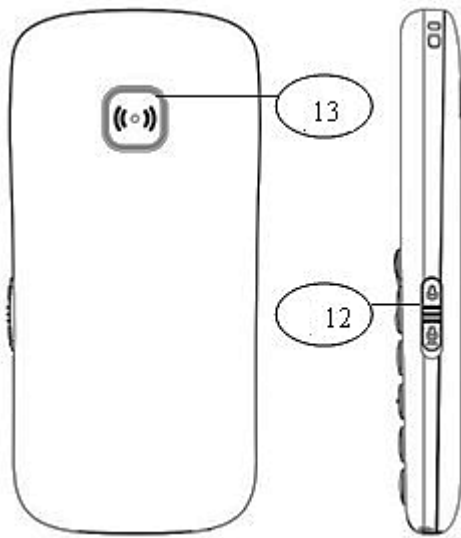


- 12. Torch key
- 13. SOS button

Installation


Installing the SIM Card and battery

1. Remove the battery cover.
2. Insert the T-Flash card by carefully sliding it into the holder.
3. Insert the SIM card by carefully sliding it into the holder. Make sure the SIM card's contacts are facing inwards.
4. Insert the battery by sliding it into the battery compartment.
5. Replace the battery cover.

 1. Remove battery cover

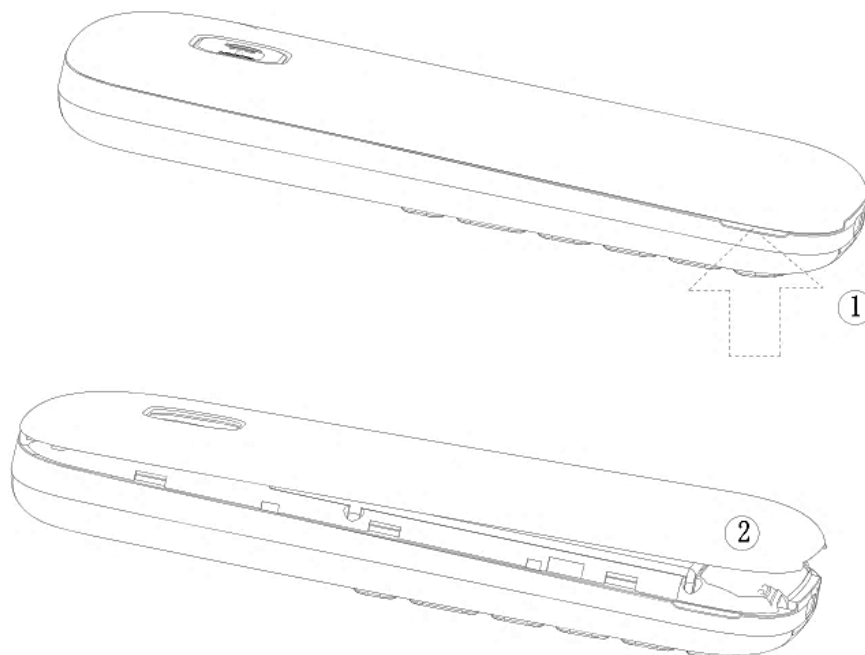



 
2. Uninstall battery

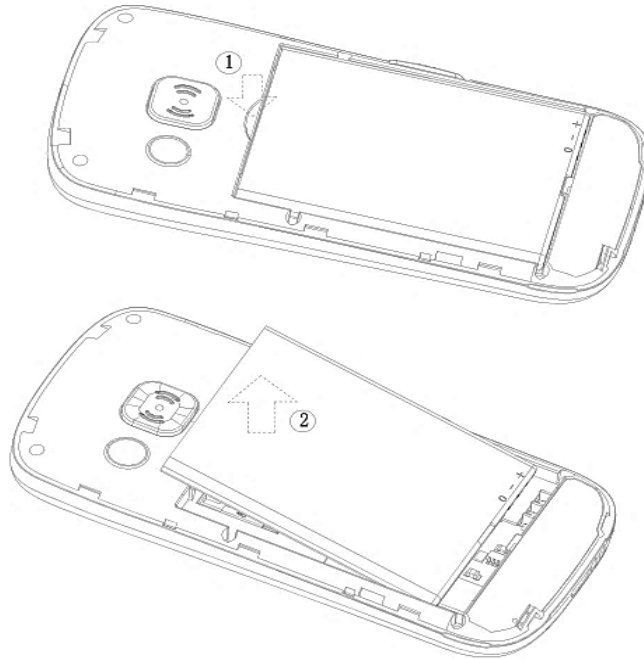


3. Insert TF Card and SIM Card

   Insert TF Card

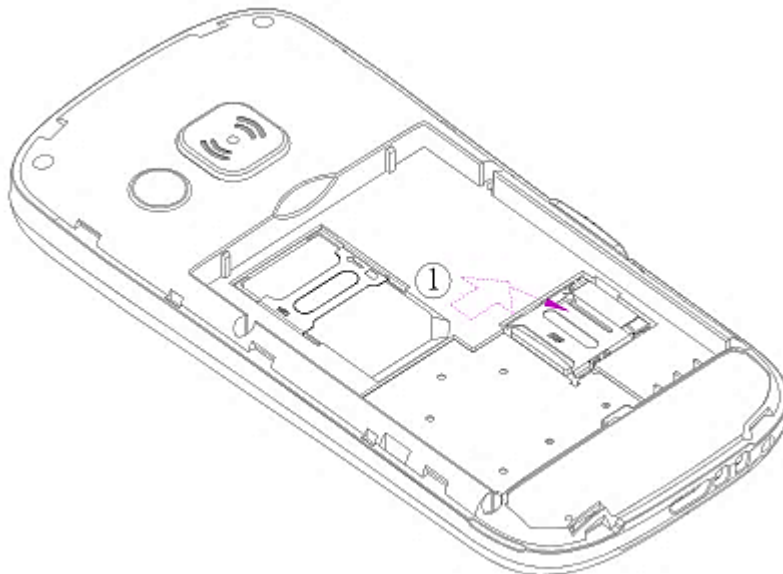


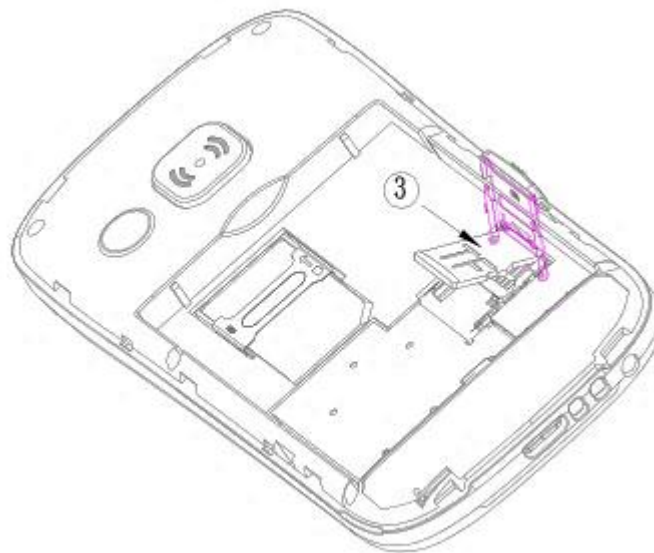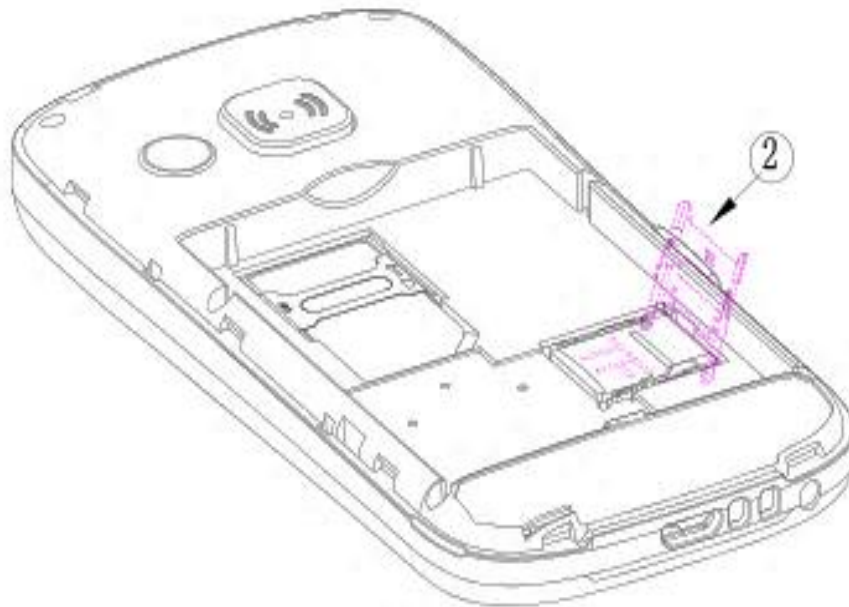

Insert SIM Card

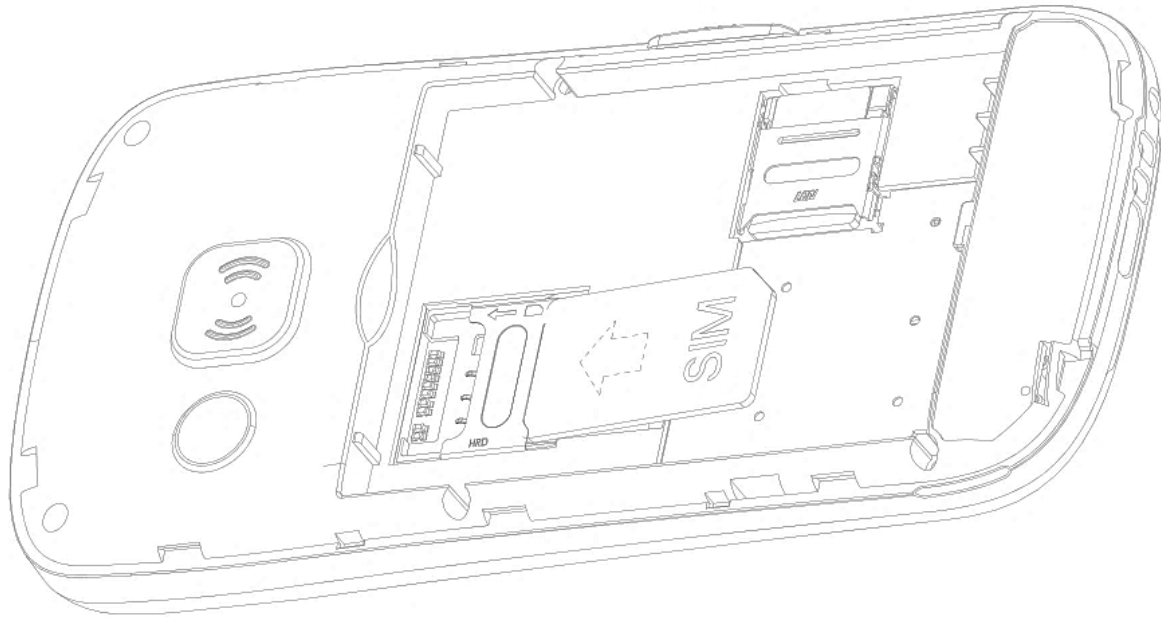 

Install battery

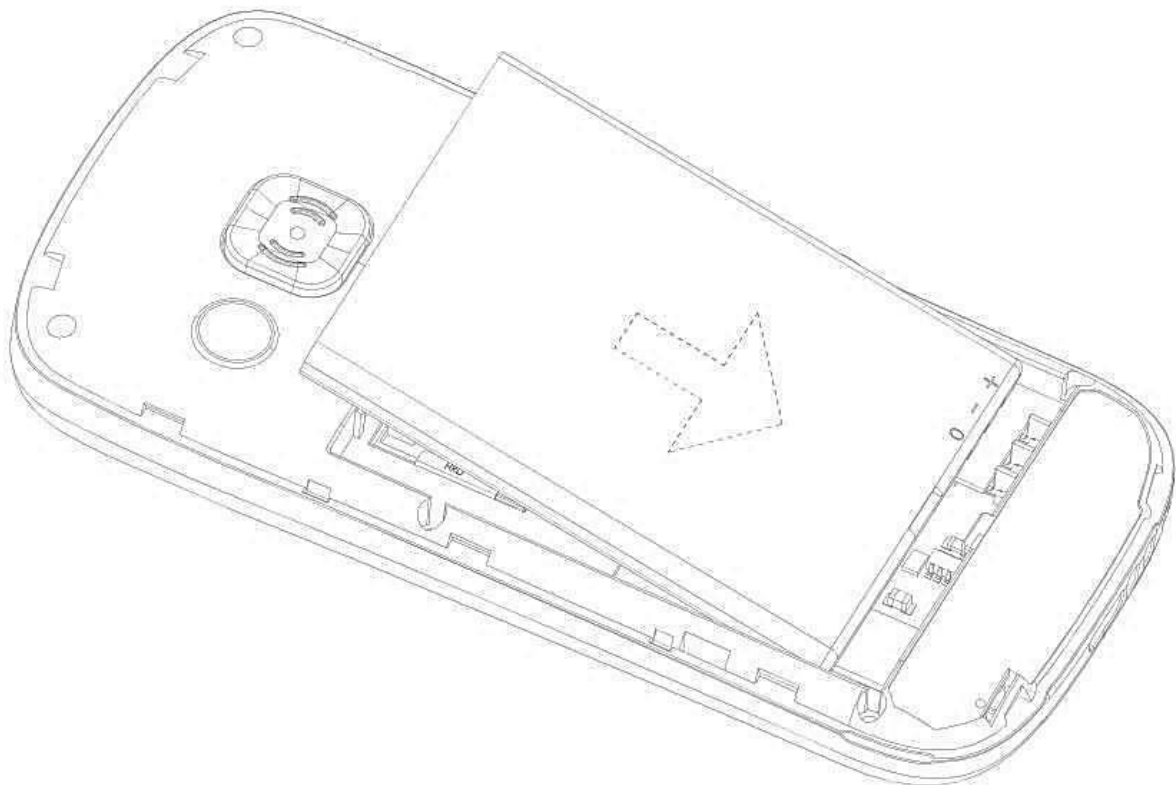 


Phone Operation


Phonebook

Add new contact

1. Press **Menu** until **Phonebook** is displayed, and press **OK**.
2. Select **Add new contact** and press **OK**.
3. Press **Select** to choose **To phone** or **To SIM**.



4. Input Name and number. To change the input method, please press .
5. Press **Options** to **Save** or **Cancel** the contact.

6. Press  return to standby .

Note: Hold  for the international prefix +
Always add + before the country code to make an international call.


Make a call


1. In standby mode, input phone number including the area code, delete with **Clear**.

2. Press  to dial and press  to cancel calling.

Make a call from phonebook

1. In standby mode, press  (Names) to open the phonebook.

2. Use  scroll to view the contacts or quick search by pressing the first letter of the name.

3. Press  to call the selected contacts.

Message

Writing and sending SMS

1. Press **Menu**, until **Message** is displayed and press **OK**.
2. Select **Write message** and press **OK**.
3. Input message.

- Press  to select symbol, press  to change input method.

4. Press **Options** to send message.

Inbox

1. Press **Menu**, until **Message** is displayed and press **OK**.
2. Select **Inbox** and press **OK**.
3. Select a message from the list and press **Options** to view the message.

Other options as below under **Inbox**:

Reply

Input your message and send to the sender.

Call sender

Press Select to call sender.

Forward

Press Select to forward message to other contacts.

Delete

Press Select to delete the message.

Delete same number

Press Select to delete all message from the same number.

Delete all

Delete all received messages.

Save to phonebook

Save the sender's phone number to the phonebook.

Drafts

Here you can see saved messages.

Outbox

1. Press **Menu**, select **Message** and press **OK**.
2. Select **Outbox** and press **OK**.
3. Select a message from the list and press **Options** to **View/Resend/Edit/Delete/Delete all** message.

Sent messages

Here you can check all sent messages.

SMS templates

Here you can **Use or edit** some short message templates.

SMS settings

Here you can check **SIM message setting, memory status, setup preferred storage or save sent message**.

Call center

All received calls, missed calls and outgoing calls are saved in call center.

View call history

1. Press **Menu**, select **Call center** and press **OK**.
2. Select **Call history** and press **OK**.
3. Here you can check call logs as below:
 - Missed calls
 - Dialled calls





Received calls
All calls
Delete call logs

Call settings




1. Press **Menu**, select **Call center** and press **OK**.
2. Select **Call settings** and press **OK**.
3. Here you can Activate or deactivate the functions below:
 - Caller ID
 - Call waiting
 - Call divert
 - Call barring
4. Advanced settings, here you can setup functions below:
 - 4.1 Blacklist**
Press ok to setup blacklist
 - 4.2 Auto call recording**
Press ok to start recording.
 - 4.3 Auto redial**
Press **OK** to select the status **On/Off**.
 - 4.4 Call time display**
Press **OK** to select the status **On/Off**.
 - 4.5 Call time reminder**
Press **OK** to select **Off/Single/Periodic**.
 - 4.6 Answer mode**
Press **OK** to select **Any key** or **Auto answer when headset mode**.

Organizer

Alarm

1. Press Menu, select **Organizer**, select **Alarm** and press **OK**.
2. Press Edit to select status on/off. Press   &   to change the status on/off .
3. Enter the time directly by keypad.
4. Scroll to select repeat times and Alert type.
5. Press **Save** to activate the alarm, to cancel press **Back**.
6. To edit the alarm, press **Edit**, to stop it, press **Off**.

Calculator

1. Press Menu select **Organizer**, press **OK** to select **Calculator**.
2. Enter the first number and use   to enter decimal point.
3. Use  to select (+ - * ÷) and press **OK**.
Enter the next number and press **OK**. The result is shown on the screen.

Calendar

1. Press **Menu**, select **Organizer**, press **OK** to select **Calendar**.
Today's day and date is shown on the display.

2. Press **Options** for the following settings:

2.1 View

Show the event for the selected date.

2.2 View all

View all events

2.3 Add event

- A. Input subject for the event.
- B. Enter a start date and time for the event.
- C. Enter the end date and time for the event.
- D. Enter subject for the event.
- E. Activate Alarm and repeat times for the event.
- F. Enter location for the event.
- G. Save the event.

2.4 Delete event

Delete the selected event.

2.5 Jump to date

Enter the date and press OK.

2.6 Go to today

Select to go to the date of today.

2.7 Go to weekly view

Display current week.

Bluetooth

1. Press Menu, select **Organizer**, press **OK** to select Bluetooth.
2. Function on/off: Select **on/off** to enable/disable Bluetooth.
3. **Visibility**: Select **on/off** to make the phone visible /invisible to other devices.
4. **My device**: Saved device name and allow you to add new devices.
5. **Search audio device**: Search for available audio devices.
6. **My name**: Name for current device.
7. **Advanced**: Press **OK** to set if power on Bluetooth first

File manager

Here you can View all your files on the Memory card and on the phone, also you can format your memory card.

Sim Toolkit

Support SIM cards which are equipped with value added services (set of commands programmed in the SIM card to interact with other media set by service provider). If your SIM card and network operator do not provide this service, you will not be able to use this function. For more information please contact your network operator.

Multimedia


FM radio


1. Press Menu, select **Multimedia**, press **OK** to select FM radio.
2. Press Options to view Channel list.
3. Select Manual input to specify your preferred channel.

4. Select Auto search to search your local radio channel.
5. Select settings to set up background play.

6. Press  to play or stop.

Audio player

1. Please download music to the phone or memory card first.
2. Press **Menu**, select **Multimedia**, press OK to select **Audio player**.
3. Select a preferred music and press  to play or stop it.

4. Press  to select the last song or the next song.

5. To control the volume, please press  .

6. Press  back to standby mode.

Sound recorder

Make a new recording

1. Press **Menu**, select **Multimedia**, press **OK** to select sound recorder.
2. Select **New record** to make a new recording.
3. Enter into **List** to view all records.
4. Enter into Settings to setup storage location and audio quality.

Image viewer

1. Press **Menu**, select **Multimedia**, press **OK** to select Image viewer
2. Press **ok** to view images on memory card or on the phone.

Settings

SOS setting

1. Press Menu and select **Settings** .
2. Select **SOS settings** and press **OK**.
3. Scroll to **Status** and setup SOS status on/off.
4. Scroll to **SOS Numbers** to setup SOS number, you can specify 5 numbers.
5. Scroll to **SOS SMS on/off** to choose send SOS SMS or not.
6. Enter into SOS SMS to edit message.
7. Enter into warning tone to control the tone status on or off.

Make an SOS call

Before you make an SOS call, please ensure SOS status is ON and you have completed SOS settings.

Hold **SOS** button, the phone will auto send SOS messages to the five SOS numbers and then call five

SOS numbers one after another. The siren sound continues until the call is answered.

Phone settings

1. Press menu scroll to **Settings**.
2. Select **Phone settings** and press **OK**.

Then you can setup as below:

Setup Time and date

1. Select **Set home city** and choose your local city.
 2. Select **Time and date** and press **OK**.
 3. Select **Set time/date** and press **OK**.
- Enter Time and date and press **Save**.

Setup Language

1. Select Language and press **OK**.




2. Use  scroll to select the **Language** from the list and press **OK**.

Setup input method

1. Select **Pref.input method** and press **OK**.



- Use  scroll to select an input method from the list and press **OK**.

Change the wallpaper

1. Select **Display**, select wallpaper.
2. Here you can choose a wallpaper from the phone and memory card.
3. LCD backlight: Setup level and time.
4. Show date and time: Setup show date and time on display
5. Show Operator name: Setup network carrier name on display.

Profiles

1. Press **Menu** scroll to **Settings**.
2. Select **Profiles** and press **OK**. The four modes are as below:
 - General
 - Silent
 - Meeting
 - Outdoor

Customise function in **General mode**

Choose your preferred Power on/off ringtones, incoming call ringtones etc.


1. Press **Menu** scroll to **Settings**.
2. Select **Profiles** and press **OK**. Select **General** and press **Option**.

3. Select **Customise** and press **Select**.
4. Scroll to **Alert type** and press **Options** to select **Ring only**, then press **Options** and select **Change**.

You can choose **Ring only**, **Vib. only**, **Vib. and ring** or **Vib. then ring**. Press **OK** to save.


5. Scroll to **Ringtone** and press **Options** and select **Change** to choose preferred ringtone.



6. Scroll to **Ringtone volume** and press **Option** and select **Change**, Use  to adjust volume, press **OK** to save.

7. Scroll to **Message** and press **Option** to select a preferred ringtone for message.



8. Scroll to **Message volume** and press **Option** and select **Change**, use  to adjust volume, press **OK** to save.

9. The same way to setup other options in **General** mode such as keypad tone, keypad volume, repeat mode, power on/off tone, system alert on/off etc.

10. You can follow the instruction of customise function in General mode to set up other modes like Silent, Meeting & Outdoor.

Speed dial

M1, M2 and the numerical keys 2-9 can be used for speed dial keys. Press and hold the speed dial keys to make the call.

Add speed dial number and Activate the status

Add M1, M2 speed dial numbers:

1. Press **Menu** scroll to **Settings**.
 2. Select **Speed dial** and press **OK**.
 3. Enter into **M1/M2 key** to activate the status.
 4. Select **Set numbers** to choose numbers for M1 and M2 keys from phonebook.
- Proceed as described to add speed dial number for keys 2-9.

Block function

Some functions can be disabled to simplify the use of the phone.

1. Press **Menu** scroll to **Settings** and press **OK**.
2. Select **Block Function** and press **OK**.

Scroll to choose the function(s) you want to disable and press **Done** and **Save**.

Key Shortcuts

Here you can set shortcuts for up key and down key.

1. Press **Menu** scroll to **Settings**.
2. Select **Key Shortcuts** and press **OK**.
3. Choose Up key / Down key and press **Edit** to determine which function you like to be relevant key shortcut, then press **OK** to save.

Network settings

Here you can choose to show network provider automatically or manually.

Security settings

Select security settings for SIM card or phone, and change the status of screen auto lock.

1. Press **Menu** to **Settings** then press **OK**

2. Scroll to **security settings** and press **OK**. Then you can see sub-menus below:

A. SIM security

Set PIN lock status on or off.

Change PIN code

B. Phone security

Set Phone lock status on/off.

Change password

C. Screen auto lock

Press **OK** to select **off/15 secs/30 secs/1 min/5 mins** for screen auto lock.

Restore settings

Press **OK** and input password (0000) to reset your phone to the default.

WARNING

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the unit in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.

- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

