

Important Safety Instructions

- Your Snappy Scissors are a very sharp cutting instrument and should be handled with care.
- Your Snappy Scissors should only be used as a cutting tool.
- Improper use can cause serious injury.
- Keep this product away from children.
- Contact with the blade may cause injury. Make sure to keep the blade away from your body and fingers.
- NEVER use for ice picking, chiselling, prying or anything other than its intended use.
- Always store the blade clean and dry.
- NEVER use a power grinding wheel to sharpen your Snappy Scissors, this can ruin the hardness of the blade.
- NEVER expose your Snappy Scissors to extreme heat or fire.
- NEVER clean the Snappy Scissors in corrosive substances.
- Discontinue use immediately if the blade is dull or the product is damaged in any way.

Using the Snappy Scissors



Slide the food in between the blade and cutting board. The easiest way to slide is to place the food closest to the pivot point.

NEVER attempt to cut food that is larger than the opening of the Snappy Scissors.



Squeeze the handle firmly to chop. Applying firm pressure towards the end of your cut for best performance. The power pressure handle will automatically open for quicker easier slicing.

Be sure to keep your hands/fingers clear of the blade during use.



Place a bowl or plate underneath.



Use tongs of a fork to hold smaller pieces of food while cutting to ensure you hands/fingers are clear of the blade.

Types of foods to easily cut:

Apples, cucumbers, celery, tomatoes, carrots, sweetcorn, cheese, salami, potatoes, onions, bread, chicken, steak.

Safety Lock



Squeeze handle and push the safety lock button up to store the Snappy Scissors in closed position. Always keep it locked when not in use. Press the button down to disengage.

To change the blade:



- Release safety lock button.
- Hold Snappy Scissors with the blade down
- Hold the blade handle at the end and slightly push handle up and pull it out.
- Push wave shaped blade through and push it down.
- Close the handles.
- Push both handles down until they click to lock the blades in place.

CLEANING INSTRUCTIONS:

- Always ensure your Snappy Scissors are closed and the safety lock is engaged when cleaning.
- Your Snappy Scissors can be cleaned by hand or in your dishwasher.
- NOTE: Never wash or store your Snappy Scissors without the safety lock engaged.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.