



Power Details: Micro USB maximum input: DC ===5V/2.1A, 9V/2A, 12V/1.5A
USB maximum output: DC === 5V/2.4A, 9V/2A, 12V/1.5A
Type C maximum input: DC === 5V/2A
Type C maximum output: DC === 5V/2.4A

Accessories: USB cable, Instruction manual

 
Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Power Bank.

SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID..
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- **DO NOT** COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

Buttons and function

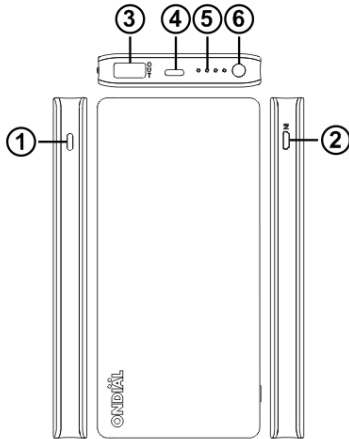


No.	Buttons & Ports	Function
1	Power ON/OFF	Press it to turn on/off the power bank. Press it twice to turn off the power Bank. Press and hold it around 3 seconds to turn on/off the LED flashlight.
2	Micro USB input	To charge power bank.
3	USB port	USB output, charging for external device.
4	Type C port	Intelligent recognition charge/discharge. It can charge the power bank or discharge to other devices.
5	LED Indicators	Indicate battery capacity.
6	LED Flashlight	LED flashlight.


Recharge the power bank

This power bank has a built in DC ---3.7V, 1000mAh lithium rechargeable battery, recharge it before use as follow:

 1. Insert the Micro USB plug from the supplied connection cable to the Micro USB port on the Power Bank. Insert the full size USB plug to the USB port on the computer or any USB charger having DC ---5V, 1000mA (or more than 1000mA) / DC ---9V, 1000mA (or more than 1000mA) / DC ---12V, 1000mA (or more than 1000mA) output as shown in figure below:

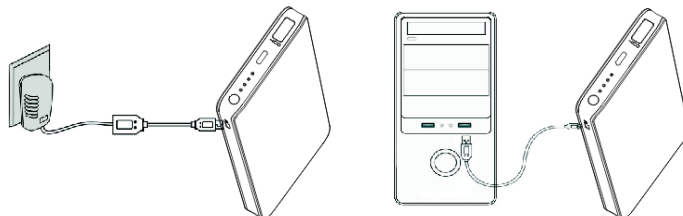

 2. Insert the Type C plug from the connection cable (not included) to the Type C port on the Power Bank. Insert the full size USB plug to the USB port on the computer or any USB charger having DC ---5V, 1000mA (or more than 1000mA) output as the figure below:

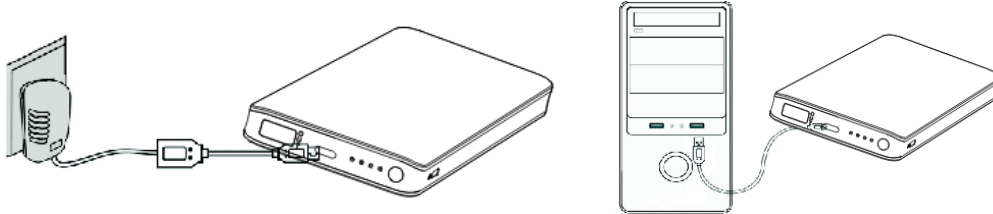

Important:

1. Never connect this unit to any USB charger with output less than 1000mA. Otherwise, both units may get damaged.
2. During recharging, the Power Bank cannot charge the connected external device at the same time.

Notes:

 
The battery will last longer if you follow these simple guidelines for caring for and storing it.

1. For charging first time, charge it at least 12 hours.
2. Recharge and store the battery within the temperature range of 5°C-35°C (40°F-95°F).
3. Do not overcharge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
4. Battery life naturally shortens slowly over time.
5. The rechargeable battery incorporated in this product is not user replaceable.

Battery status

To check the battery power of this unit, press the **Power** button, the LED indicators will be lit.

Full capacity (Four LED indicators lit):



Half capacity (Two LED indicators lit):

 


Empty (No LED indicator lit):




Charging external device

1. Choose the correct connection cable to match the charging port of your external device.
2. Insert the Micro USB plug (or Mini USB plug or Type C plug) to the Micro USB port (or Mini USB port or Type C port) on the external device you want to recharge. Insert the full size USB plug to the power bank USB port.

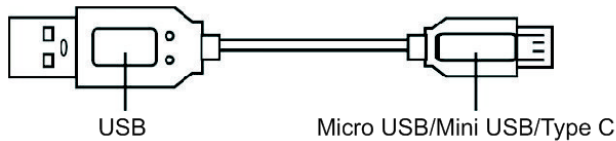

 3. Insert the Type C plug from the connection cable (not included) to the Type C port on the external device you want to recharge. Insert another Type C plug to the power bank Type C port.

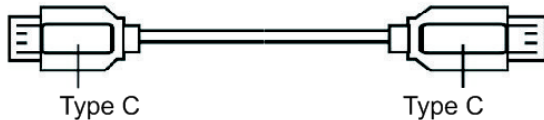

4. Press the **Power** button to start charging the external device.
5. During charging, LED indicators will turn on to show working status and remaining power.
6. Wait until the external unit is fully charged.

The unit has automatic power off function. It will turn off the power when overload charging or overheat is detected.

In this case, disconnect the power bank from the device you are charging. If the Power Bank has overheated, it will need to cool down for around 15-20mins.

Please do not reconnect the device which caused overheat/overload to the power bank as the device might have caused the overheat/overload.

The Power Bank can still be used for other devices after it has cooled down properly.

LED Flashlight

Press the **Power** button and hold it around 3 seconds to turn on the LED flashlight. Press the **Power** button and hold it around 3 seconds again to turn off the LED flashlight.

WARNING

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.

- Allow to dry thoroughly before further use.
- Store the unit in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

