




Power Details: **AC Charger** Input voltage: 100~240V, 50/60Hz, 0.18A
AC Charger Output voltage: DC5V, 1.0A
DC Input voltage (mobile phone): 5V, 1.0A

Accessories: Power adapter, USB cable, Instruction manual

Thank you for purchasing this Coopers Tough Phone. To ensure best performance please ensure the product is fully charged (see icon) before attempting to use.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Tough Phone.

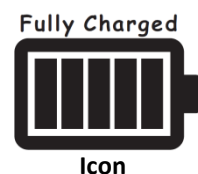

SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMEDIATELY CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

Buttons and function



No.	Buttons	No.	Buttons
1	LCD Screen	11	Unlock(Hold down to unlock the screen)
2	Menu	12	Silent method(Hold down to turn on/off silent mode)
3	Dial key	13	Camera
4	Back	14	Battery cover
5	End call key/Power on/Power off	15	Loudspeaker
6	Left	16	Torch key(Turn on/off the torch).
7	Right	17	Torch
8	Up	18	Microphone
9	Down	19	USB output(5V, 1A)
10	OK	20	Micro USB charging socket

Installation

1. SIM Card Installation

- 1) This phone supports dual SIM card dual standby. Please insert the SIM card into the SIM card slot, ensuring the SIM card's contacts are facing inwards.

*** Important: Please turn off the phone and disconnect the charger before removing the battery cover to insert SIM cards.**



2) Before taking out the SIM card, please turn off the phone first.

*** Caution: Please don't bend or scratch the SIM card. Avoid exposing your SIM card to static electricity, water or dirt.**

2. T-Flash Card Installation

1) This phone support max. 16GB T-Flash card. Insert the T-Flash card into the TF card slot ensuring the contacts are facing downwards, take care and please do not scratch or bend the contacts on the card. For positioning check picture below:



2) T-Flash card is used as phone storage, you can use your phone to browse the MP3, video or pictures on the T-Flash card. When the phone is connected with a computer via USB cable(supplied), you can copy or store files onto a T-Flash card. You can also cut or delete files from the T-Flash card.

*** Important: This phone does not support hot-plug. Please turn off the phone and disconnect the charger before inserting a T-Flash card. After you inserted the T-Flash card, turn on the phone and the T-Flash card will be an extra phone storage.**

3. Battery Installation

1) Remove the phone back cover, insert the 3600mAh battery(included) into the battery compartment correctly, then replace the phone back cover.



2) For the first time use, please charge for 8 hours to achieve the best state of battery.

3) Connect the adapter and phone to charge, the battery power icon in the upper right corner of the screen will start scrolling, when the battery bar stops scrolling, the battery charge is complete.

USB connection and Storage Management

1. USB connection

When you connect the phone with a computer via the USB cable(included), the phone screen will display **"Mass storage"** or **"COM port"**. If you select **"Mass storage"**, the phone acts as removable storage. The **"COM port"** is only for the engineer/manufacturer to use, the end user cannot use it.

2. Phone storage

This is the internal storage which contains the preinstalled apps and software. You cannot install extra apps or software on the phone.

3. T-Flash Card storage

You can use the T-Flash card as a removable storage to store and access your media and other files on the phone. When you connect the phone with a computer via the USB cable(included) and select **"Mass storage"**, you can cut or delete the files from the T-Flash card.

Phone calls and contact

1. Search

You can speed search for a contact by entering the initial letter.

2. Add new contact

You can add a new contact to the SIM card or phone, press **OK** to confirm.

- 1) Press **Menu** to select **Phonebook** and press **OK**.
- 2) Select **Add new contact** and press **Options** or **OK**.
- 3) Press **Select** to choose **To SIM 1, To SIM 2 or To phone**.
- 4) Enter name and telephone number, then press **OK** to confirm. Press **Options** to Edit/Save/Cancel the contact.

3. Making a Call

You can either dial a number directly or search or call a stored contact or a number from your call history to quickly place a call.

4. Returning a missed call

You can press **Dial key** to see missed calls and return a call.

5. Answering/ Rejecting / Ending a Call

When you receive a call, the Phone will ring or vibrate and will display an incoming call indicator. You can press the **Dial key** to answer the call or press the **End call key** to reject an incoming call or end current call.

6. Making an emergency call

You can make emergency calls without SIM card to contact your service provider. But if you don't have a network signal, you won't be able to make an emergency call.

7. Call history menu

In the call history menu, you can check dialled calls, received calls, missed calls.

Message

1. Sending a text message(SMS)

Press **Menu** to select **Messaging** and press **OK**. Then select **Write message** and press **OK** to edit and send a message.

2. Replying to a message

Press **Menu** to select **Messaging** and press **OK**. Then select **Inbox** and message, press **Options** to reply the message.

3. Forwarding a message

Press **Menu** to select **Messaging** and press **OK**. Then select **Inbox** and message, press **Options** to forward the message to other contacts.

4. Deleting messages

Press **Menu** to select **Messaging** and press **OK**. Then select **Inbox** and message, press **Options** to delete the message. You can choose to delete a message or all messages.

Call center

1. Press **Menu** to select **Call center** and press **OK**. Then select **Call history** and press **OK**, Missed calls, Dialed calls, Received calls, All calls, Delete call history are saved in **Call history**.
2. Press **Menu** to select **Call center** and press **OK**. Then select **Call settings** and press **OK**, you can set up the call setting and answer mode.

Phonebook

Press **Menu** to select **Phonebook** select **Add new contact**, then select **Phonebook settings**.

1. Extra numbers: to set up the Fixed dial.
2. Memory status: to check how many contacts are on the SIM card and the phone(max. 100).
3. Copy contacts: you can copy the contacts to the SIM card or to the phone.
4. Move contacts: you can move the contacts to the SIM card or the phone.
5. Delete all contacts: you can delete all the contacts from the SIM card or the phone.

In the phonebook, you can check the contact persons, send SMS, make a call, edit, delete and copy contacts.

Settings

Press **Menu** to select **Settings** and press **OK** to set up your phone.

1. Profiles

There are four modes to choose from: General / Silent / Meeting / Outdoor. You can press **Options** to Activate / Customize / Reset.

2. Phone settings

Time & date	Set home city: You can select a city from the list. Set time/date: Set-up the time and date. Set format: There are DD MM YYYY/ MM DD YYYY / YYYY MM DD to choose from.
Language settings	There are English / Francais / Espanol / Portugues to choose from.
Pref. input method	There are ABC/ abc / ES / es / FR / fr / PT / pt / Numeric to choose from.
Display	Wallpaper: You can set up the wallpaper. Screen auto lock: There are Off / 15 secs / 30 secs / 1 min / 5 mins to choose from. Power on display: You can set up the power on display. Power off display: You can set up the power off display. Show date and time: You can choose show on/off the date and time on the display.
Shortcuts	You can set shortcuts for the phone.
Dedicated keys	You can set the dedicated keys.
Misc. settings	LCD backlight: You can press Left/Right key to adjust the brightness. Picture quality: There are on/off to choose from.

3. Security settings

SIM 1 security	You can lock and change the SIM 1 card PIN.
SIM 2 security	You can lock and change the SIM 2 card PIN.
Phone locked	You can lock the phone and change the phone password. The default phone password is 1122.

4. Network settings

You can set up the SIM card network.

5. Dual SIM settings

There are single or dual SIM card standby to choose from.

6. Connectivity

Data accounts.

7. Restore settings

You can restore phone settings, the default password is "1122". All settings and information will be lost and once you restore factory settings.

Multimedia

1. Camera

Press **Menu** to select **Multimedia** and select **Camera** to take photos. Press **Options** to access options:

Switch to video recorder/ Photos / Camera settings / Image settings / Storage. Press **Back** to return to previous menu.

2. Image Viewer

Press **Menu** to select **Multimedia** and select **Image Viewer** to view photos. Press **Options** to access options: View/ Send / Use as / Rename / Delete / Storage / Image information. Press **Back** to return to previous menu.

3. Video recorder

Press **Menu** to select **Multimedia** and select **Video recorder** to take videos. Press **Options** to access options: Switch to camera/ Camcorder settings / Video settings / Storage. Press **Back** to return to previous menu.

4. Video player

Press **Menu** to select **Multimedia** and select **Video player** to view a video. Press **Options** to access options: Play/ Send / Rename / Delete / Delete/ Storage. Press **Back** to return previous menu.

5. Audio player

Press **Menu** to select **Multimedia** and select **Audio player** to play audios. You can press **List** to select the audio. Press **Options** to access options: Play/ Details / Refresh list/ Settings. Press **Back** to return to previous menu.

6. Sound recorder

Press **Menu** to select **Multimedia** and select **Sound recorder** to record. Press **Options** to access options: New record/ List / Settings. Press **Back** to return to previous menu.

7. FM radio

Press **Menu** to select **Multimedia** and select **FM radio** to enter FM radio. You can tap < / > to select the frequency band. Press **Options** to access options: Channel list/ Manual input / Auto search / Settings. Press **Back** to return to previous menu.

File Management

Press **Menu** to select **File manager** and press **OK** to enter file management. Press **Options** to access options: Phone: Open / Format, Memory card: Open / Format / Details. Press **Back** to return to previous menu.

Organizer

Press **Menu** to select **Organizer** and press **OK** to enter organizer.

Browser	Browser.
Whatsapp	Apps.
Facebook	Facebook.
Yahoo	Yahoo.
Power Bank	Press OK to turn on/off the power bank function.
Bluetooth	Power: Press OK to turn on/off the Bluetooth. Visibility: Press OK to turn on/off the Bluetooth visibility. My device: Press OK to search new device. My name: Press OK to edit the phone Bluetooth device name(The default Bluetooth name is "10780", the default password is "0000"). Press Options to access options: Done / Cancel / Input method.
Alarm	Alarm clock. Press Edit to edit the alarm clock. Press Back to return to previous

	menu.
Calculator	Calculator.
Calendar	Calendar. Press Options to access options: Jump to date / go to today. Press Back to return to previous menu.
Ebook reader	View the Ebook files in the phone and T-Flash card. Press Options to access options: Open ebook / Global settings / Book info / Delete / Help. Press Back to return to previous menu.

Fun & Games

Press **Menu** to select **Fun** and press **OK** to enter games. The phone has some games pre-installed, for detailed operation, please view game operation instruction.

Services

Press **Menu** to select **Services** and press **OK** to enter services. Here you can use the value-added services provided by your network operator. If your SIM card and network operator do not provide this service, then you will not be able to use this function. For more information please contact your network operator.

WARNING

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the unit in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

