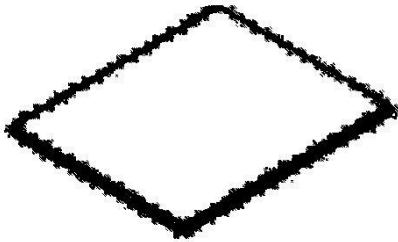
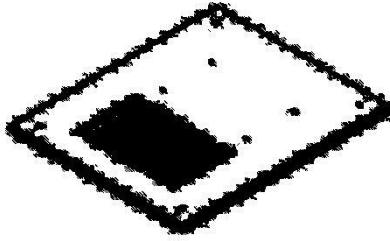
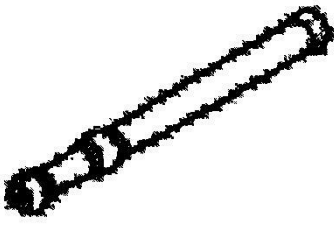
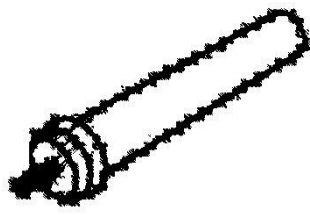
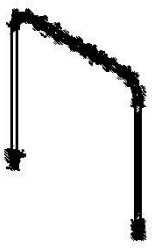



WOODEN MUSIC CENTRE STAND WITH METAL BARS FOR VINYL RECORD STORAGE

**Maximum load: up to 53kg top shelf  
up to 59kg bottom shelf**

REF.	DESCRIPTION	QTY
A	 <p>TOP PANEL</p>	1
B	 <p>BOTTOM PANEL</p>	1
C	 <p>TOP LEGS</p>	4
D	 <p>BOTTOM LEGS</p>	4
E	 <p>METAL BARS</p>	2


## STEP 1

Screw the 4 top legs C into the rear side of the top panel A as shown.

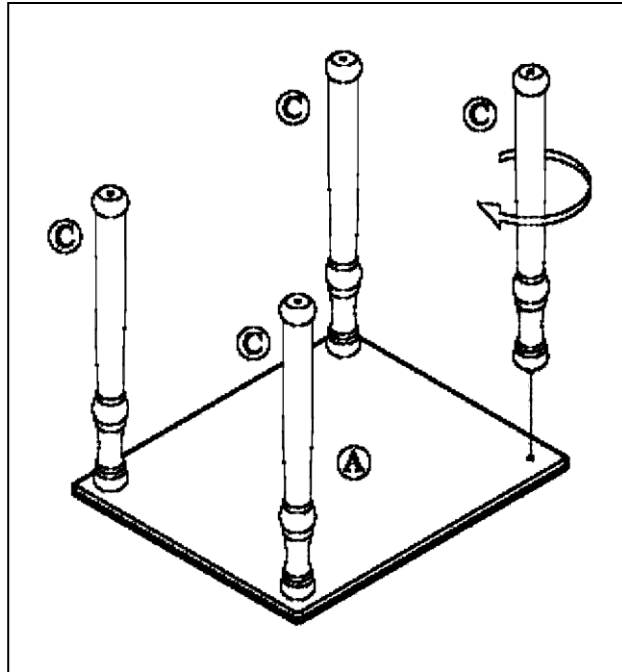


## STEP 2

Place the bottom panel B upside down as shown onto the 4 top legs C, then screw fit the 4 boom legs D through the bottom panel and into the top legs.

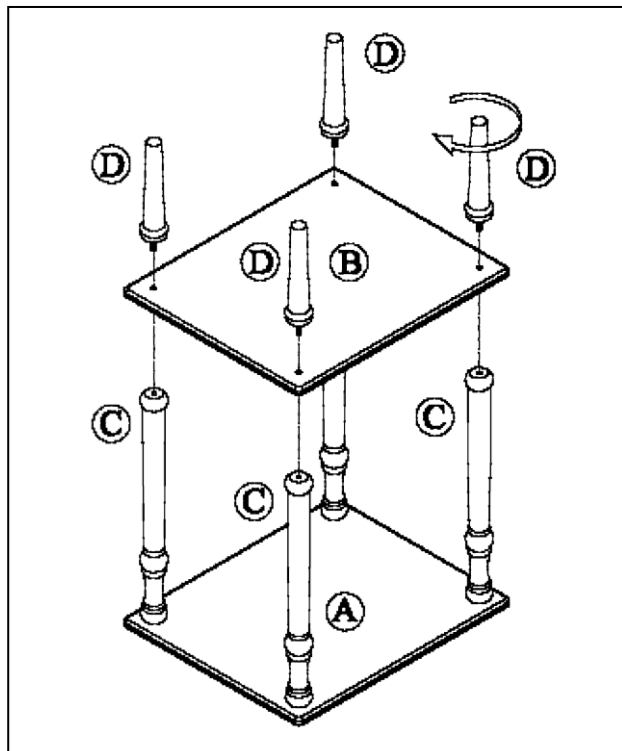


## STEP 3

Push fit the 2 metal bars E into the 4 holes in the bottom panel B as shown.

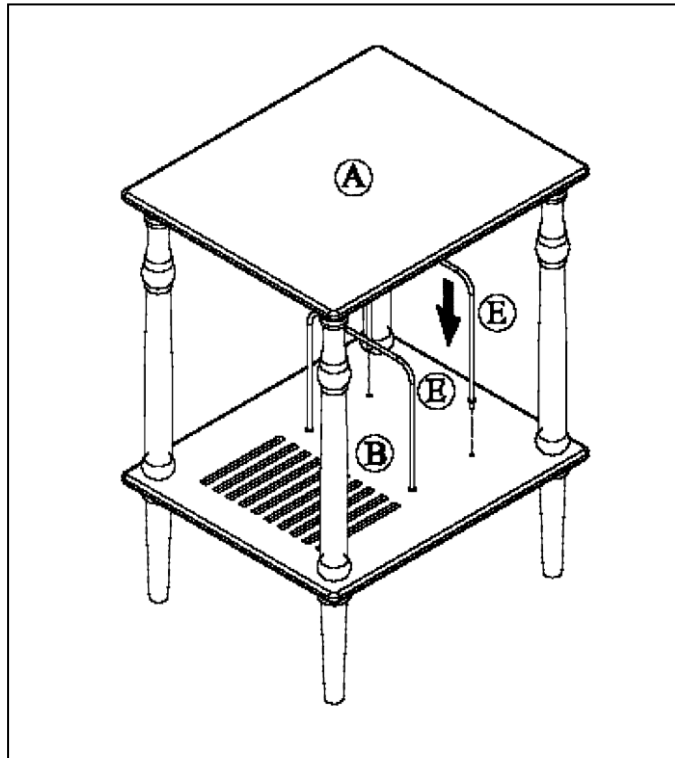

## STEP 4

Ensure all parts are tightened and secure and turn the music centre stand the right way up as shown and locate on a flat and even surface.

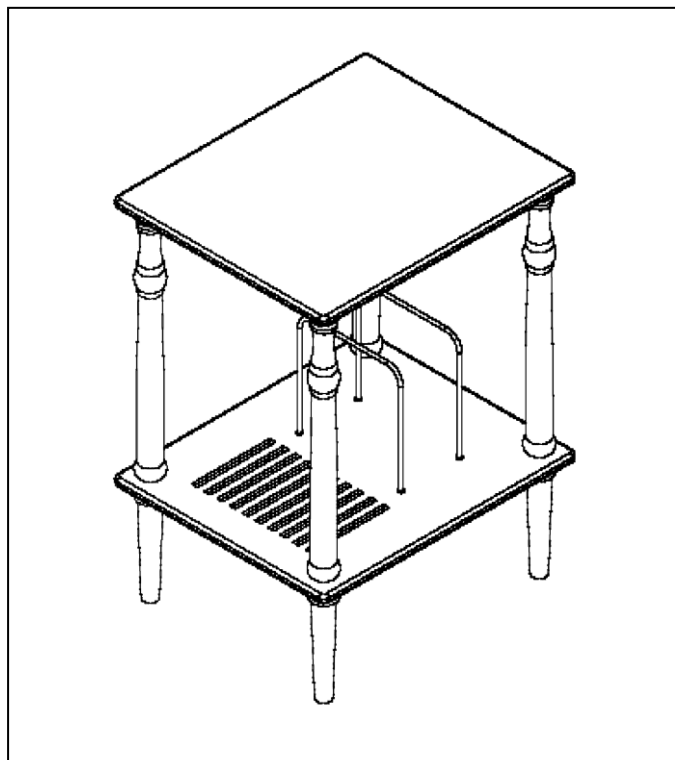

## CARE AND CLEANING INSTRUCTIONS

- Ensure the music centre stand is stable on a flat surface.
- Wipe surfaces with a soft dry cloth.
- Keep away from sources of heat and flames.
- Regularly check all parts are secure and not damaged.

## DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.