



## USER INSTRUCTIONS:

### Matching

Switch on the receiver and slide to change from OFF to ON (key tag). It will beep continuously. Push button as indicated by "Press" on the side of the card, the receiver will emit a short beep once and will then stop beeping which means the receiver (key tag) and card are matched. Please push the button again if they are not matched at the first attempt.

### Operation

Fit your keys to the matched key tag and put the card into your wallet or handbag. When you can't find your keys, just push the button on the side of the card, the key tag will beep for 5 seconds then stop automatically. You can push it again and again until you find the lost keys.

### Change battery

**1x CR-2032 and 2x CR-2016 batteries are included.**

1. **Receiver:** When the receiver sounds a low and strange beeping, it means the battery is low. Insert a new CR-2032 button battery. Observe polarity, the "-" face down to the PCB board.
2. **Card:** When you push the card's button, but the receiver shows no reaction, and you can't see a red light at the hole on the the card's back, then battery power is insufficient. Pull out the battery drawer at the other side of the card, change the battery with 2 pcs of CR-2016 battery, and make sure both the 2 pcs "+" face the back of the card.

### Troubleshooting

*My key finder cannot be matched*

Your card's battery may not have enough power, make sure the card's red LED is on when you are pushing the card's button, and match the receiver (key tag) with the card at 0.5 metre distance.

*My key tag beeps continuously*

The key tag will beep continuously before it is matched. The key tag will beep continuously, if you keep pushing the card, so please don't push the card after you find the keys. It will stop beeping automatically 5 seconds later.

*I pushed the button on the card, and the LED is working, why I can't find the keys?*

The keys may not be in this room, please try other rooms. And make sure it is matched before you use it.

*My key tag is beeping very strange, why?*

It may be lacking power, please change the battery.

## Remarks:

Never push the button while on an aircraft.

Most problems arise due to insufficient/flat battery. Check batteries regularly.

## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

