



## USER INSTRUCTIONS:

1. Remove the top by twisting Microwave Madge's hair clockwise and pull up the head completely.
2. Fill Microwave Madge with a mixture of vinegar and water. The markers for levels of vinegar and water to be used are on the outside of the body. Replace the top and twist to lock in place.
3. Microwave for 5-8 minutes on a high setting. After about 2 minutes steam will start to blast out.
4. Remove Microwave Madge from the microwave holding it by the elbows/handles only.
5. Wipe down any food stains or residue in the microwave with a sponge, napkin or cloth.

## WARNINGS / CAUTIONS:

- Take care when removing Microwave Madge from the microwave oven to prevent hot steam or liquid burning you.

## CLEANING INSTRUCTIONS:

- Dishwasher safe.

## DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.