

## TECHNICAL DETAILS:

VOLTAGE: 7.2V A.C.  
(Battery)  
220-240V A.C.  
(Charger)  
POWER FREQUENCY: 50/60Hz



## Safety Precautions


Make sure to completely read and understand all of the following safety instructions and warnings in this booklet & on the battery charger, prior to using swivel sweeper.

- Make sure the swivel sweeper is securely assembled before use.
- Never use the swivel sweeper to clean up liquids or wet messes. Especially do not use on flammable or combustible liquids.
- The swivel sweeper contains a rechargeable 7.2V (Ni-MH (Nickel-Metal-Hydride) battery. Always dispose of battery properly.
- Keep fingers, hair, all other body parts and clothing away from the rotating cleaning brushes.
- Do NOT use to clean up any burning or lighted materials such as cigarettes, matches and ashes.
- Do NOT use on coarse, concrete surfaces.
- Do NOT use outdoors: patios, decks or rough surfaces.
- Mechanical parts are not user serviceable. Contact a qualified professional for service.
- Make sure the swivel sweeper is turned off and that the battery is removed, before cleaning its rotating brushes of hair, debris, etc.
- Do NOT handle or charge battery when hands are wet.
- Only use the included charger to charge battery.
- Store indoors in a dry, safe place.

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD

\*Calls cost 7 pence per minute plus your  
telephone company's network access charge

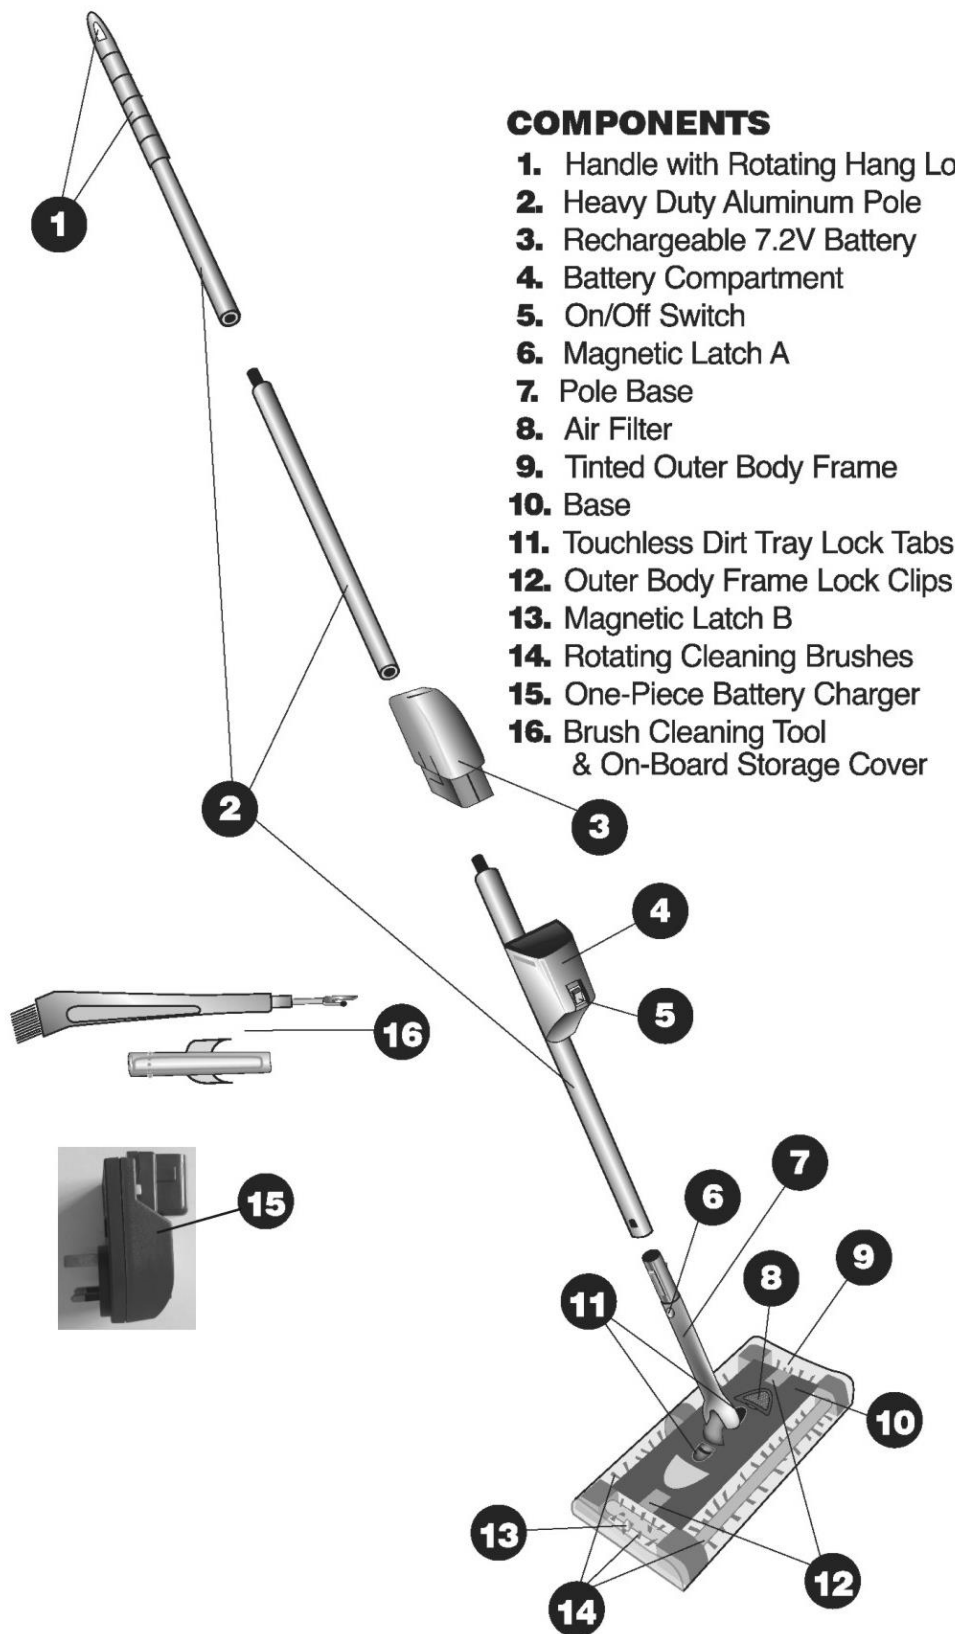


# Green Swivel Sweeper 10940

# Instructions for Use

Please read and retain these instructions for future reference

v001: 01/08/17


To assemble the swivel sweeper:

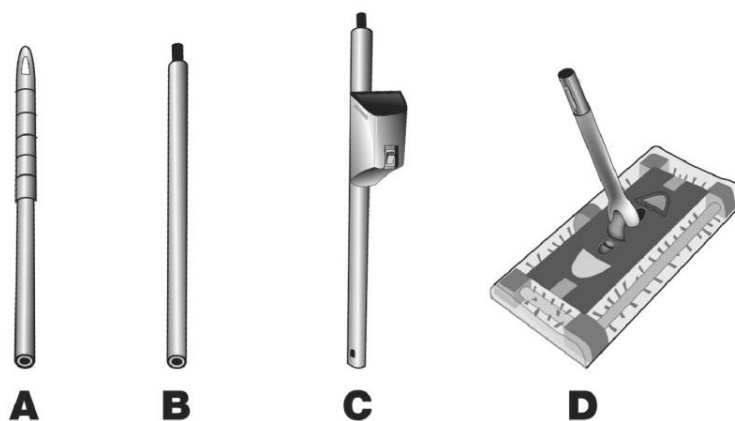


Step 1)  
Screw Pole A  
onto Pole B until  
secure.



Step 2)  
Screw Pole B  
onto Pole C  
until secure.

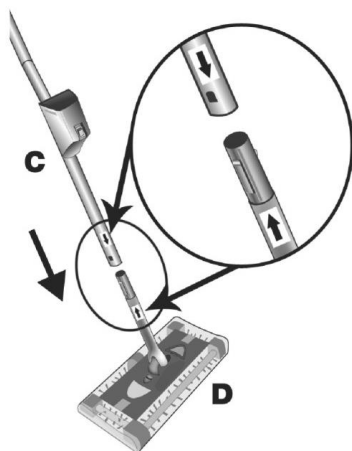

Step 3)  
Align the arrow on Pole C  
with the arrow on sweeper  
head D. When arrows are  
aligned, pole will easily  
slide onto sweeper head.  
Then push firmly together  
until pole locks into place.

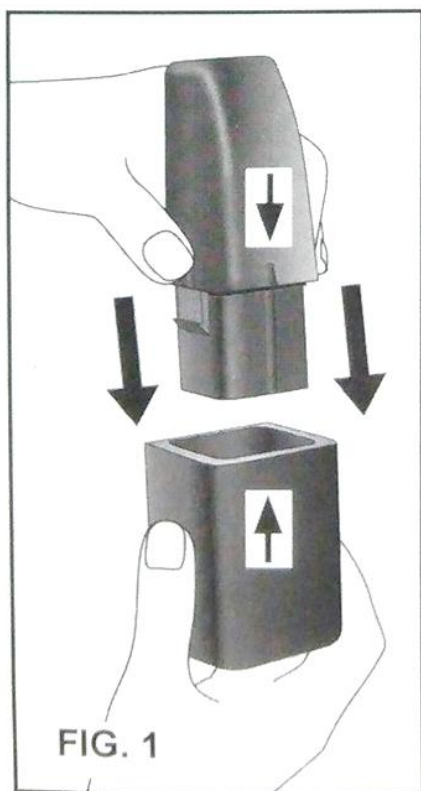

## Charging the battery

Step 1) Plug the battery charger into a standard electrical outlet as below:

BS 220V-240V – 50/60Hz

Step 2) Align the arrow on the rechargeable battery with the arrow on the battery charger. Then, insert the rechargeable battery down into the battery charger (See Fig. 1). NOTE: Red light on the front of the battery charger should turn on to indicate that the battery is charging.

Once complete, the light will turn off, indicating the battery is fully charged.

**IMPORTANT:** For initial battery charge, let battery charge for at least 8 full hours. When recharging, charge time will vary dependent upon the amount of power that is left in the battery after last use. Recommended recharging time for the battery after completely depleting it is 6-8 hours. Battery may be left in charger for extended periods of time but do NOT exceed 12 consecutive hours. Doing so may lead to shortened overall battery life. It is not necessary to wait until battery power is fully depleted before recharging.

## Using the Swivel Sweeper


Step 1) Make sure the swivel sweeper is turned off.

(NOTE: The ON/OFF switch is located on the front of the battery compartment.

Step 2) Make sure the Touchless dirt tray is empty (see directions under EMPTYING THE TOUCHLESS DIRT TRAY).

Step 3) Insert the rechargeable battery down into the battery compartment located on the front of the pole until it locks into place (see Fig. 2).

Step 4) Turn the swivel sweeper on to begin cleaning.

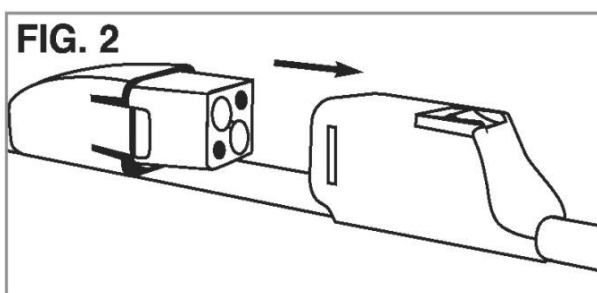

Step 5) When you are done cleaning, turn it off and empty the contents of the touchless dirt tray into a bin.

Recharge the battery if necessary.

### **IMPORTANT: Automatic Shut-off feature**

The swivel sweeper will automatically shut off to protect its moving parts if the brushes become bound by carpets, rugs, hair or other objects.

To reset the shut-off feature:

1. Place the ON/OFF switch in the OFF position.
2. Untangle the sweeper's brushes from the object(s) they are bound by.

**Sweeper will be ready to operate within 10 seconds.**

### **Emptying the touchless dirt tray**



**The dirt tray has a capacity of 0.18L approx.**

Step 1) Make sure the swivel sweeper is turned off.

Step 2) Hold the swivel sweeper base over a bin receptacle, push the touchless dirt tray lock/release tab inwards (see Fig.3) until the touchless dirt tray swings open (See Fig. 4) to empty the dirt and debris into the bin receptacle.

Step 3) then place the base back on the floor or other flat surface. With gentle downward pressure, the touchless dirt tray will lock closed.

**IMPORTANT:** If the touchless dirt tray does not securely connect back into the base, check to make sure that no small metal debris (i.e. staples, paper clips etc.) has magnetised to the swivel sweeper's motor located on the underside of the base.

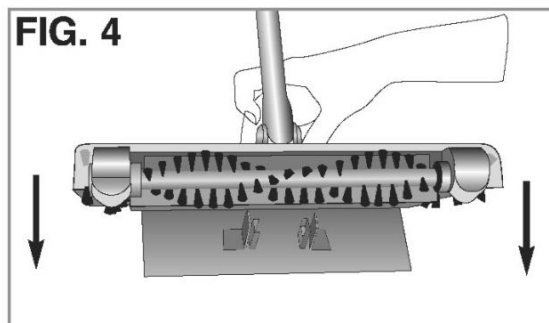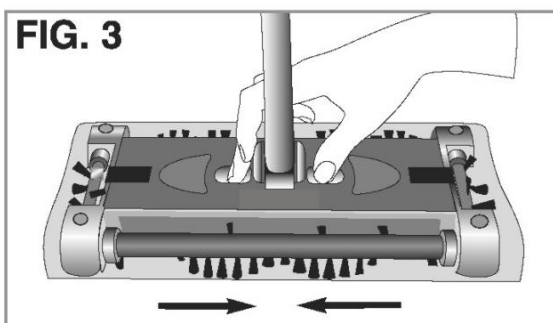

### **IMPORTANT MAINTENANCE & CARE**

As with any rotating brush cleaning device, the swivel sweeper's four cleaning brushes will accumulate fine debris such as hair, thread and other particles. To maintain optimal sweeper performance, clean the sweeper's rotating brushes of hair and debris and its air filter of dust and dirt as necessary following the directions below before each use.

# Green Swivel Sweeper 10940

# Instructions for Use

Please read and retain these instructions for future reference

v001: 01/08/17


Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD


\*Calls cost 7 pence per minute plus your  
telephone company's network access charge

Step 1) Make sure the swivel sweeper is turned OFF and remove the battery to ensure unit does not accidentally turn on.

Step 2) Unlock the tinted outer body frame by sliding the two outer body frame lock clips inward towards the pole (See Fig. 5).

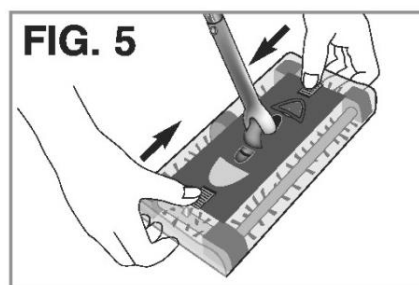


Step 3) Next, lift the tinted outer body frame up and over the aluminium pole to remove it. The four rotating brushes are now completely exposed (See Fig. 6).

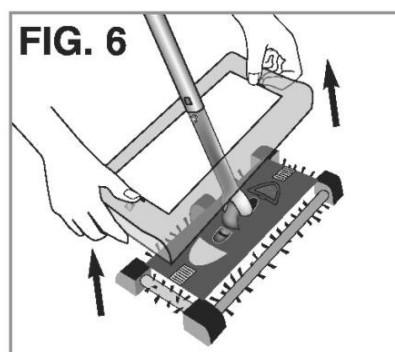


**Caution: Brush Cleaning tool has sharp tip and ripping blade. Avoid contact with tip and ripping blade.**

Step 4) Use the comb side of the brush cleaning tool to pull up and loosen tangled debris. Simply guide the comb along the shaft of the rotating cleaning brushes. (See Fig. 7)

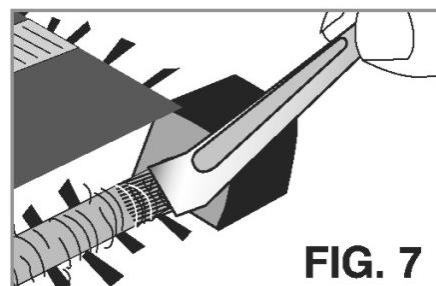

Step 5) Use the other end of the brush cleaning tool to cut and remove tangled debris. Simply guide the blade along the shaft of the rotating cleaning brushes (See Fig 8). Dispose of debris in rubbish.


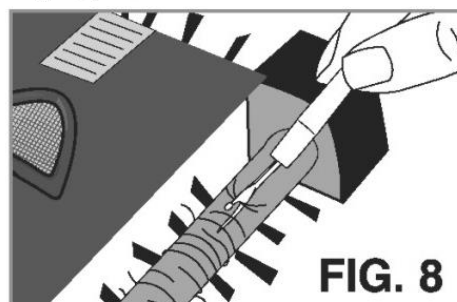




Step 6) Replace the tinted outer body frame and lock by sliding the outer body frame lock clips outward and away from the pole (See Fig. 9).

Step 7) Lift the air filter up and out by its removal notch. (See Fig. 10). Rinse the air filter off, let dry and replace back into sweeper.

Periodically wipe down your swivel sweeper with a dry or damp lint-free cloth. Do not use water, liquid cleansers or abrasive materials to clean swivel sweeper.

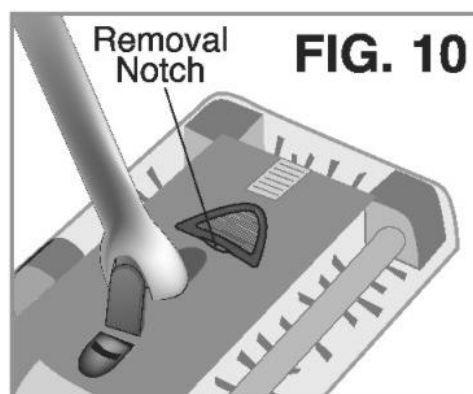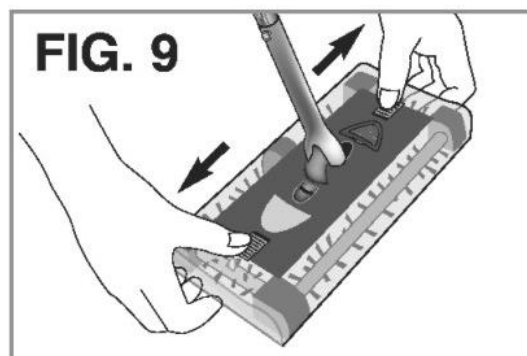


## Magnetic Latch System for Space-Saving Storage

Storing Swivel Sweeper between uses:

**IMPORTANT:** When you are finished cleaning with the swivel sweeper, empty out the touchless dirt tray, close it, then flip the sweeper head up to the side of the pole base to engage the two magnetic latches, for space-saving storage, between uses (See Fig. 10).

To release the sweeper head from the pole base gently tap it down.

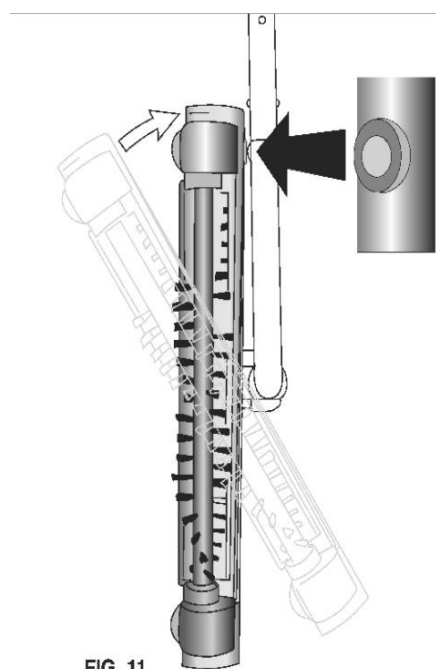



## BASIC TROUBLESHOOTING

1. Swivel Sweeper is sluggish and won't start:  
Make sure the battery is fully charged and securely inserted into the battery compartment, and that the pole section with the battery compartment is securely connected to the pole base.  
Check the rotating cleaning brushes to make sure they are not entangled with hair, debris, etc.
2. Battery not charging:  
Make sure that the rechargeable battery is fully inserted into the battery charger. Also, check to make sure that the red indicator light on the battery charger comes on when charging.
3. Rotating brushes become bound and sweeper shuts off:  
See Automatic Shut-off feature instructions.
4. Swivel Sweeper operating but not picking up mess:  
The touchless dirt tray may be full. Empty out the necessary (see Emptying The Touchless Dirt Tray Instructions). Also, some debris may be lodged in carpeting (such as staples) or may be too large/heavy for the sweeper to pick up. Make sure the Touchless Dirt Tray is fully closed.
5. Dirt & debris escaping from sweeper during cleaning:  
Make sure the "Touchless Dirt Tray" is empty and securely connected to the sweeper. Also, check to see that the rotating cleaning brushes are not entangled with debris such as hair, paper etc. Remove and clean brushes as necessary (See Maintenance and Care).

## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

