


Includes:  
3 Scrubbing Heads  
Extension Pole  
AC Adapter

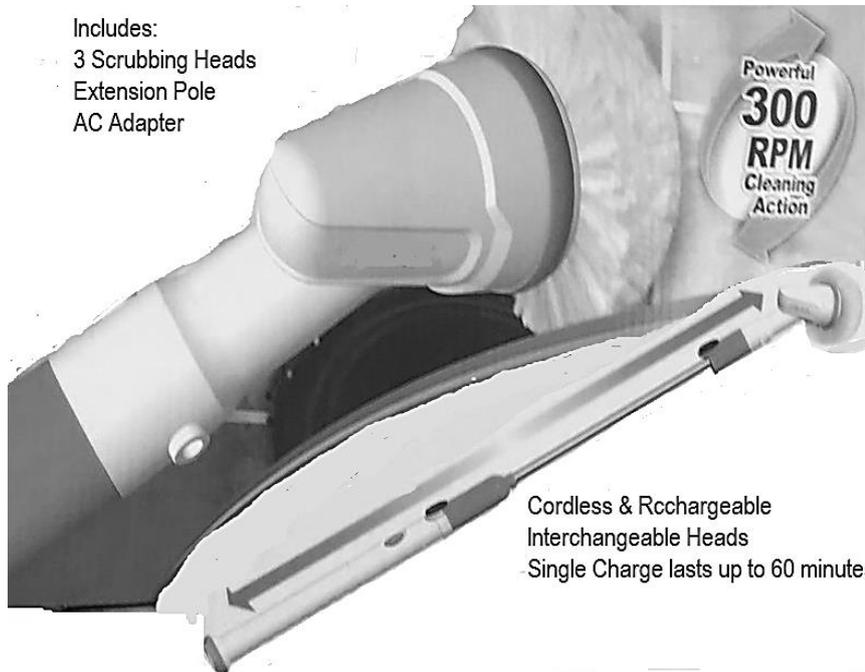

Cordless & Rechargeable  
Interchangeable Heads  
Single Charge lasts up to 60 minutes

## TECHNICAL DETAILS:

POWER DETAILS (VOLTAGE – AC / DC): 100-240V AC

POWER FREQUENCY: 50/60Hz

## WARNINGS / CAUTIONS:

- STORE OUT OF REACH OF CHILDREN. THIS PRODUCT IS NOT A TOY.
- CLOSE SUPERVISION IS REQUIRED WHEN ANY APPLIANCE IS USED BY OR NEAR CHILDREN.
- TO PROTECT AGAINST THE RISK OF ELECTRIC SHOCK, DO NOT PUT THE BATTERY CHARGER IN WATER OR OTHER LIQUIDS. DO NOT CHARGE BATTERY IF IT IS WET OR SHOWS SIGNS OF CORROSION.
- DO NOT USE AN EXTENSION CORD. PLUG THE CHARGER DIRECTLY INTO A STANDARD 220-240V POWER OUTLET. DO NOT CHARGE THIS UNIT OUTDOORS
- DO NOT ATTEMPT TO USE THIS CHARGER WITH ANY OTHER PRODUCT.
- DO NOT ATTEMPT TO CHARGE IN WET OR DAMP CONDITIONS. IT IS INTENDED FOR INDOOR USE ONLY.
- DO NOT USE CHARGER NEAR SINKS OR TUBS. DO NOT IMMERSE IN WATER.
- DO NOT ABUSE THE CORD. DO NOT CARRY THE CHARGER BY THE CORD OR YANK THE CORD TO DISCONNECT. KEEP CHARGING CORD AWAY FROM HEAT AND SHARP EDGES.
- DO NOT ALLOW THE CORD TO HANG OVER THE EDGE OF A TABLE OR COUNTER OR TOUCH HOT SURFACES. UNPLUG THE CHARGER WHEN NOT IN USE AND BEFORE CLEANING DO NOT OPERATE ADAPTER IF IT HAS RECEIVED A SHARP BLOW, BEEN

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk


**Coopers**  
OF STORTFORD

\*Calls cost 7 pence per minute plus your  
telephone company's network access charge


DROPPED OR OTHERWISE DAMAGED IN ANY OTHER WAY. DO NOT DISASSEMBLE THE ADAPTER FOR ANY REASON.

- FOR BEST RESULTS DO NOT CHARGE A BATTERY WHEN IT OR THE AIR TEMPERATURE IS BELOW 5 °C OR ABOVE 40 °C.
- ALWAYS STORE THIS UNIT INDOORS.
- DO NOT OPERATE IN THE PRESENCE OF EXPLOSIVES AND/OR OTHER FLAMMABLE FUMES OR LIQUIDS.
- DO NOT STORE OR USE THE APPLIANCE CLOSE TO HIGH TEMPERATURES.
- IF ABNORMAL NOISE, SMELL, SMOKE OR ANY OTHER FAILURE OR BREAKAGE IS FOUND DURING OPERATION, TURN OFF THE SWITCH AND UNPLUG IT.
- ONLY CHARGE THE UNIT WHEN IT IS IN THE OFF POSITION.
- THIS APPLIANCE IS ONLY FOR HOUSEHOLD USE, NOT FOR COMMERCIAL OR INDUSTRIAL USE.
- ALWAYS USE PROPER EYE PROTECTION WHEN USING THIS UNIT WITH IRRITATING SUBSTANCES. RUBBER GLOVES ARE ALSO RECOMMENDED.
- ONLY CHANGE THE SCRUBBER HEADS WHEN THE UNIT IS IN THE OFF POSITION.
- KEEP HAIR, LOOSE CLOTHING AND ALL PARTS OF THE BODY AWAY FROM THE MOVING PARTS OF THE UNIT. DO NOT USE THIS UNIT WHEN THE PROTECTIVE CHARGING COVER IS NOT IN PLACE. DO NOT SUBMERGE THE HANDLE IN WATER OR OTHER LIQUIDS.
- TO AVOID RISK OF SUFFOCATION, KEEP ALL PLASTIC BAGS AWAY FROM CHILDREN.

## Set Includes:

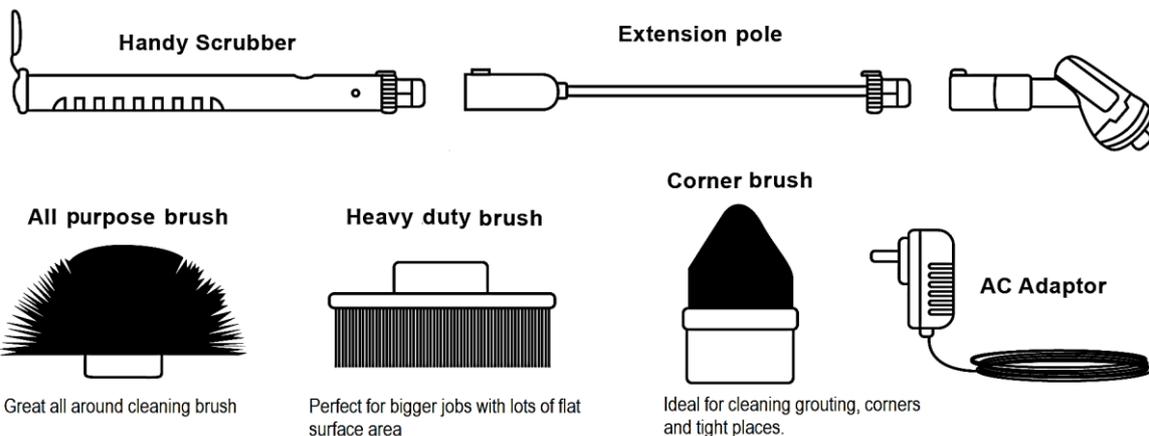

## SETTING UP UNIT:

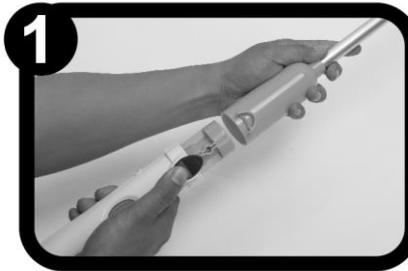

Join the main handle to the extension handle until you hear a “click” sound.



Join the scrubber head assembly to the extension handle until you hear a “click” sound.



Firmly hold the selected scrubber head assembly with one hand and then push the selected scrubber head on until secured.

## USER INSTRUCTIONS:


1. Add water and cleaning solution to the place you want to clean and/or the head of the spin scrubber.
2. Turn the switch to On by pressing On/Off switch.
3. Hold the unit by its handle and slowly press the scrubber head to the desired cleaning area. Do not push too hard.
4. Once your cleaning is complete turn On/Off switch to Off.
5. Make sure the unit is dry and store away in a safe area.

## CLEANING INSTRUCTIONS:


- Clean only with a soft cloth.
- Only use a mild detergent to clean unit. Do not use alcohol-based or abrasive cleaners.
- Let unit dry by separating all parts.

**CHARGING THE UNIT:**

- Place charging adapter inside the charging port on the bottom of the unit. A red light will light up when charging.
- Charge for 20 hours when first charging. Charge only 8 hours for subsequent charges.
- Unit may become warm when charging.
- Close cover once charging is complete.

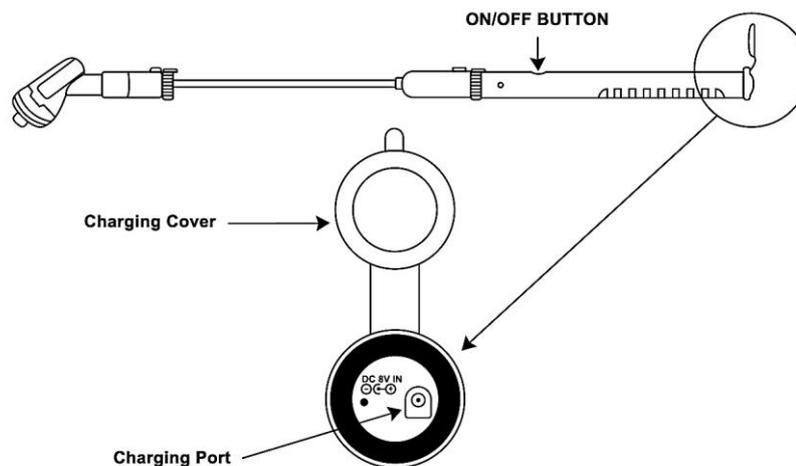**REMOVING BATTERY**

- The Spin Scrubber uses a Ni-MH rechargeable battery.
- Once battery can no longer be recharged it should be removed and recycled.
- To remove battery of the handle and top of the unit and pull the battery assembly out (Pic 2).
- Remove the tape, un-clip black and red wires and remove battery (Pic 3)

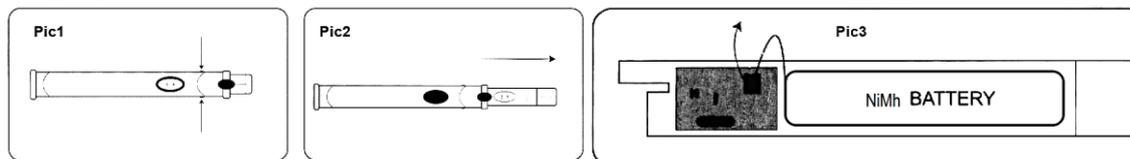

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

**PLUG WIRING (UK & IRELAND)**


This appliance is fitted with a BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

## The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

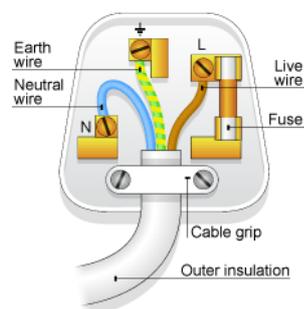

### Note:

Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

## DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

