

TECHNICAL DETAILS:


POWER DETAILS VOLTAGE: 220-240V A.C.; 50/60Hz

WATTAGE: 900-1050W

TOASTER CAPACITY: 2 SLICES

COFFEE MAKER TANK CAPACITY: 250ml approx.

PARTS:

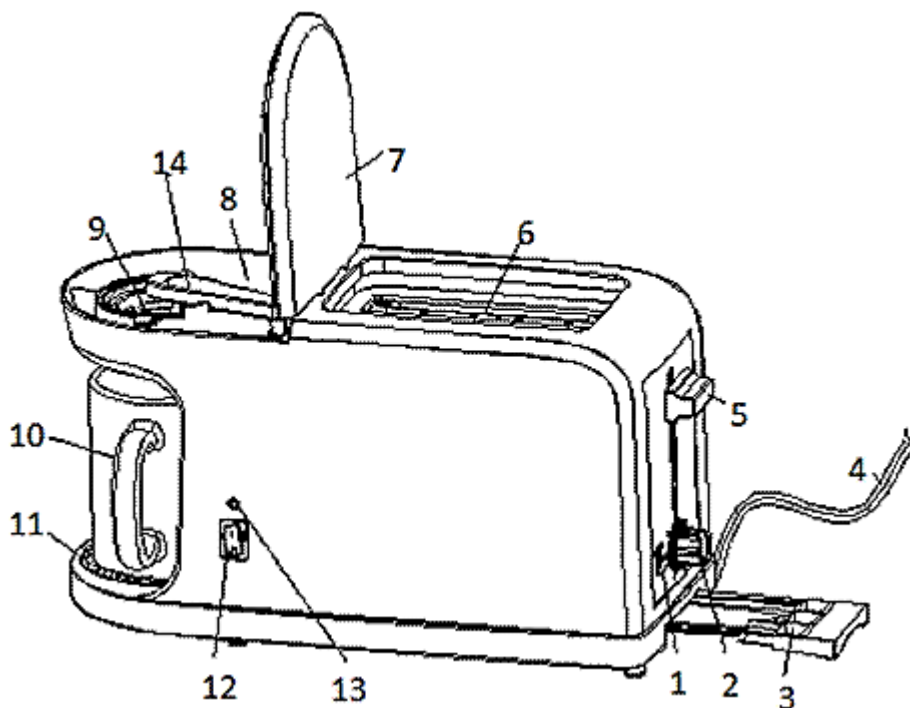

- 1. Cancel button
- 2. Light/dark selector
- 3. Movable crumb tray
- 4. Power cord
- 5. Push knob
- 6. Bread slot
- 7. Water tank cover

- 8. Water tank
- 9. Filter
- 10. Coffee mug
- 11. Skid-proof tray
- 12. Coffee maker switch
- 13. Coffee maker indicator
- 14. Water spout

USER INSTRUCTIONS:**OPERATION FOR TOASTER**

- Place your toaster on a flat, dry, stable surface.
- Plug the toaster in, and adjust it to your required toasting time, using the light/dark selector (2)
- Place bread or other food suitable for toasting into the slot (6), then press down the start control /knob (5). It will remain down until the bread is toasted.
- If you wish to stop the toasting process, press the cancel button (1). This will automatically eject the toast, and cancel the heating elements.
- If the bread sticks in the toaster, unplug it, wait for it to cool, and then remove the bread. NEVER USE METAL UTENSILS TO REMOVE THE BREAD.
- After use, wipe crumb tray using a dry cloth.
- Always allow at least 1 minute cooling time between cycles if toaster is being used more than once at a time.
- Breads must be put inside the slot when toaster is used. Avoid using the toaster without bread.

TOASTER SETTINGS:

Setting 1 (Secs)	Setting 2 (Secs)	Setting 3 (Secs)	Setting 4 (Secs)	Setting 5 (Secs)	Setting 6 (Secs)	Setting 7 (Secs)
30-70	45-100	80-130	120-160	140-190	160-220	170-240

OPERATION FOR COFFEE MAKER

- Open the water tank cover (7) and fill water into the water tank (8), Do not exceed the MAX of water gauge.
- Place ground-bean coffee into the filter (9) for desired taste and strength for one mug (250ml), move water spout to sit over the filter and close the water tank cover.
- Place coffee mug (10) in the centre of skid-proof tray.
- Then turn switch (12) on to run coffee maker. The indicator (13) of the coffee maker is on, when the coffee maker is running.
- When boiling is finished, coffee will automatically be poured into the coffee mug, Turn the switch off after all coffee is out of coffee maker.

WARNINGS AND CAUTIONS:

When using electrical appliances, basic safety precautions should always be followed. These include the following:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR INDOOR DOMESTIC USE ONLY. DO NOT USE OUTDOORS.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- USE ON A LEVEL, STABLE SURFACE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSER POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.

- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- THE SURFACES ARE LIABLE TO GET HOT DURING USE. DO NOT TOUCH HOT SURFACES. USE HANDLES OR KNOBS.
- EXTREME CAUTION MUST BE USED WHEN MOVING AN APPLIANCE CONTAINING HOT OIL OR OTHER HOT LIQUIDS.
- THE TEMPERATURE OF ACCESSIBLE SURFACES MAY BE HIGH WHEN THE APPLIANCE IS OPERATING.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.

CLEANING INSTRUCTIONS:

- Unplug from the power outlet (mains) and allow to cool.
- DO NOT use coarse or abrasive sponges/cloths or steel wool to clean the appliances.
- Never spray or apply cleaner directly onto or into the toaster – cleaner should be applied to a soft cloth.
- The outside of the toaster should be wiped with a soft, damp cloth, and polished with a soft, dry cloth.
- After cleaning, the toaster can be used only the units is dry completely.
- Filter can be cleaned with detergent in warm water. Put inside the coffee maker after washed with clean water and dried.
- To maintain its performance, descale the coffee maker. If used regularly every day it is recommended to descale the appliance every 2 weeks.

- Please use a toxic free descaler or detergent such as citric acid, to add citric acid into water at 1:100 proportions, and always operate the appliance about x3 times to remove any scaling, or repeat until water flow is steady.
- Alternatively you can use a descaling fluid such as Mrs Cooper's Best Appliance Descaler (Item code 9958). Follow instructions on the bottle for water boilers, mix 1 part descaling liquid to 5 parts water and pour the descaling liquid into the water tank. Operate the appliance until the descaling liquid flows out of the spout (catch the liquid in a container) and repeat at least 3 times to remove the scale or repeat until the water flow is steady.
- After descaling, please pour out all the boiled water in the water tank and add clean water to operate the appliance twice before use.

PLUG WIRING (UK & IRELAND)


This appliance is fitted with a BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is **earthed**; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

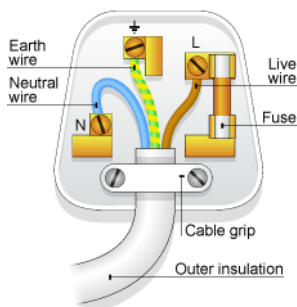

Note:

Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD