# Handheld Power Cleaner

10991

## Instructions for Use

Please read and retain these instructions for future reference

v001:04/10/17




This battery operated power cleaner comes with a set of four interchangeable brush heads that rotate to reduce the need for scrubbing. The set is suitable for general household cleaning and the brush heads are ideal for reaching difficult to access areas such as crevices, the base of taps and shower tracks.

Spare Heads are available – item code 10993.

#### Inserting the batteries:

- The battery compartment is located on the base/ end of the handle. To remove the cover, press the two nodules near the bottom of the thermoplastic rubber grip (one on each side) inwards at the same time then pull the cover off the battery compartment.
- Insert 4 x AA batteries (not included) with polarity as shown inside the battery compartment cover and in the diagram on the right. Replace the cover by pushing it firmly on the base of the handle. The cover only fits one way onto the handle.

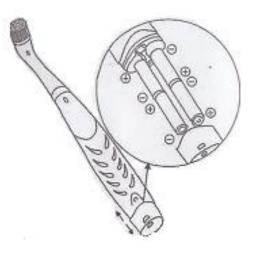

#### Using the Power Cleaner:

- A sliding ON/OFF switch is located on the back of the handle (above the thermoplastic rubber grip). Slide the switch upwards to turn the unit ON and slide it downwards to turn it OFF.
- Ensure the ON/OFF switch is in the OFF position while changing the brush head.
- To remove a brush head, hold the handle facing you and rotate the brush head slightly to the right then pull it upwards and off the shaft at the top of the handle. To attach a brush head, rotate it slightly to the right first then push the base onto the shaft at the top of the handle; rotate it to the left to lock the head into position.
- Use the cleaning brushes alone or with your own detergent or cleaning solution. Move the brush heads slowly over the surface to be cleaned. Rinse the brush heads clean after each use to remove any dirt, grime and soap residue.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400\* Fax: 01279 756 595 www.coopersofstortford.co.uk



\*Calls cost 7 pence per minute plus your telephone company's network access charge

# Handheld Power Cleaner

10991

Instructions for Use

v001:04/10/17

Please read and retain these instructions for future reference

### CAUTION:

- Do not immerse this product in water. Rinse the brush heads clean after use.
- Do not use this product on new grout between tiles as damage may occur.
- Before using this product, test it on a small area of the surface to be cleaned to ensure there is no scratching. If result of this testing is acceptable, continue use.

### BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

### **DISPOSAL:**

- Dispose of all packaging, paper, cartons and plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400\* Fax: 01279 756 595 www.coopersofstortford.co.uk



\*Calls cost 7 pence per minute plus your telephone company's network access charge