

 


TECHNICAL DETAILS:

Model number	WHL-106
Window Cleaner input	3.7V dc 9W
Power adapter input	100-240Va.c., 50/60Hz, 0.2A
Power adapter output	5V dc 1000mA

Contains Lithium Ion rechargeable battery - 3,7Vdc, 1500mAH

PARTS:

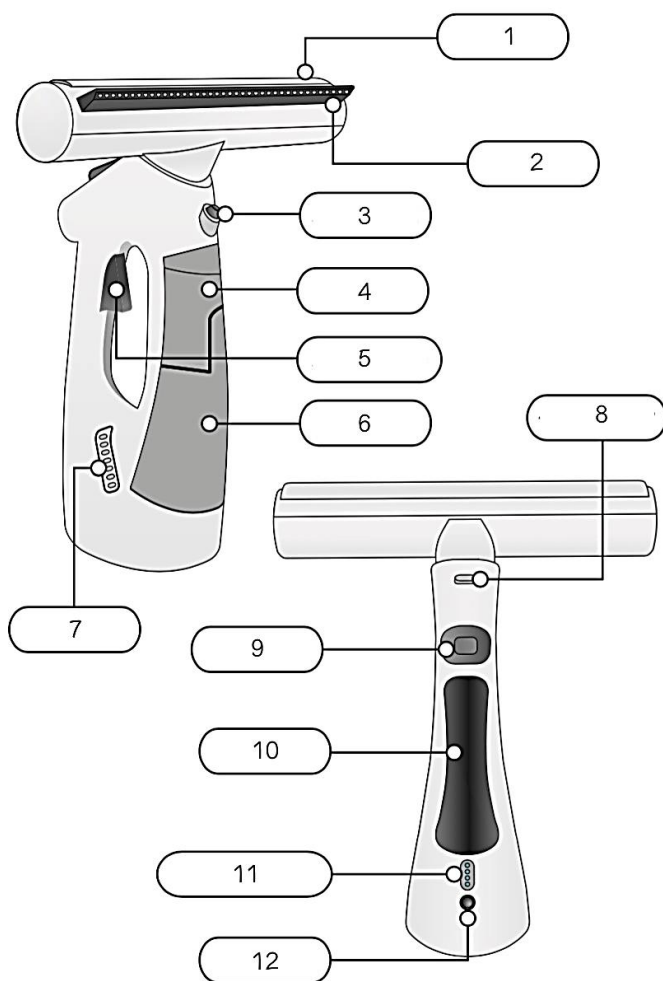

- 1. Wipe attachment area
- 2. Squeegee
- 3. Spray
- 4. Water collect tank
- 5. Trigger
- 6. Clean water tank
- 7. Air outlet
- 8. Squeegee press-button
- 9. Switch
- 10. Handle
- 11. Battery level LED lights
- 12. Power Adaptor/charger socket



13. Power Adaptor

This appliance is only intended for domestic use; do NOT use for commercial purposes.




Warning

Do not add harsh cleaning materials, caustics, acids, scented perfumes, oils or cleaning products as this may damage the appliance or make it unsafe to use. Only use clear and pure water. The use of distilled water is recommended in areas with hard water to avoid limescale deposits.



Warning

Only use the vacuum function for liquids used during the cleaning process.

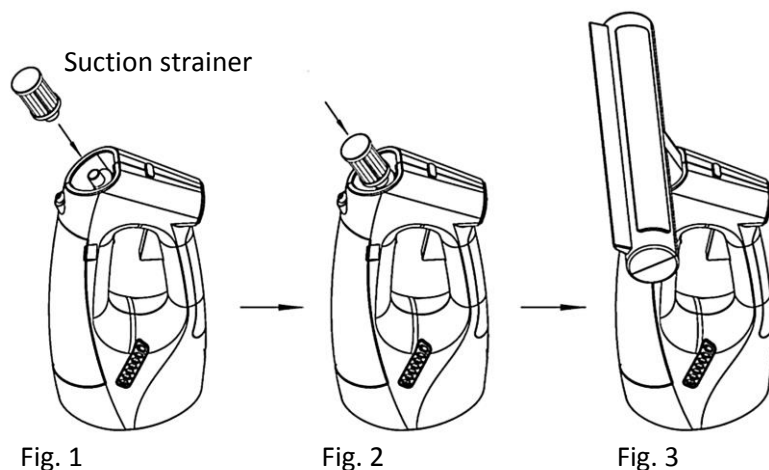

Please insert suction strainer before using as shown in Fig. 1.

Before use:

- Remove all packaging materials.
- Clean the appliance, if necessary, with a wet cloth and some mild detergent (also refer to "maintenance and cleaning").
- Check the appliance for damage before each use. Do not use the appliance if the power cable or power adaptor is damaged or when not functioning properly.

Charging the battery:

Attach the charger to the appliance charger socket (12) before connecting the adaptor to the power supply. Make sure the power supply indicated on the adaptor corresponds with the local voltage. A blue charger indication light (11) will turn on to indicate the appliance is charging and four blue LED lights will indicate when the battery is fully charged. It takes approximately 2 hours to fully charge the battery.




Note: We recommend that you unplug your charger when charging is complete.

Note: Always make sure the appliance is fully charged before use.



Filling the water tank:

Switch the appliance off and disconnect it from the charger.

Pull out the water tank and remove the cap. Fill the water tank (6) with clean cold water by slightly tilting the appliance forward. Once the water tank is nearly full, replace the water tank cap.

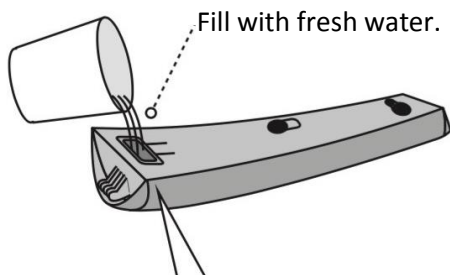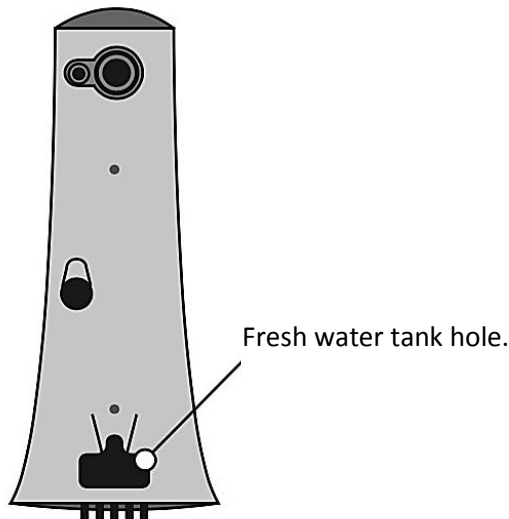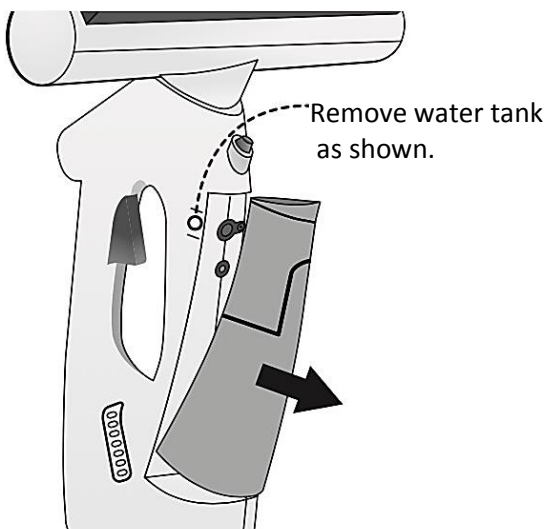

Maximum fresh water capacity

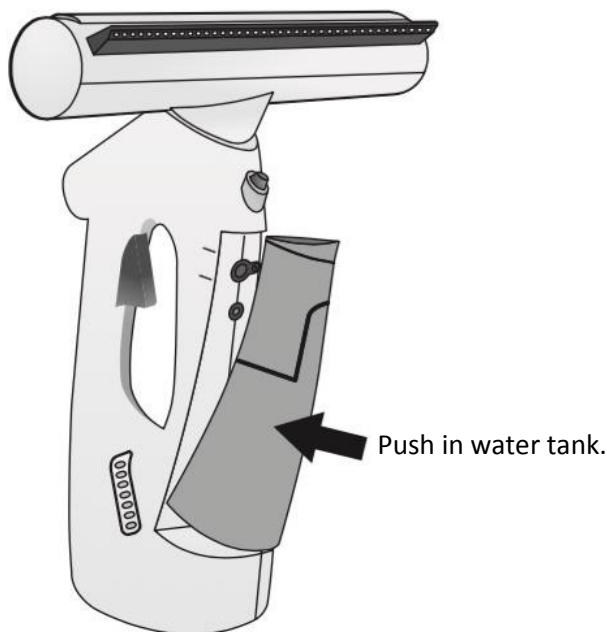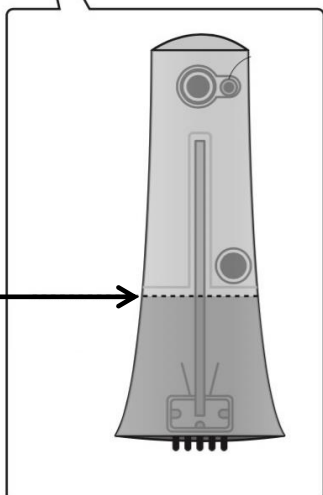

Note: The appliance must be disconnected from the charger while filling the water tank.

Note: Do not add harsh cleaning materials, caustics, acids, scented perfumes, oils or cleaning products to the water or the water tank as this may damage the unit or make it unsafe to use. Only use clear and pure water. The use of distilled water is recommended in areas with hard water to avoid limescale deposits.

Attaching the cleaning wipes:

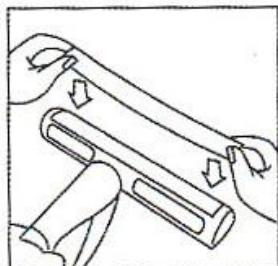


Fig. 1

The cleaning wipes attach to the wipe attachment area **(1)** with hooks and loops. Position the selected wipe in front of the attachment area evenly over the entire length, then press the surface to secure wipe, as shown in **Figure 1**.

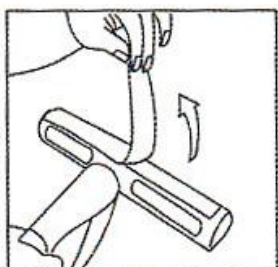


Fig. 2

Remove the wipe by simply tearing it away. **See Figure 2.** Emery wipes can be used to remove tough stains and grease from your surfaces while the microfibre wipes give a shiny and streak free finish for cleaned or less dirty surfaces. For maximum results, wipes should be replaced regularly according to their cleanliness. Wipes can be machine washed at 40°C. Do not put in dryer.

User Instructions:

Spray - Hold the unit by the handle and press the water spray trigger **(5)** as shown in **Figure 3**. Ensure the spray **(3)** is directed towards the area to be cleaned and cover the surface in water.

Clean - Turn the appliance and wash the surface with either one of the wipes attached to the unit. If necessary a mild glass cleaner can be sprayed on the window or a few drops of vinegar added to the water in the water tank.

Vacuum - Once completed turn the unit again and switch on the vacuum function with the vacuum switch **(9)** by pressing it once as shown in **Figure 4**. Keeping the appliance horizontally, move the squeegee **(2)** over the surface in a gentle, top-to-bottom movement to vacuum away the excess water and dirt.

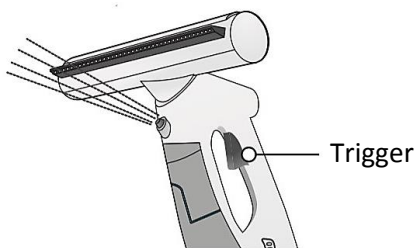


Fig. 3

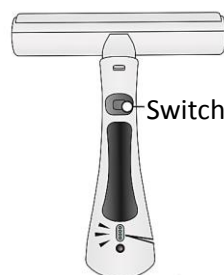


Fig. 4

**Warning**

Do not project the spray towards eyes or to a surface with electronic components, such as plugs, switches, cables, audio equipment, computer screens, or household appliances.

**Warning**

Only use the vacuum function for liquids used during the cleaning processes.

Tip: With the use of the emery wipe the appliance does not need detergent, but in case of heavy dirt and grease a few drops of vinegar can be added to the water to help degreasing and unclog your windows. This is an environmentally friendly and economic solution.

After use:

1. Turn off the vacuum function by pressing the vacuum switch **(9)** and allow to cool.
2. Wait around 5 minutes to lift the water tank cap, remove the filter and empty the water tank **(4)** by turning the appliance upside down above the sink.
3. Wash the filter carefully before placing it back in the unit. The collected water from the vacuum cleaner is recycled through this filter and it is therefore important it is cleaned after each use.

MAINTENANCE AND CLEANING:**Note:**

- Always switch off the appliance and unplug from the charger before cleaning.
- Never immerse the appliance and/or the power cable in water or other liquids.

Cleaning the appliance

1. Turn the appliance off.
2. Lift the water tank cap, remove the filter and empty the water tank by turning the appliance upside down above the sink.
3. Clean the appliance and accessories with a damp cloth and a mild detergent and allow to dry completely.
4. Wash the filter carefully before placing it back in the unit. The collected water from the vacuum cleaner is recycled through this filter and it is important to clean it after each use.

Note: Never use abrasives, bleaching agents or steel wool to clean the appliance. This could cause damage to the material.

Rinsing the water tank:

To clean the water tank, we recommend that you fill it with water, close the lid and shake the unit vigorously. This will release any limescale deposits that have collected on the bottom of the tank. Pour the water out by holding the cleaner upside down.

Limescale removal:

To extend the life of your appliance it is recommended to descale the appliance every 2 months. Switch the appliance off and remove the plug from the socket. Fill the tank with 130ml of 50°C hot water and add one or two descaling tablets. Pour the water out as described above after 30 minutes.

Storage:

Make sure that the appliance and the attachments are completely clean and dry before you store the appliance.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC USE ONLY.
- DO NOT USE FOR COMMERCIAL USE.
- ALWAYS USE AN EARTHED MAINS SOCKET.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- ALWAYS SWITCH OFF AND DISCONNECT FROM POWER WHEN YOU FILL, EMPTY OR CLEAN THE APPLIANCE.
- NEVER PULL THE POWER CABLE TO DISCONNECT THE POWER ADAPTOR FROM THE SOCKET. INSTEAD,

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595

www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your
telephone company's network access charge

HOLD THE POWER ADAPTOR AND GENTLY PULL TO DISCONNECT.

- ONLY USE THE APPLIANCE WITH AN EXTENSION CABLE, WHERE THIS EXTENSION CABLE IS UNDAMAGED.
- DO NOT CLOSE THE DOOR ON THE POWER CABLE OR PULL IT AROUND SHARP EDGES OR CORNERS. DO NOT ALLOW THE POWER CABLE TO BE COMPRESSED OR CURLED.
- NEVER USE THE APPLIANCE IN AREAS WHERE CERTAIN VAPOURS MAY BE PRESENT (PAINT THINNER, FLAMMABLE MATERIAL, OIL BASED PAINT AND VARNISH, FLAMMABLE LIQUIDS AND GASES) FOR RISK OF AN EXPLOSION.
- DO NOT TOUCH THE CHARGER WITH WET HANDS.
- DO NOT ADD HARSH CLEANING MATERIALS, CAUSTICS, ACIDS, SCENTED PERFUMES, OILS OR CLEANING PRODUCTS TO THE WATER OR THE WATER TANK AS THIS MAY DAMAGE THE APPLIANCE OR MAKE IT UNSAFE TO USE.
- ONLY USE CLEAR AND PURE WATER. THE USE OF DISTILLED WATER IS RECOMMENDED IN AREAS WITH HARD WATER TO AVOID LIMESCALE DEPOSITS.
- USE THE VACUUM FUNCTION ONLY TO VACUUM LIQUIDS USED DURING THE CLEANING PROCESS.
- ONLY USE THE APPLIANCE ON SMOOTH, SOLID, FLAT SURFACE THAT IS SUITABLE TO WITHSTAND MOISTURE.
- MAKE SURE THE AIR EXHAUST IS NOT BLOCKED.
- ONLY USE THE ORIGINAL POWER ADAPTER AS SUPPLIED WITH THIS APPLIANCE.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.
- STORE THE APPLIANCE INDOORS.

BATTERIES:

- Remove batteries from product if not using for a long time.
- Store batteries in a dry place at room temperature.
- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a 100-240Va.c., 50/60Hz, 0.2A mains power adaptor.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

