



## User Notes:

- Please familiarise yourself on how to use the egg cooker by reading and following each point of this manual in the order presented. Keep the operating instructions for future reference.
- These instructions contain important details for handling the appliance. These instructions will make it easier for you to handle the appliance and help prevent misunderstandings and possible damage or injury.
- Please use the microwave egg cooker only as described in this manual.
- Use the appliance only for boiling eggs. Do not use the egg cooker if it is damaged.
- The temperature of the aluminium egg tray can be very high during operation. Do not touch this part with bare hands. For removing the egg cooker from the microwave use oven gloves.
- Do not carry the microwave egg cooker by the handles to avoid unintentional opening.
- Never use the egg cooker dry and ensure that the egg cooker is completely closed while in use.
- Do not leave the egg cooker unattended. Do not allow children or other persons in need of supervision to use the egg cooker.

## Instructions:

### Before first use

Remove all packaging materials from the appliance. Clean all parts with water and a smooth detergent.

### Operating Instructions:

- Unlock the locking clips by folding down and removing the upper part.
- Remove the aluminium tray and fill the plastic base with water up to the water level line. Do not overfill.
- Replace the aluminium tray and place from one to four eggs with the large ends down on top of the aluminium tray.
- A small hole can be pierced on the top end of each egg to prevent cracking it.
- Place the egg tray with the eggs onto the plastic base and put the chicken-shaped lid on and lock in place.
- **NOTE:** The egg cooker has to be closed very tightly, otherwise the eggs may explode in the microwave. To close the lid tight, lift up both locking clips.

**NOTE:** Cooking times vary with microwave oven wattage. Use table below as a guidance.

| Hardness of egg | Microwave Wattage |      |
|-----------------|-------------------|------|
|                 | 500W              | 600W |
| Soft-boiled egg | 5.5min            | 5min |
| Hard-boiled egg | 8min              | 7min |

#### CAUTIONS:

- Do not touch the aluminium egg tray during operation, as this part becomes very hot! Use oven gloves.
- Do not carry the microwave egg cooker by the handles only. The egg cooker might open unintentionally.
- This egg cooker is for microwave use only.

#### CARE AND CLEANING INSTRUCTIONS:

- The aluminium parts of the microwave egg cooker might become discoloured after using in the microwave. This is not a fault and there is no cause for concern.
- After each use, clean all parts with water and a smooth detergent to prevent limescale build-up and remove the residue left by the eggshells.
- Dry all parts completely before next use.
- Wash all parts. Do not wash them in the dishwasher.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.

#### DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.