



INSTRUCTIONS FOR USE:

100ft expandable hose w/bag – Item code 11038

50ft expandable hose w/bag – Item code 11041

The expandable garden hose expands 3 times in length when water is turned on and contracts back to its original length when the water is turned off. It is very lightweight and can be stored very easily in a small space.

1. When using the hose for the first time, gently unravel the hose before connecting the hose to the tap. Do not stretch the hose at this stage.
2. Fill the hose with water at gentle pressure to let it extend while slightly stretching it to release tightness in the fabric. Once fully stretched then the water pressure can be increased.
3. Attach the 9 setting spray nozzle on the other end of the hose by pushing it in until it clicks. To release the spray nozzle, slide back the port connector and pull out the spray nozzle.
4. Turn the water on, gradually increasing the water pressure to expand the hose 3 times its length.
5. When the hose is fully expanded it is ready to use.
6. Turn the water off at the source when the hose is not in use.
7. Squeeze the nozzle to drain the hose completely and allow the hose to contract to its original length.
8. When finished using, shut off the water from the source and then drain the hose completely.

WARNINGS

- THIS IS NOT A TOY. KEEP CHILDREN AND PETS AWAY FROM THE HOSE DURING AND WHEN NOT IN USE.
- THE HOSE IS INTENDED FOR DOMESTIC GARDEN USE ONLY.
- DO NOT LEAVE UNATTENDED WHEN IN USE.
- DO NOT USE THE HOSE FOR DRINKING WATER.
- ONLY USE THE HOSE FOR ITS INTENDED PURPOSE AS DESCRIBED IN THIS MANUAL. DO NOT USE ATTACHMENTS THAT ARE NOT SPECIFICALLY RECOMMENDED BY COOPERS OF STORTFORD WITH THIS HOSE.
- DO NOT STRETCH OR EXPAND THE HOSE WHEN IT DOES NOT HAVE WATER FLOWING THROUGH IT.
- ROUGH EDGES, THORNS AND THISTLES CAN DAMAGE THE HOSE AND CAUSE PUNCTURES. KEEP AWAY FROM SHARP OBJECTS. DO NOT USE IF DAMAGED.
- NEVER LEAVE THE VALVE TURNED OFF WHILE WATER IS TURNED ON FOR A PROLONGED PERIOD.

CARE AND STORAGE INSTRUCTIONS:

- Do not leave the hose exposed to direct sunlight for extended periods.
- Do not leave the hose outdoors in extreme winter weather to prevent it from becoming frozen.
- Drain the hose completely before storing.
- Store without kinks or twists in the hose.

DISPOSAL:

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.