




**Power Details:** 220-240V a.c.; 50Hz 5W  
6V DC by 4 x AA (batteries not included)

**Radio Bands:**  
FM: 87.5 - 108 MHz  
AM: 522 - 1620 kHz  
SW: 3.16 – 18.10 MHz in 10 Bands  
LW: 153 – 279 KHz

**Accessories:** AC Power Cable, Instruction manual

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your Multi-Band Radio

## Front view

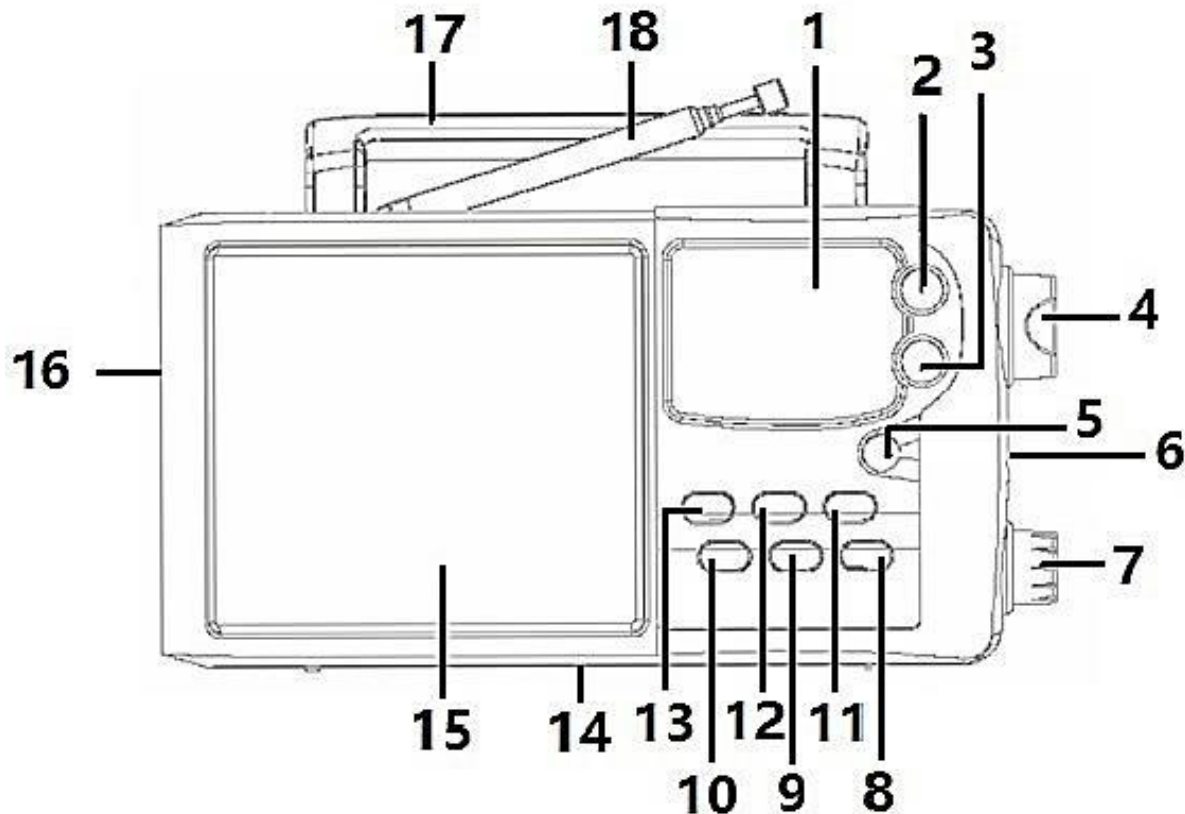

### LOCATION OF CONTROLS:

- |                           |                              |
|---------------------------|------------------------------|
| 1. LCD Display            | 12. SW Band Button           |
| 2. Mode Button            | 13. AM / FM / LW Band Button |
| 3. Set Button             | 14. Battery Compartment      |
| 4. Tuning Knob            | 15. Speaker                  |
| 5. Power On / Off Button  | 16. Power Socket             |
| 6. Headphones output      | 17. Handle                   |
| 7. Volume Knob            | 18. FM Aerial                |
| 8. Preset Memory –        |                              |
| 9. Preset Memory +        |                              |
| 10. Snooze / Sleep Button |                              |
| 11. Alarm Button          |                              |

**POWER SUPPLY****AC POWER OPERATION:**

Connect the AC Power Cord to your AC household mains socket and switch on the mains supply. Make sure the voltage is compatible.

**BATTERY OPERATION:**

1. Remove mains lead from the unit for battery operation.
2. Open the Battery Compartment at the back of the radio and insert four AA batteries (not included) following the polarity diagram shown inside the battery compartment.
3. Batteries should be removed from the compartment if the unit is not to be used for some time.
4. Flat batteries should be removed from the unit to avoid leakage.

**RADIO OPERATION:**

1. Press the Power ON/OFF Button (5) to switch the unit on.
2. Choose between radio wave band AM, FM, LW BAND button (13) or SW using BAND Button (12).
3. Search for the station of your choice using the Tuning Knob (4).
4. To switch off the radio, press the Power button (5) to OFF.

**AERIAL:**

For FM reception there is a built-in telescopic FM aerial (18) at the rear of the unit. Extend the aerial and move it around to obtain the best reception.

For AM / LW / SW reception the signals are picked up through a built-in ferrite aerial. You may have to adjust the position of the unit to obtain the best reception.

**STORE RADIO STATIONS MANUALLY:**

This unit can store 104 stations in total (8x FM, 8x AM, 8x LW and 80 SW).

1. Tune into the desired station as explained above
2. Press the SET button (3) to enter preset mode
3. A "CH" icon flashes in the display
4. Press the M+ or M- buttons (8 or 9) to choose a preset number, from 1 to 8.
5. Press the SET button (3) to confirm the memory setting.

**STORE RADIO STATIONS AUTOMATICALLY:**

Press and hold the SET button (3) 3 seconds and the radio station will be stored in the memory sequentially.

**CLOCK SETTING:**

When the radio is OFF, the display only shows calendar and time.

1. Press the SET button (3) and the display will show the minutes as 00 flashing. Turn the Tuning Knob (4) to select minutes.
2. Press the SET button (3) again to confirm setting. The Display will show 00:00 with the first two digits flashing. Turn the Tuning Knob (4) to select the correct time of hours.
3. Press the SET button (3) again to confirm setting. Next the Display will show 24H will flash. Turn Tuning Knob (4) to select either 12H or 24H display.
4. Press the SET button (3) to confirm the clock setting.

When the radio is ON, the display shows radio frequency and time.

Press the MODE button (2) to select time mode, then repeat the above steps 1-4 to set the time.

**CALENDAR SETTING:**

When the display shows the time, press MODE button (2) to show calendar mode.

1. Press SET button once (3) to select the year.
2. Turn the Tuning Knob (4) to set the correct year.
3. Press SET button (3) again to select the month.
4. Turn the Tuning Knob (4) to set the correct month.
5. Press SET button (3) again to select the day.
6. Turn the Tuning Knob (4) to set the correct day.
7. Press SET button (3) to confirm the calendar setting.

**ALARM SETTING:**

1. Press the Alarm button (11) and select the Alarm 1 or Alarm2
2. Press the SET button (3), the display will show the minutes flashing as 00. Turn the Tuning Knob (4) to select the desired minutes.
3. Press the SET button (3) again to confirm setting. The display will then show 00:00 with the first two digits flashing. Turn the Tuning Knob (4) to select the desired hours.

4. Press SET button (3) to confirm the alarm setting.
5. Press ALARM button (11) to enter in normal clock mode.

When the Alarm sounds, press SET button (3) or ON/OFF button (5) to turn it off. The Alarm setting remains.

During the time display mode (Radio is off), press the Alarm button (11) to select Alarm1, Alarm2, Alarm1&2 or off.

### **ALARM VOLUME SETTING:**

In Radio Alarm, the Alarm Volume is set with the last volume level used during playback. In Buzzer Alarm, the Alarm level is fixed.

### **WAKE TO BUZZER ALARM:**

Alarm1 and Alarm2 both have "wake to buzzer Alarm" function

1. Set the Alarm time as shown above.
2. Turn the Tuning Knob to set Alarm to wake up to BuzzerAlarm.

### **WAKE TO RADIO:**

1. Follow steps as described under Alarm Time Setting. Alarm1 and Alarm2 both have the "wake to radio" function.
2. Press the Alarm button (11) once to set the desired Alarm 1 time.
3. Press the Alarm button (11) twice to set the desired Alarm 2 time.
4. Turn the Tuning Knob (4) once after alarm setting to activate wake to Radio function.
5. After finish the Alarm 1 or Alarm 2 time setting, press the SET button (3) once to confirm alarm timer setting.
6. The Radio Memory icon appears in the display. During that time, turn the Tuning +/- knob to select the desired Radio station stored in the memory before.
7. Press the Set button (3) to confirm.
8. Press the ON/OFF button (5) to turn ON the unit, and then adjust the Volume to the desired level. Press the ON/OFF button (5) to switch OFF the Radio. It then switches ON automatically at the preset Alarm time.

### **SLEEP FUNCTION:**

Press ON button (5) to switch ON the radio. Press the Snooze/Sleep Button (10) sequentially from 90 to 10 minutes. To switch it off press once more. After setting the Sleep function and after the countdown has finished, the

unit will switch off automatically.

**SNOOZE:**

The alarm can be temporarily turned off manually by pressing the SNOOZE button (10); the alarm will turn back on 5 minutes later automatically.

**HEADPHONES:**

Headphones should have a 3.5mm diameter stereo plug and an impedance of 8-32 ohms. When headphones are connected (6), the speaker is automatically disconnected.

**SAFETY INSTRUCTIONS:**

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- **DO NOT** COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF



THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.

- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

**WARNING:**

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

**CARE AND CLEANING INSTRUCTIONS**

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.

- Store the unit in a cool, dry place.

## **BATTERIES:**

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left unused for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## **DISPOSAL:**

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

