



## Technical Data

Model: MF-001  
Battery operation: 2x 1.5 V UM 3, AA (not included)

## Instructions for Use

### General Safety Instructions

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing.

- This appliance is not fit for commercial use. For domestic use only.
- Keep the device away from heat, direct sunshine and sharp edges.
- Do not use the appliance with wet hands.
- Do not use the appliance in a damp or humid environment.
- In order to avoid an electric shock, this appliance must not be exposed to dripping water or water spray.
- The milk frother should always be immersed in the liquid before it is switched on.
- Please do not use the frother if the axle is bent.
- This appliance should only be used for the purpose intended.
- Please do not immerse the housing in water.

### Before Initial Use

Please wipe off the milk frother with a moist cloth before initial use or when it has not been used for a prolonged period.

### Inserting the Batteries (Batteries are not supplied)

- The battery compartment is located under the on/off switch. Push open the battery compartment lock to the side.
- Insert 2 batteries of type UM3 AA 1.5 V. Ensure the correct polarity (see the floor of the battery compartment or the imprint on the outside)! If the device is not used for a prolonged period, please remove the batteries.
- Different battery types or new and used batteries must not be used together.
- Then close the battery lid.

## Operation

### Frothing Milk

Please use only fresh milk (preferably full-cream milk). The vessel should not to be preheated. Please ensure that the vessel is only a quarter full as the volume of the milk will increase greatly during frothing.

1. Pour a little milk into a suitable narrow vessel (e.g. a glass).
2. Immerse the frothing coil completely in the milk.
3. In order to start the milk frother, please keep the on/off switch on the top of the appliance pressed down.
4. Move the frother smoothly up and down inside the vessel until the milk has frothed sufficiently. Please ensure that the coil always remains immersed in the milk.
5. When the switch is released the device turns off automatically. Only then should you remove the foaming spiral from the vessel.
6. Transfer the froth to the coffee using a spoon.

With your milk frother you can also prepare small quantities of salad dressing, mixed drinks, shakes and egg white.

## Cleaning and Care

- The frothing coil can be removed to clean it. To do so, pull the coil out of the device.
- Please clean the device immediately after use under warm running water. In order to avoid splashes, hold the frother in the sink or wash basin.
- Please do not immerse the housing in water. If necessary, the housing should only be wiped off with a moist cloth.
- Always switch off and remove batteries when not in use.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Store the item in a cool, dry place.

## WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- USE ON A LEVEL, STABLE SURFACE.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

