

## Product Specification


Rated Voltage:	220-240V AC
Rated Frequency:	50/60Hz
Rated Power:	900W
Capacity:	9L
Dimension:	235mm×260mm×325mm
Net Weight:	3kg/3.5kg

## Product Features

- Two-tier grill
- High-level to low-level functions
- 15-minutes cooking time setup.  
**Note:** For food requiring longer cooking times the timer will need to be re-set.
- Grill slides out automatically when opening the door
- Equipped with two, easy to clean baking trays
- Not suitable for cooking microwave meals in



## Parts

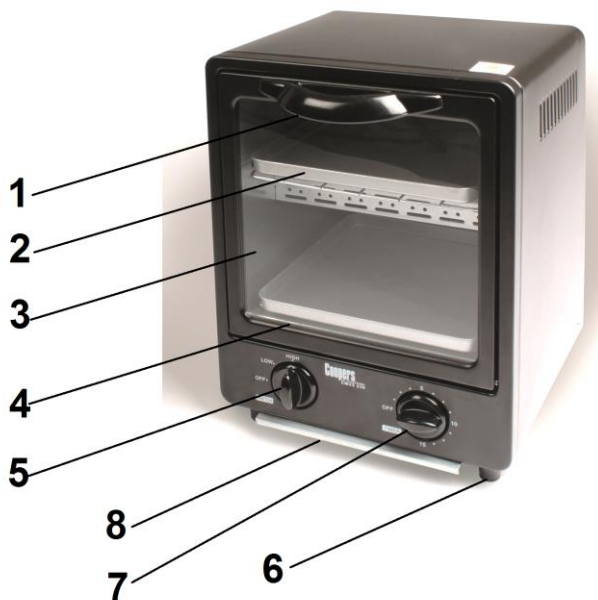

1. Door handle
2. Baking trays(two)
3. Glass door
4. Grill(two)
5. Rotation switch (OFF/LOW/HIGH)
6. Foot pad
7. Timer switch (OFF/up to 15mins)
8. Tray

## Contents

Product Specification.....	1
Product Features .....	1
Parts.....	1
Before first use: .....	2
Operation Steps.....	2
Cooking Guide .....	3
Troubleshooting .....	4
CARE AND CLEANING INSTRUCTIONS: .....	4
WARNINGS AND SAFETY INSTRUCTIONS: .....	5
PLUG WIRING (UK & IRELAND).....	6
The cable .....	6
DISPOSAL .....	6

**Before first use:**

- Read all user instruction carefully.
- Remove the protective film of the 2 Tier Oven, and dispose of packaging materials inside the oven.
- Check that both the rotation switch and timing switch are set in “close” or “zero” position.
- Check to see whether current voltage is in compliance with rated voltage indicated on the product, and ensure reliable earth connection.
- Wipe the internal and external surface and components of the 2 Tier Oven clean and plug it in before using.
- Before the initial use of the 2 Tier oven, you should set the temperature to maximum, and preheat for 5-10 minutes to eliminate packing odour that may remain after shipping.



**Warning! Do not touch hot surfaces. Surfaces will be hot due to the oven function. Always use oven gloves or heat resistant gloves/pads when taking food out of the oven or when moving the oven.**

**Operation Steps**

Place the food for cooking on the baking trays or the grill, and close the electronic oven door.

## Notice :

Trays and containers made of cloth or plastic must not be used in the oven;

When cooking small pieces of food (smaller than the grid mesh of the grill) or juicing food, a baking tray must be used;

Spread the food evenly on the grill or the baking trays.

Plug in the oven, keeping the Timer Switch (7) in the “Off” position.

Select baking temperature, set Rotation Switch (5) to LOW or HIGH; and then set appropriate cooking time on the Timer Switch (7).

**Notice :**

The oven does not need preheating before use;

If the Oven is being used continuously, after a while, it will have reached its optimum temperature and therefore the cooking times should be decreased slightly.

**The 2 Tier Oven can only be used continuously for 15 minutes or less.** For food requiring longer cooking times the timer will need to be re-set.

Remove cooked food when the oven stops.

**Notice:**

A bell will ring when the set time is completed; open the oven door and remove the food and check it is sufficiently cooked;

In order to avoid scalding when removing the food, always wear oven gloves;

If you want to stop the baking process, switch the Timer to the "OFF" position.

Unplug the oven once it has stopped.

### Cooking Guide

Food Type	Level Selection on Rotation Switch (5)	Cooking Time	Remarks
Bread	High	3-5 minutes	Use grill
Grilled cheese	High	3-5 minutes	Use baking tray
Muffin	High	2-4 minutes	Use baking tray
Sandwich	High	3-5 minutes	Use baking tray
Hot Dog	High	9-12 minutes	Use grill and use silver foil to wrap
Hamburger	Low	13-15 minutes	
Doughnut	High	3-5 minutes	Use grill
Potato chips	High	20-30 minutes	Use baking tray, some food may require silver foil cover
Frozen fish steak	High	15-20 minutes	
Frozen twice cooked pork	High	15-20 minutes	
Frozen chicken pieces	High	15-20 minutes	Use baking trays
Pizza	High	10-15 minutes	Use baking tray and cover it with silver foil

**Notice:**

- Cooking time varies with the temperature, quality and portion size and should be used for guidance only.
- When cooking is continuous, cooking time will be shorter than initially due to the relatively high initial temperature inside the oven.
- The built-in temperature controller will cut off automatically when overheating; the oven will stop working and resume after cooling. Do not remove the food, or else the food will be under cooked.

- Over-heating will cause food to burn.
- When reheating food which tends to spill oil, place some silver foil on the baking tray and food, to prevent oil spilling into the heating components causing smoke.

### Troubleshooting

Problem	Check	Possible Solution
<b>Oven does not heat</b>	whether the "Timer" button is pressed or not	Press the button, switch on and set baking time.
	whether food has been heated	When reaching the selected time, the timer cuts off power automatically.
	whether there are damaged components	Contact qualified electrician or electrical service agent.
	whether the temperature has been set	Readjust or reset Rotation Switch.
	whether the heating tube has been damaged	Contact qualified electrician or electrical service agent.
	whether temperature controller has cut off	Temperature controller cuts off when overheating and oven will stop working. The oven will resume after cooling.
<b>Inaccurate timing</b>	whether timer fails or is not responding	Contact qualified electrician or electrical service agent
	whether timer shows much deviation	Contact qualified electrician or electrical service agent
<b>Unpleasant smell</b>		Before the initial use of the 2 Tier oven, you should set the temperature to maximum, and preheat for 5-10 minutes to eliminate packing odour that may remain after shipping.
	whether the oven interior and accessories have been cleaned	Clean oven and accessories and use after drying
	whether there have been food spillages	Remove spillages and clean oven and accessories. Use after drying.

### CARE AND CLEANING INSTRUCTIONS:

- Unplug the 2 Tier Oven and do not clean until cooled down completely.
- Use a soft cloth or sponge dip with neutral cleaner to wipe the oven interior and exterior, baking tray and grill, and then wipe them clean with water. Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Never immerse the oven into water for cleaning.
- Do NOT use petrol, thinner, polishing agents or poisonous or corrosive detergent for cleaning.
- Use a small amount of food oil to wipe the surface of heating tube gently.
- Regularly check screws for tightness.

- Dry the cleaned parts before further use.
- Store the item in a cool, dry place.

**WARNINGS AND SAFETY INSTRUCTIONS:**

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.


- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

### PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

### The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

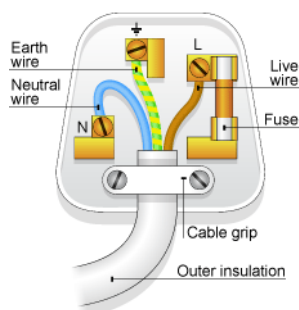

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

### DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

