



## USE:

- Plug into the mains socket and switch on at the plug.
- Adjust the temperature setting to the desired level:
  - 0 = Off
  - 1 = Low Heat
  - 2 = High heat
- The heating pad takes about 10 minutes to reach the desired temperature and then automatically regulates its operating temperature.
- Initially the power is 45W. When the temperature goes up the power goes down.



## WARNING:

- REMOVE ALL PACKAGING BEFORE FIRST USE.
- CHECK THE CUSHION, CONTROL HANDSET AND POWER CABLE FOR DAMAGE BEFORE USE. **DO NOT USE IF DAMAGED IN ANY WAY.**
- **DO NOT ALLOW THE CONTROL HANDSET, POWER CABLE OR CUSHION INNER TO GET WET. KEEP THESE PARTS AWAY FROM HIGH HUMIDITY AND MOISTURE.**
- **DO NOT FOLD, CUT OR PIERCE THE HEATING PAD.**
- **DO NOT CUT OR DAMAGE ANY PART OF THE HEATED FORM WARMER CUSHION.**
- **DO NOT GO TO SLEEP DURING USE. EXTENDED USE MAY CAUSE BURNS.**
- **DO NOT USE FOR WARMING ANIMALS.**
- **DO NOT PLACE THE CONTROL HANDSET ON OR UNDERNEATH THE CUSHION WHEN IN USE.**

- **DO NOT PUT LARGE, HEAVY OR HEATED OBJECTS ONTO THE CUSHION WHEN IN USE.**
- **THIS IS NOT A TOY. DO NOT ALLOW CHILDREN TO PLAY WITH THE HEATED FOOT WARMER CUSHION.**
- **DO NOT UNZIP THE CUSHION COVER WHEN IN USE.**
- **WHEN UNPLUGGING ALWAYS GRASP THE PLUG TO REMOVE FROM THE SOCKET. DO NOT PULL ON THE POWER CABLE.**
- **THE APPLIANCE IS NOT INTENDED TO BE OPERATED BY MEANS OF AN EXTERNAL TIMER OR SEPARATE REMOTE CONTROL SYSTEM.**
- **THIS APPLIANCE SHOULD NOT BE USED BY CHILDREN AGED UNDER 8 YEARS AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE. CLEANING AND USER MAINTENANCE SHOULD NOT BE UNDERTAKEN BY CHILDREN UNDER 8 YEARS OF AGE.**
- **ONLY USE FOR WARMING HANDS OR FEET.**
- **DO NOT LEAVE SWITCHED ON WHEN NOT IN USE OR UNATTENDED.**
- **ALWAYS SWITCH OFF WHEN NOT IN USE.**

## CARE INSTRUCTIONS:

- The cushion cover is washable, follow instructions on the washing label. Always allow to cool before removing the cushion cover to clean.
- Cushion Inner: Polyester
- Cushion Cover: Polar fleece

## DISPOSAL:

- Dispose of all paper, cartons and plastic in accordance with your local recycling regulations.
- At the end of a product's life span please dispose of it at an authorised waste recycling centre.