



## Specification

Input:	12V d.c./1.5A
Timer:	15mins
Consumption:	18W

## Features

- An easy way to reduce stress and the everyday strain on your body from travel, work and other stress factors.
- 5 massage motors relax the back and thighs.
- Seat vibration setting with 3 speed settings.
- Easy-to-use hand controller with storage pouch.
- Adjustable straps to secure to your seat.
- Soothing heat treatment in lumbar region for more intensive relief.




WARNING:

**Do not operate controls whilst driving!**

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

\*Calls cost 7 pence per minute plus your  
telephone company's network access charge

**Coopers**  
OF STORTFORD

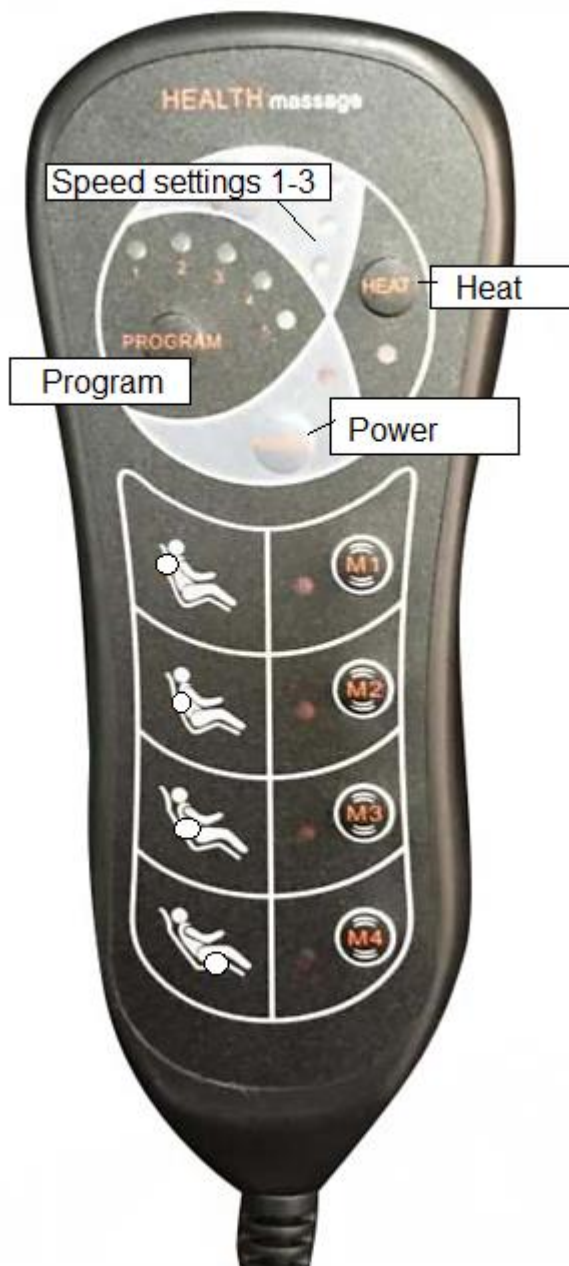

## Operation

- Connect the adapter with the device to the power source.
- <POWER> -Press Power key. Power LED lights up.

## Program:

You can choose between five different programs with different frequency vibration massage to relax muscles and relieve fatigue.

<Heat> Pressing the Heat key activates the heating function, LED lights up.

<M1>- Press M1 key to activate back vibration massage and LED lights.

<M2>- Press M2 key to activate middle lumbar vibration massage and LED lights.

<M3>- Press M3key for lower lumbar vibration massage and LED lights

<M4>- Press M4 key for seat vibration massage and LED lights

If pressed repeatedly it will switch intensity from High/Medium/Low and cease vibration. The LED light indicates strength of vibration.

## Maintenance & Storage

- After use and before cleaning, make sure you turn off the power sources.
- Do not tug and pull the device by the wire cable.
- Only use a soft and dry cloth to clean and wipe the device.
- Keep away from sources of heat and fire.
- Do not expose the device direct to the sun.

## Caution

- DURING SET-UP POWER LED IS FLASHING. DO NOT PRESS ANY FUNCTION KEY UNTIL THE POWER LED LIGHTS UP TO INDICATE HOMING IS DONE.
- DO NOT USE THE DEVICE IMMEDIATELY AFTER A MEAL.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY THE APPLIANCE AS A TOY AND SHOULD BE UNDER ADULT GUIDANCE.
- DO NOT USE DURING PREGNANCY, IF YOU SUFFER FROM ANY ILLNESS OR ARE UNDERGOING TREATMENT. CONSULT YOUR PHYSICIAN BEFORE USE.
- NO USER SERVICABLE PARTS.
- CHECK THE DEVICE BEFORE USE, DO NOT USE IF THERE IS ANY DEFECT OR ABNORMAL RUNNING WHILE USING.
- DO NOT USE WITH AN INVALID PERSON, AN INFANT OR A PERSON INSENSITIVE TO HEAT.

## SAFETY INSTRUCTIONS:

- WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:
- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT USE OUTDOORS.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

## DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

