



## Technical Details

Power details: 220V-240V ac., 50Hz, 300W  
Material: Ceramic disc 100%Polycarbonate  
Size: 150mm diameter x62mm height  
Charging time: 5 minutes  
Holding time: 2-6 hours

**Five minutes charging use 2-6 hours**

### WARNING

**DO NOT USE WHEN CHARGING.  
DO NOT COVER WHEN CHARGING.**

## Instruction for use:

Remove the heat pod from the fabric cover and connect the power lead and plug into a wall socket. The left hand indicator light will light up. Charging will be complete in about 5 minutes and the indicator light will switch off. Unplug the heat pod, then remove the power lead and place into fabric cover. Then wait 10-15minutes for the temperature to reach its highest point.



- If the indicator light does not turn off after charging for a long time, remove the plug at once and place it out of reach of children. Do not cover.
- DO NOT leave unattended when charging.
- Caution: You must place the heat pod into the fabric cover after charging to avoid burns as the temperature keeps rising after 10-15minutes.
- Once the temperature has dropped significantly, the pod can be recharged. If the surface temperature is still high, there is no need to recharge.
- DO NOT use or cover heat pod when charging.

### CARE AND CLEANING INSTRUCTIONS:

- Unplug and let heat pod cool down before storing it away.
- Store the item in a cool, dry place.
- Wipe with a clean dry cloth.


### PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 3-amperes should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

#### The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

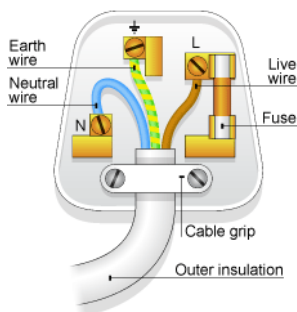

The diagram shows the key features of a correctly wired three-pin mains plug.

### DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

