



Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Cordless Screwdriver

Controls; Pistol Driver:

1. Keyless Chuck
2. Charging port
3. Forward/Reverse Switch



SPECIFICATIONS

Screwdriver:

Voltage: 3.6V (DC)
Torque: 3 (Newton Meter)
Speed (no load): 180RPM

AC Adaptor:

Input: 100V-240V (AC)/ 50-60Hz
Output: 5 Volts (DC)
Charging Time: 3 hours to fully charge battery for 1 hour usage



*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Components:

- Cordless Screwdriver
- AC Adaptor

Accessories:

- 32pcs bits
- 8 pcs x hex sockets (5mm – 12mm)
- 2pcs drill bits
- 1pc extension bar
- 1pc universal joint

Charging the Battery:

- Be sure to place the tool on a clean dry surface.
- Insert AC adaptor into the Charging Port located on the back of the unit.
- Plug the AC adaptor into the closest wall outlet.
- Allow 3 hours for the battery to become fully charged.
- Switch on the mains socket power supply. The red indicator light will illuminate to show the battery is charging.
- The red light will remain illuminated until the charger is connected (do not charge the screwdriver for more than 6 hours).
- Disconnect AC adaptor from the socket after charging.



Operation:

- Insert the bit into the chuck until it snaps into place.
- Grasp the tool firmly with both hands, align the bit with the screw and press it firmly into the screw.
- The screwdriver is fitted with a forward/reverse rocker switch, to change the direction of rotation.
- Start the tool by squeezing the Forward/Reverse trigger switch. Press the top of the switch to turn the screw FORWARD (tighten fixings). Press the bottom of the switch to REVERSE the screw (loosen fixings).
- To stop rotation, release the switch.



Basic safety precautions should always be followed, failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.



*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Work Area

- Keep your work area clean and well lit. Cluttered benches and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep bystanders, children and visitors away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CHARGING CORD, PLUG OR ITEM IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN FULLY CHARGED.
- DO NOT CHARGE WITH A DAMAGED CORD OR PLUG OR IF THE ITEM HAS BEEN DAMAGED IN ANY MANNER.
- THE USE OF ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- NEVER USE THE CORD TO CARRY THE TOOL. KEEP CORD AWAY FROM HEAT, OIL, SHARP EDGES OR MOVING PARTS. REPLACE DAMAGED CORDS IMMEDIATELY. DAMAGED CORDS MAY CREATE A FIRE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAIN VOLTAGE IN YOUR HOME.

Personal Safety

- STAY ALERT, WATCH WHAT YOU ARE DOING, AND USE COMMON SENSE WHEN OPERATING A POWER TOOL. DO NOT USE THIS TOOL WHILE UNDER THE INFLUENCE OF DRUGS, ALCOHOL, OR MEDICATION. A MOMENT OF DISTRACTION WHILE OPERATING POWER TOOLS MAY RESULT IN SERIOUS PERSONAL INJURY.
- DRESS PROPERLY. DO NOT WEAR LOOSE CLOTHING OR JEWELRY. KEEP YOUR HAIR, CLOTHING, AND GLOVES AWAY FROM MOVING PARTS.
- AVOID ACCIDENTAL STARTING, CARRYING TOOLS WITH YOUR FINGER ON THE SWITCH INVITES ACCIDENTS.
- DO NOT OVERREACH. KEEP PROPER FOOTING AND BALANCE AT ALL TIMES TO ENABLE BETTER CONTROL OF THE TOOL IN UNEXPECTED SITUATIONS.
- USE APPROPRIATE SAFETY EQUIPMENT FOR THE CONDITIONS. ALWAYS WEAR EYE PROTECTION, DUST MASK, NON-SKID SAFETY SHOES, HARD HAT OR HEARING PROTECTION AS APPROPRIATE.
- DO NOT TOUCH MOVING PARTS. ALLOW THE POWER TOOL ACCESSORIES (BIT AND BLADES ETC.) TO COOL BEFORE TOUCHING THEM. THEY CAN BECOME EXTREMELY HOT DURING USE AND CAN BURN YOUR SKIN.



*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Tool Use and Care

- Use clamps or other practical ways to secure and support the work piece to a stable platform. Holding the work piece by hand or against your body is unstable and may lead to loss of control.
- Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.
- Do not use tool if switch does not turn it on or off. A tool that cannot be controlled with the switch is dangerous and must be repaired.
- Store idle tools out of reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.
- Check for misalignment or binding of moving parts. Breakage of parts, and any other condition that may affect the tool's operation. If damaged, have the tool serviced before using.

Service

- Tool service must be performed only by qualified repair personal. Service or maintenance performed by unqualified personnel may result in a risk of injury.

Maintenance:

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Do not allow any liquids to get inside the tool. Risk of electric shock.
- Use only mild soap and a damp cloth to clean the cordless screwdriver. Do NOT use abrasive cleaners or sharp utensils to clean.
- Wipe with a soft, dry cloth.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a mains adapter.

DISPOSAL:

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.



*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD