

**SPECIFICATION :**

Power source:	AC 240V~ 50Hz DC 6V, 4 x 'D' size batteries, not included
Power consumption:	5W
Audio power:	500mW
Frequency range:	FM 88 - 108MHz
Tape speed:	4.75 cm/sec
Wow & flutter:	Less than 0.35% RMS
Recording system:	AC Bias
Speaker:	8 ohm; 2W

Please read these instructions carefully before operating this unit and retain it for future reference.

AC power :

Connect the provided AC power cable from the AC jack at the back of the unit to the AC mains socket. Make sure the voltage is compatible.

Note :

When AC adaptor cable is connected to the unit, the battery power will be cut off automatically. Unplug the AC power cable if not in use for a period of time. Only use the provided AC power cable.

Battery operation:

Insert the batteries as below :

Push the battery cover, where located at the back of the unit, towards the OPEN mark to open the battery cover.

Insert 4 x 'D' size batteries (not included) according to the polarity diagram marked inside the battery compartment.

Replace the battery cover.

Note :

- Disconnect the AC cable before installing the batteries.

- Remove the batteries if not in use for a period of time.

RADIO :

- Slide the function key to 'RADIO' position to turn on the radio.
- Adjust the TUNING control to your desired FM station.
- Adjust the VOLUME control to your desired level.
- Slide the function key to 'TAPE' position to turn off the radio.

WARNING :

Always set the 'VOLUME' control to the lowest level before turning on the radio or play a cassette, and adjust the volume level to your desired level after you turn on the radio or play a cassette.

Antenna :

You can adjust the antenna length or angle for better reception.

Headphone :

Plug your headphones (not included) with 3.5mm stereo plug, into the HEADPHONE jack, which is next to the VOLUME control of the unit, for private listening. The speaker on the unit will automatically disconnect when headphones are plugged in.

TAPE OPERATION :

Deck control buttons :

PAUSE	Press to stop the tape operation temporarily. Press again to resume.
STOP/EJECT	Press to stop all operations. Press again to open the cassette door.
F.FWD	Press to start rapid tape winding in forward direction. Press the STOP/EJECT button when you want to stop the winding.
REWIND	Press to start rapid tape winding in reverse direction. Press the STOP/EJECT button when you want to stop the winding.
PLAY	Press to start playing tape.
RECORD	Press to start tape recording.

Playback :

- Slide the function key to 'TAPE' position.
- Press STOP/EJECT button to open the cassette door.
- Put in a cassette tape with the side to play facing out, and close the cassette door.
- Press the PLAY button to activate playback.
- Adjust the volume control to the desired level.
- Press the PAUSE button when you want to stop playback temporarily.
- Press the STOP/EJECT button when finished. Or it will stop automatically when the playback is finished.

Recording :

You can record audio from various sound sources using the built-in microphone, which is located between the volume control and function key(TAPE . RADIO).

Record the sound sources as below :

- Place the unit within 90cm of the sound source.
- Press STOP/EJECT button to open the cassette door.

- Put in a cassette tape and close the cassette door.
- Press F.FWD or REWIND to set where you want to start the recording.
- Press both RECORD and PLAY button to start recording.
- Press STOP/EJECT button to stop recording.

Record the radio as below :

- Slide the function key to 'RADIO' position.
- Adjust the 'TUNING' control to set which station you want to record.
- Adjust the 'VOLUME' control to the desired level.
- Press STOP/EJECT button to open the cassette door.
- Put in a cassette tape and close the cassette door.
- Press F.FWD or REWIND to set where you want to start the recording.
- Press both RECORD and PLAY button to start recording.
- Press STOP/EJECT button to stop recording.

Note :**Record for personal home use only.**


Make sure the erase protection tabs, which are located on the top of the tape, have not been removed. Otherwise, the tape cannot be used for recording.



Do not force down the RECORD and PLAY button if the erase protection tabs have been removed, it may damage the unit. The recording will stop automatically when the tape ends.

CLEANING :

- Disconnect the unit from mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, use a soft, dry cloth for cleaning.
- Use mild soap and a damp cloth to clean the case.
- Use cotton swab soaped with tape head cleaner or isopropyl alcohol to clean the tape heads, pinch roller and capstan, and then wipe dry with another cotton swab. Press PLAY, F.FWD or REWIND button to help cleaning the tape heads, pinch roller and capstan more evenly.
- Periodic cleaning of the tape heads, pinch roller and capstan are necessary to maintain good sound reproduction.

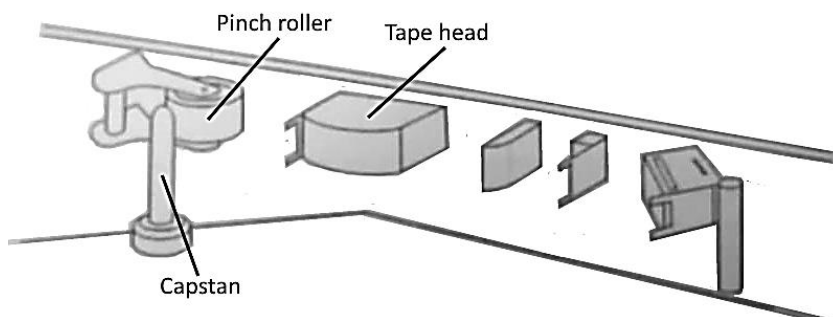

CARE AND MAINTENANCE :

- Never use metal objects on or near the tape heads. Do not allow any cleaning material to fall into the tape assembly.
- Do not tamper the internal components or settings of the unit.
- Avoid leaving the unit in direct sunlight or hot, humid or dusty environments.

SAFETY INSTRUCTIONS :

- READ ALL INSTRUCTIONS BEFORE USE.
- WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:
- DO NOT ALLOW THE UNIT TO GET WET OR NEAR WATER.
- DO NOT USE THE UNIT IN HUMID OR DAMP CONDITIONS.
- STOP OPERATION IMMEDIATELY IF ANY LIQUID OR SOLID OBJECT FALL INTO THE CABINET.
- DO NOT OPERATE THE UNIT NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR ANY APPARATUS THAT PRODUCE HEAT.
- NEVER DISCONNECT THE UNIT BY PULLING THE CORD.
- THE VENTILATION SHOULD NOT BE IMPEDED BY COVERING THE OPENINGS WITH ANY OBJECTS.
- SLOTS AND OPENINGS IN THE CABINET AND AT THE BACK ARE PROVIDED FOR VENTILATION, TO ENSURE RELIABLE OPERATION OF THE UNIT AND TO PROTECT IT FROM OVERHEATING. THESE OPENINGS MUST NOT BE BLOCKED OR COVERED. THE OPENINGS SHOULD NEVER BE BLOCKED BY PLACING THE UNIT ON A BED, SOFA, RUG OR OTHER SIMILAR SURFACE. THIS UNIT SHOULD NEVER BE PLACED NEAR OR OVER A RADIATOR OR HEAT SOURCE. THIS UNIT SHOULD NOT BE PLACED IN A BUILT-IN INSTALLATION SUCH AS A CLOSED BOOKCASES OR RACKS UNLESS PROPER VENTILATION IS PROVIDED.
- POSITION THE POWER CABLE AND OTHER CONNECTED CABLES SO THAT THEY ARE NOT LIKELY TO BE WALKED ON, PINCHED OR WHERE ITEMS CAN BE PLACED ON OR AGAINST THEM.
- THERE ARE NO USER SERVICEABLE PARTS IN THE UNIT. WHEN SERVICING, REFER TO QUALIFIED SERVICE PERSONNEL.
- CONSULT WITH YOUR DEALER IF YOU ARE EVER IN DOUBT ABOUT THE INSTALLATION/OPERATION/SAFETY OF THE UNIT.
- DISCONNECT THE UNIT FROM ALL POWER SOURCES DURING LIGHTNING STORMS OR NOT TO BE USED FOR A LONG PERIOD OF TIME.
- PLACE THE UNIT ON A FLAT AND EVEN SURFACE.
- SET THE VOLUME CONTROL AT A LOW SETTING BEFORE USING THE UNIT.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595

www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your
telephone company's network access charge

- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING (UK & IRELAND)

This Cassette Radio Player is fitted with a 13A Moulded plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely.

Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

If this plug breaks, then seek a qualified electrician to replace this with a rewire-able BS1363 13 Amp plug.

Battery caution:

- Keep batteries away from children and pets.
- Use only the size and type of batteries specified.
- Be sure that the batteries are installed according to the polarity diagram marked inside the battery compartment. Wrong polarity may damage the unit.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- If the unit is not to be used for a long period of time, remove all the batteries.
- Do not try to recharge batteries that not intended to be recharged, it can overheat and rupture.
- Do not dispose of batteries in fire, it may cause leakage or explosion.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.



- At the end of the product's lifespan, please dispose of it at an authorised household WEEE waste recycling centre.