
正面

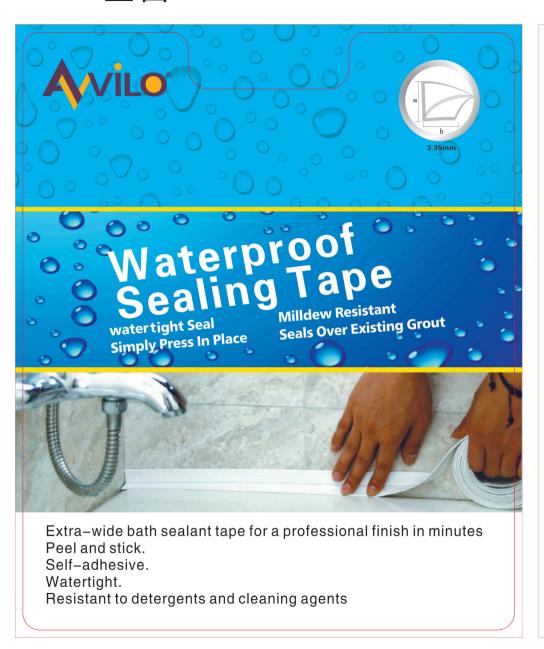


反面




Directions:

- 1. Keep the installation area clean and dry
- 2. Measure the length of the area to be sealed to determine the correct length and cut the strips accordingly
- 3. Take out the strip, measure the same length as the area and mark on the strip with the pencil, then cut it
- 4. Peel off 5cm of the adhesive tape from the back of the product, and fold into 90 degrees, and then put the strip on the place where you need to seal, keep peeling the tapes until you finish the installation.
- 5.Cut the butt joint side into 45 degrees when the product needs to be pasted in a 90 degree corner (as shown in figures A–D)
- 6 Ideal temperature to apply the product is 25 degrees Celsius. If the room temperature is lower, use hair dryer to heat up the adhesive backing before sealing for better results
- 7. While installing, press firmly over the length of tape to ensure a tight seal
- 8. Keep the area dry for at least 24 hours for the best effect









Product Code: E192128

Made in China for S&S Enterprises Ltd, 26 Perivale Park, Perivale, Middlesex, UB6 7RL

