
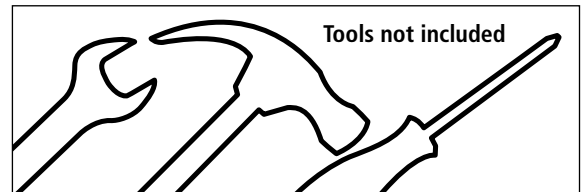


# Bed in Drawers 8228

## Instructions

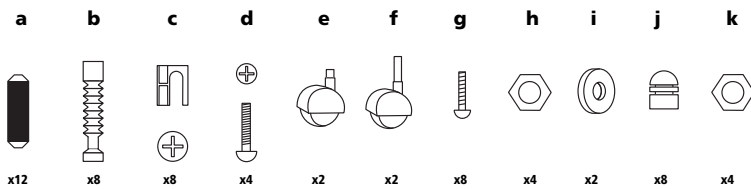


### PARTS LIST

- a. 12x Dowel pins
- b. 8x Cam screws
- c. 8x Cam locks
- d. 4x Base panel bolts
- e. 2x Short front castors
- f. 2x Long rear castors
- g. 8x Drawer knobs bolts
- h. 4x Nuts (for each castor)
- i. 2x Spacers (for rear castors)
- j. 8x Drawer knobs
- k. 4x Nuts (for base panel bolts)
- L. 1x Top panel (drawer component)
- M. 1x Front panel (drawer component)
- N. 2x Side panels (drawer component)
- O. 1x Folding bed frame
- P. 1x Mattress
- q. Safety lock

### ASSEMBLY

1. Carefully remove bed frame/mattress and drawer components from the packaging within both boxes (this unit will be delivered in two boxes).
2. Place the folding bed frame, drawer components and all fixings on a flat, clean surface. Please check all the fixings are enclosed before starting assembly. The castors can be located in between the mattress. It is recommended that assembly is performed in the vicinity of the desired location. The combined weight of assembled Bed in Drawers is 45kgs.
3. Take 1x top panel (L) and insert 4x dowel pins (a) and 4x cam screws (b) with screwdriver.
4. Take 1x side panel (N) and insert 4x dowel pins (a) and 2x cam screws (b) with screwdriver.
5. Repeat process in point 4.

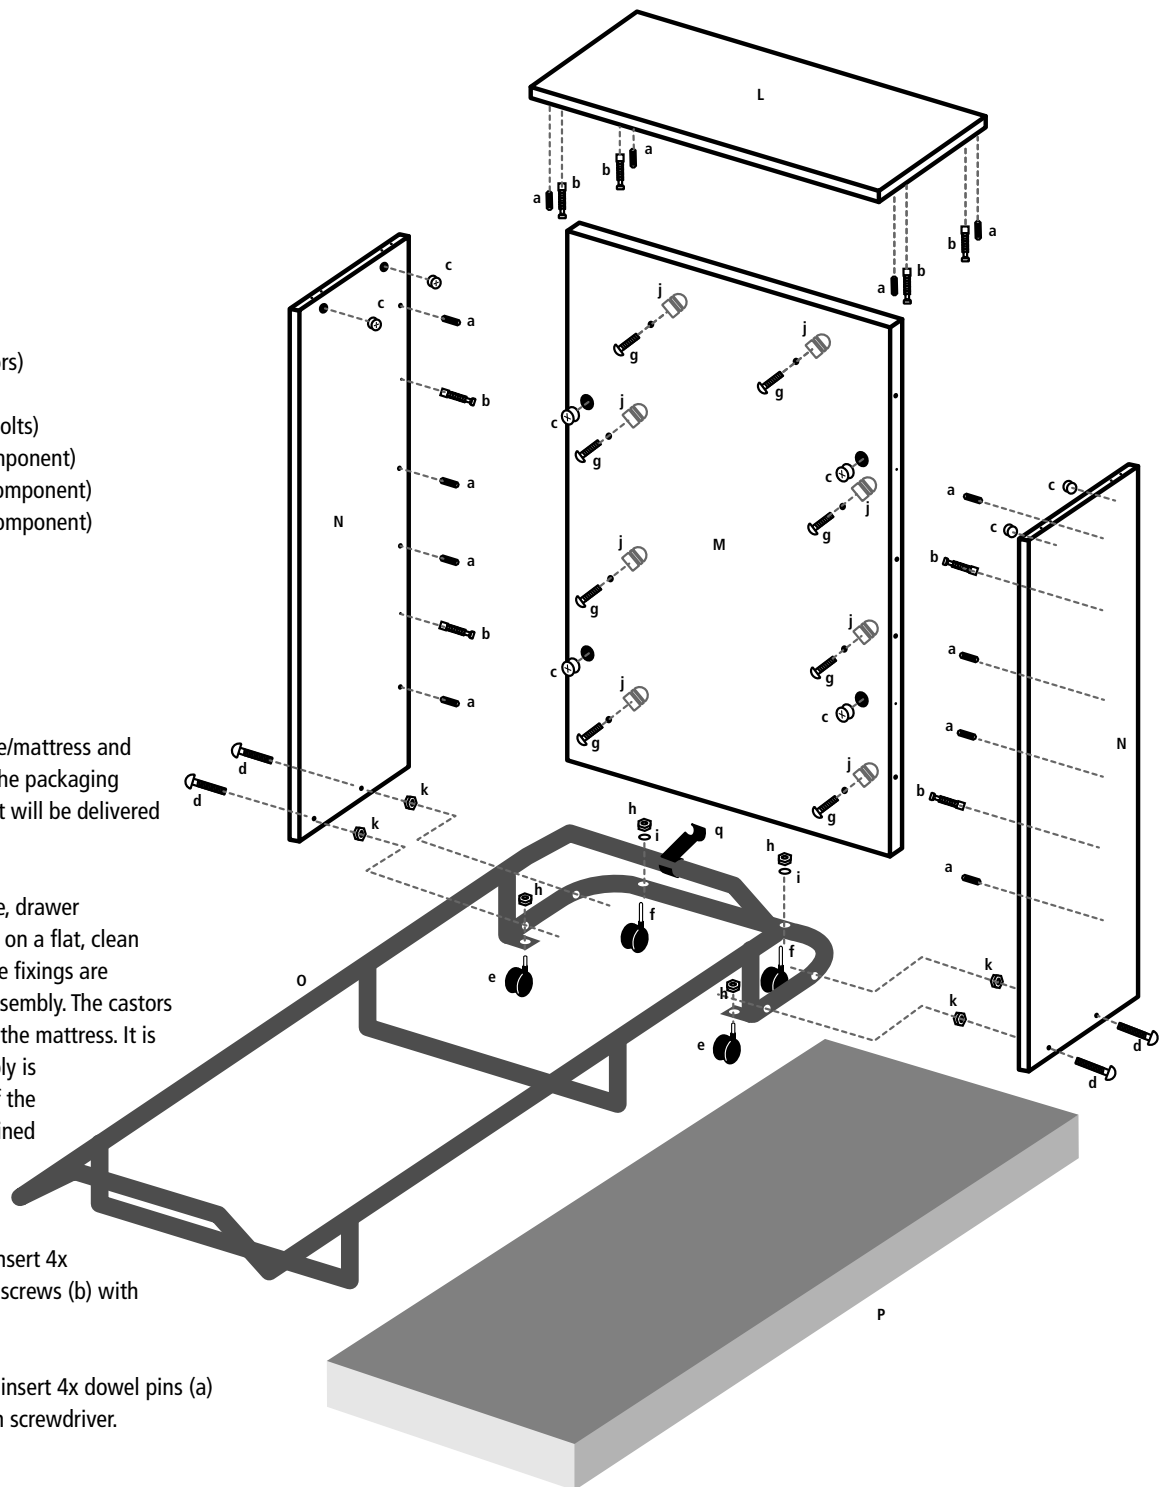

Please read carefully before use and retain for future reference.

**Coopers**  
OF STORTFORD

6. Take 1x front panel (M) and attach 8x drawer knobs (j) with 8x drawer knob bolts (g) using a screwdriver.

7. Attach the front panel (M) and the two side panels (N) so that the dowel pins (a) and cam bolts (b) align. Carefully secure all three panels together in place with 4x cam locks (c) using a screwdriver.

**Please note this part of the assembly may require two persons.**


8. Attach the top panel (L) and the two side panels (N) and front panel (M) so that the dowel pins and cam bolts align, carefully secure in place with 4x cam locks (c) using a screwdriver.

**Please note this part of the assembly may require two persons.**



Long rear castor      Short front castor

9. Carefully position the bed frame on its side and insert 2x long rear castors (f) plus 2x spacers (i) into the bed frame as shown. Insert 2x short front castors (e) into the bed frame as shown. Secure in place with 4x nuts (h) for each castor with a spanner. Please note that you will need to insert 1x spacer (i) over each rear castor (f) before inserting it into the bed frame.

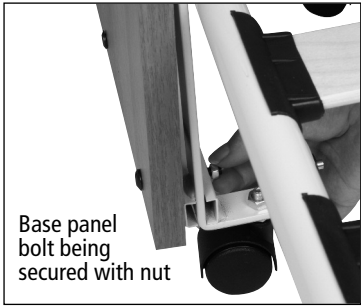

Base panel bolt being secured with nut

10. Carefully reposition the bed frame (O) so it sits on all 4 castors, release the safety lock (q) and open the bed fully. Place the bed frame against the inside of the constructed mock drawer front. Insert 4x base panel bolts (d) through the outside of both side panels (N) and into the frame of the bed. Secure in place with 4x nuts (k) and tighten firmly with a spanner.

**Please note this part of the assembly may require two persons.**

11. Close the bed frame and mattress (P) and secure in place with the safety lock. Your bed is now ready to use. Position the bed in the desired location.



**WARNING**

- Please do not place hands near hinges when opening the bed.
- Please be careful when opening and closing the bed as safety lock may cause potential harm to the user.
- The recommended weight load for this bed is 100kgs (15st 10lb).

**TECHNICAL SPECIFICATION**

Measurements in box: H102cm xW86cm xD36cm (40in x33in x14in).

Folded out: L191cm xW78cm xH34cm (75in x30in x13in).

**DISPOSAL**

- Dispose of all paper, cartons and plastic in accordance with your local recycling regulations. At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400  
Fax: 01279 756595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD