
4 Shelf Boltless Storage Unit 8977


Please read carefully before use and retain for future reference.

Instructions

v001: 02/09/15



4. Fit Long and Short Shelf Supports where you want the second Shelf to be positioned. These Supports must not be in the top 2 holes of the Keyhole Upright (Pic 3). (We have shelf position recommendations listed below).

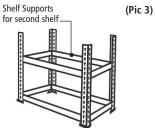


ASSEMBLY


- 1. Attach a Plastic Foot to 1 end of 4 of the Keyhole Uprights. NOTE: Ensure keyholes are the correct way up (Pic 1).
- Reyhole Upright (Pic 1)


 Reyholes to be this way up

 Plastic Foot
- 2. Fit 2 Short Shelf Supports and 2 Long Shelf Supports to the bottom holes (for maximum strength) of 4 Keyhole Uprights by slotting the Keylock Pins in the Supports into the Keyholes in the Uprights and tapping firmly with a hammer to seat in place (Pic 2).

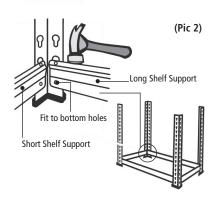



- 3. (GO TO 4 IF YOU ARE NOT ASSEMBLING AS A WORKBENCH).
- a) Fit 2 Short Shelf Supports and 2
 Long Shelf Supports for the top of the Workbench into the holes at the top of the Keyhole Uprights.
- b) Assemble the remaining Keyhole Uprights and Long and Short Shelf Supports to maker either a Straight Workbench or a Corner Workbench, using the same method as above.
- c) Install MDF Shelves.
- d) Bolt the 2 halves of the Workbench together if needed (nuts and bolts supplied).

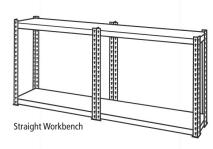

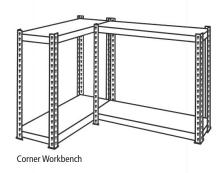


- Fit 4 Leg Joiners to the bottom holes in each of the 4 remaining Keyhole Uprights. Leg Joiner MUST be this way up (Pic 4).
- 6. To make 1 side of the top half of the Storage Unit: Fit 2 Short Shelf Supports to 2 Keyhole Uprights. Fit the top Support first. It must be located in the top 2 holes of the Upright. Then fit the 3rd Support in your chosen position (Pic 5). Repeat this procedure to make the second side.
- **7.** Fit these 2 top halves to the bottom half using the Leg Joiners (Pic 5).
- 8. Fit the 2 Long Shelf Supports at the 3rd shelf position and then fit the last 2 Long Shelf Supports at the top shelf position.
- Place the 4 MDF shelves onto the 4 Shelf Supports and fit the last 4 Plastic Feet to the tops of the Uprights.

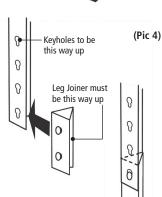

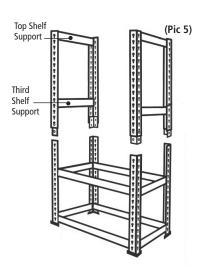

SHELF POSITION RECOMMENDATION

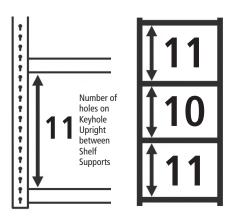

Disposal of Packaging:

Dispose of the packaging at your local recycling centre.

Dispose of paper and carton separately from plastic bags at your local recycling centre.

Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.

*Calls cost 7 pence per minute plus your telephone company's network access charge.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756595 www.coopersofstortford.co.uk

