



NOTE: Two persons may be required to hold the cast iron uprights whilst fixing the wooden slats.

YOU WILL REQUIRE: (not supplied)

Phillips head screwdriver
Tape measure
Pencil
10mm spanner


PARTS INCLUDED: (please check before use)

16 x metal washers
16 x plastic nut caps
16 x metal nuts
14 x long bolts
2 x short bolts
7 x short wood screws
1 x grate back bench
2 x cast iron leg frame uprights
4 x 122cm wooden slats
1 x 122cm wooden slat with curved lip
1 x strap
2 x stabilizer bars

ASSEMBLY:


Step 1.

Whilst holding each cast iron leg frame end upright on a flat surface and in a parallel position; attach all five long wooden slats in positions 1,2,3,4 and 5 (see image below). The long wooden slat with the lip goes in position 5. Place each wooden slat with the counter sunk hole facing upwards. Insert 10 x long bolts, washers and nuts with a Phillips screwdriver and spanner. Loosely tighten the each nut at this stage.

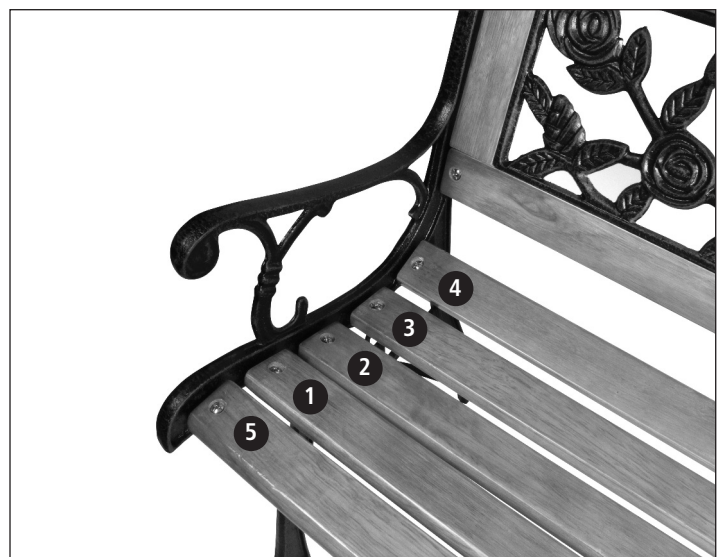

Step 2.

Align the back seat to the cast iron leg frame uprights (make sure that the design is in the correct position, see diagram below). Insert 4 x long bolts, washers and nuts. Make sure the counter sunk holes face towards the front of the bench. Do not tighten too hard at this stage.

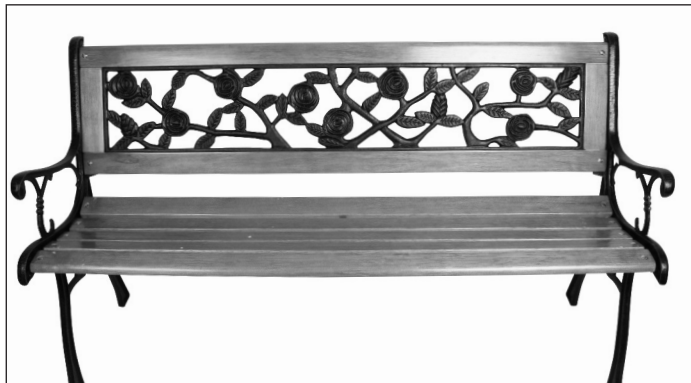

Using 1 of the stabilizers attach one end to the cast iron upright using 1 x short bolt, washer and nut and using 1 x wood screw attach the other end of the rod to wooden slat (see diagram below). Repeat this process for the other stabilizer on the adjacent side of the bench.




Step 3.

With the help of another person turn the bench over (as shown below). Using a tape measure mark the centre point of all 5 wooden slats. Each slat will measure 122cm so you will need to mark 61cm from the edge of each wooden slat.



Using the strap place over the 5 marked points you have made on all five wooden slats. Using a Phillips screwdriver and 5 x wood screws attach the strap to the wooden slats.

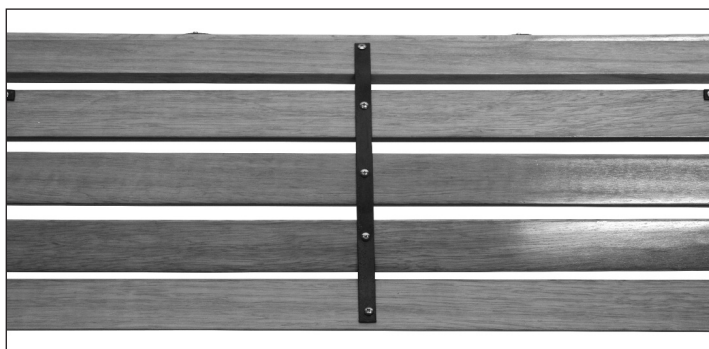

Step 4.

Return the bench to its upright position and tighten all 16 nuts and bolts. Attach the 16 plastic nut caps over the exposed nut and bolt ends.



PACKAGING DISPOSAL:

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD