

Assembly Instructions



(W x D x H) 1.67m x 0.50m x 0.375m
Product Name: Large Cold Frame

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk


Large Cold Frame Assembly Instructions

Requires 2 person assembly.

Tools required: Cordless Drill & Pozi-drive Bit (PZ1&PZ2)/ Screwdriver, Hammer.

Large Cold Frame Pack List		
Item	Description	Quantity
A1/A2	Side Panel	2
B	Front Panel	1
C	Back Panel	1
D	Window Frame	2
E	Window Support	2
F	Perspex Sheet	2
G	Glazing Block	8

Fixings		
	50mm Screws	10
	25mm Screws	24
	25mm Nails	16
	Hinges	4

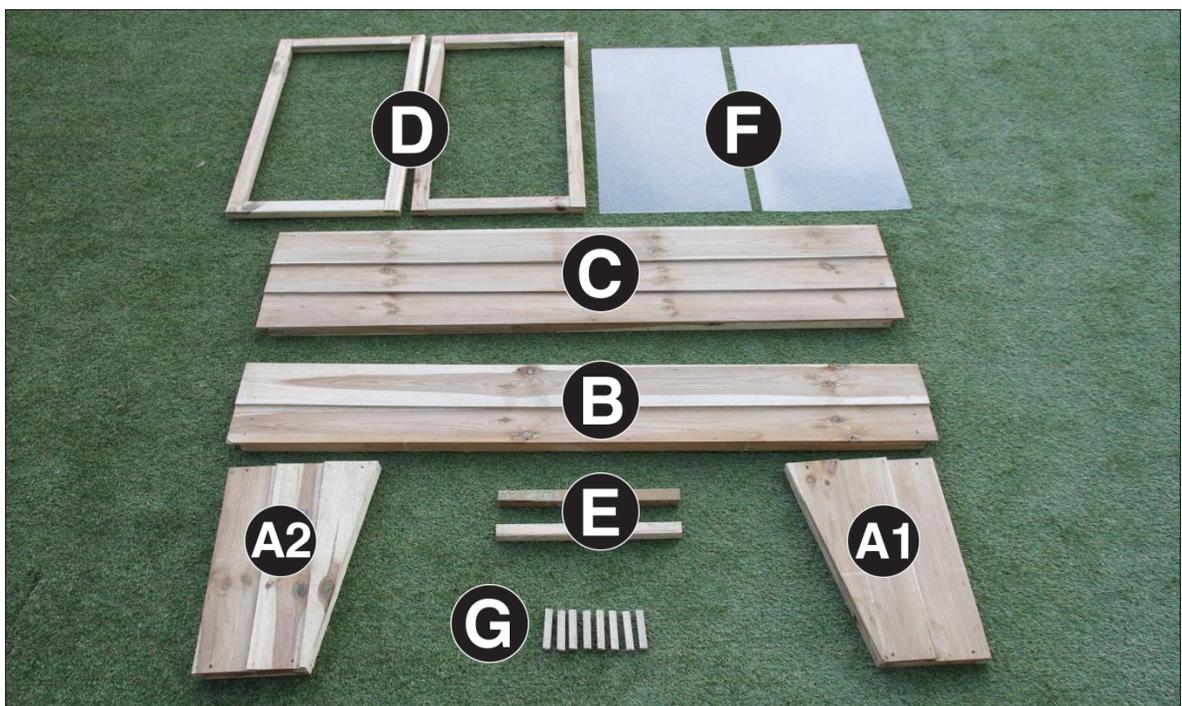

Please take a few moments to check all pack contents listed.

Assembly requires 2 persons.

Tools required: Cordless Drill & Pozi-drive Bit (PZ1 & PZ2)/ Screwdriver, Hammer.

1. Attach Side Panel A1 to Front Panel B and Back Panel C using 4no 50mm Screws – 2no per corner (Figs.1a &1b).

Repeat procedure for remaining Side Panel A2.

2. Attach 2no Hinges to Back Panel C and Window Frame D using 12no 25mm Screws (Figs.2a & 2b).

Repeat procedure for remaining Window Frame D.

3. Attach Window Support E to Side Panel A1 using 1no 50mm Screw (Fig.3).


Similarly fix remaining Window Support E to Side Panel A2.

4. Secure Perspex F to Window Frame D with 4no Glazing Blocks G and 8no 25mm nails – 2no per block (Fig.4).


Repeat procedure for remaining Window Frame D.

Large Cold Frame is now complete.


1a

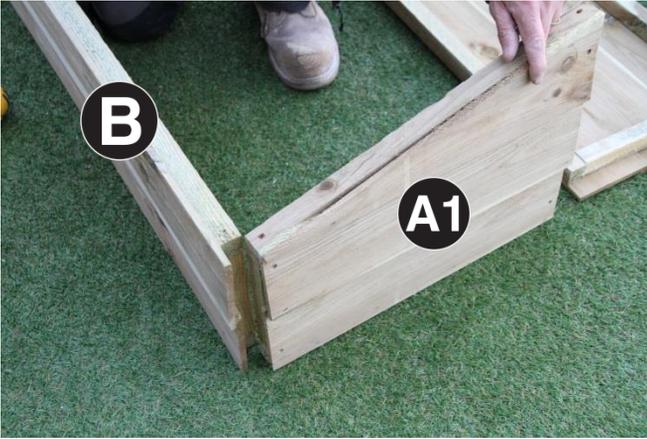


1b

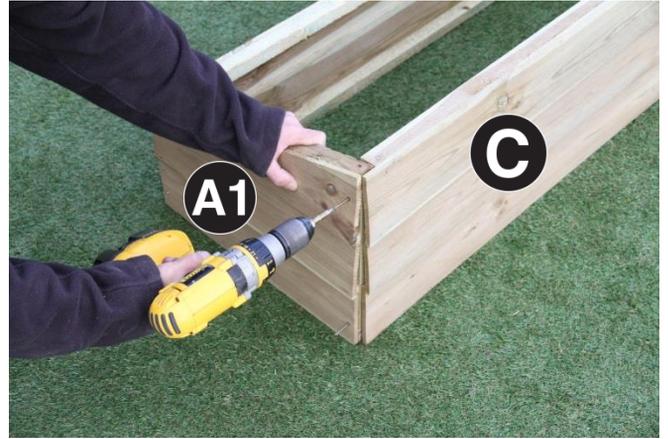


2a

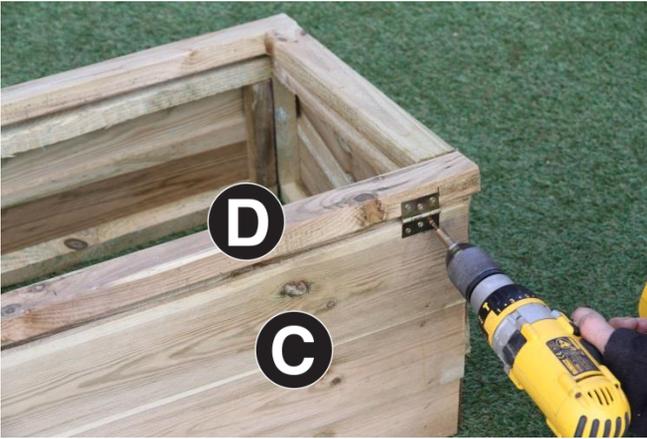

2b

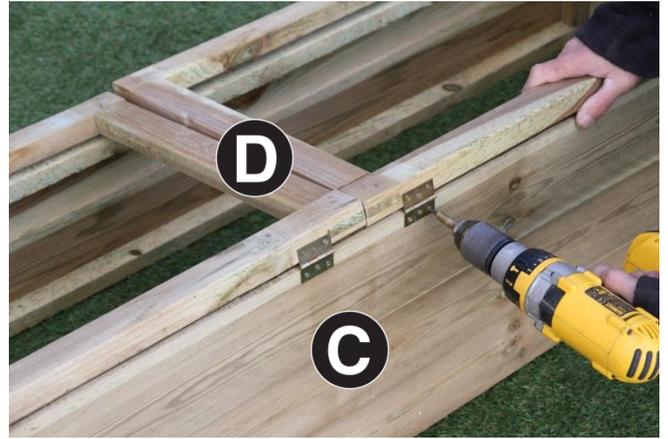

3

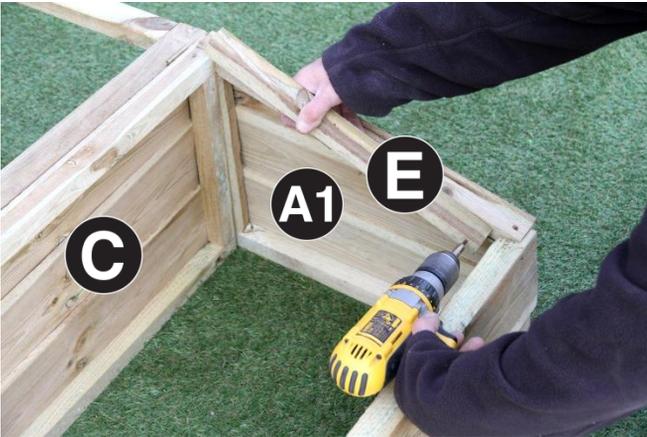

4

