

Hands Free Jar Opener

H100 v01: 14/08/20

Please read and retain these instructions for future reference

Basilico



Dimensions

19 x7 x9.5cm

Composition


ABS

- GRIPS DIFFERENT SIZED JARS AND OPENS WITH EASE
- WORKS AT THE PUSH OF A BUTTON
- GRIPS AND TWISTS
- TIME SAVING
- GREAT FOR ALL BUT ALSO THOSE WITH WEAK HANDS/WITH ARTHRITIS
- (NEED 2XAA BATTERIES NOT INCLUDED)

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

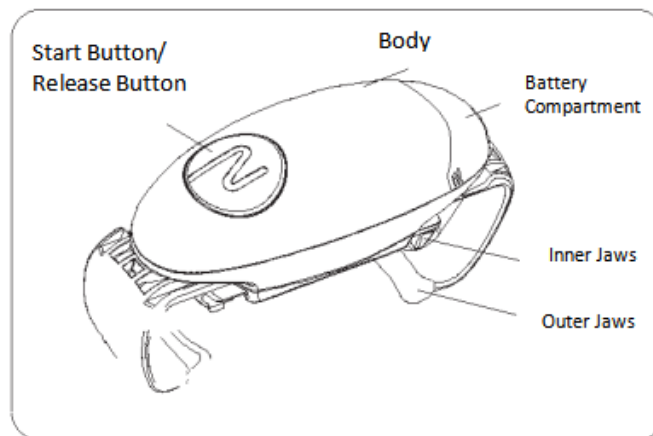

INTRODUCTION

Congratulations on your purchase of the Hands Free Jar Opener! You will soon be removing lids from jars with ease with our simple one-touch operation system. Strong enough for even the toughest jars, it's effortless, easy, and ideal for those with injured, arthritic or just plain busy hands. No need to twist, pull, struggle or risk injury when you can use your Hands Free Jar Opener!

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before using your Jar Opener.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk


- Close supervision is necessary when your Jar Opener is used by or near children. Ensure that they do not play with your Jar Opener.
- DO NOT touch moving parts during operation or when changing batteries.
- Keep hands, hair, jewellery, clothing, as well as spatulas and other utensils away from the jar opener moving parts during operation to prevent injury, and/or damage to the unit.
- If anything is trapped by the Jar Opener during operation, immediately press the Main button once to release.

GETTING STARTED

BATTERY INSTALLATION


Note: Keep hands away from the Inner and Outer Jaws while installing batteries.

1. Press the gripping area at the side of the battery door and pull it back. Insert 2 AA alkaline or rechargeable batteries into the battery compartment according to polarity. (Fig.1)
2. After installing batteries, replace the battery cover. Note: Remember to always replace batteries at the same time, never mix old and new types of batteries, and never mix batteries of different types or quality.

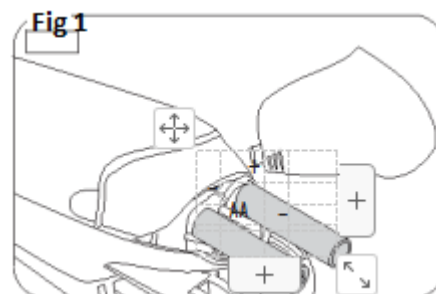


USING YOUR HANDS FREE JAR OPENER

1. Remove the paper or plastic neckband seal from the Jar.
2. Move the rubber grip of the Outer Jaws all the way down. (Fig.2)
3. With the Jar on a flat, non-slippery surface, place your Hands Free Jar Opener evenly on top of the Jar.

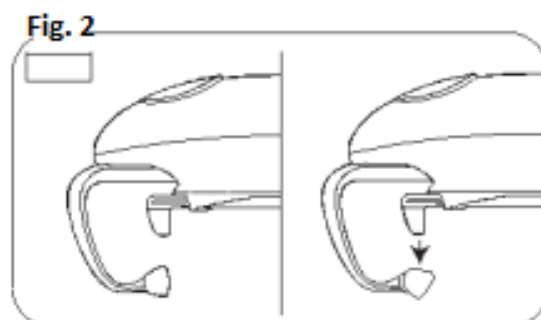

1. Press and hold the Start Button. The outer Jaws will begin to move in. Release the button when the Outer Jaws pause and the Inner Jaws begin to move. (Fig.3) Note: DO NOT put your fingers near or in the jaws during the operation process. Press the Release Button once to reset the unit.

Avoid contact with any of the moving parts during operation. Keep hands, hair, jewellery, clothing and utensils away from the moving parts to avoid injury and/or damage to your Hands Free Jar Opener.

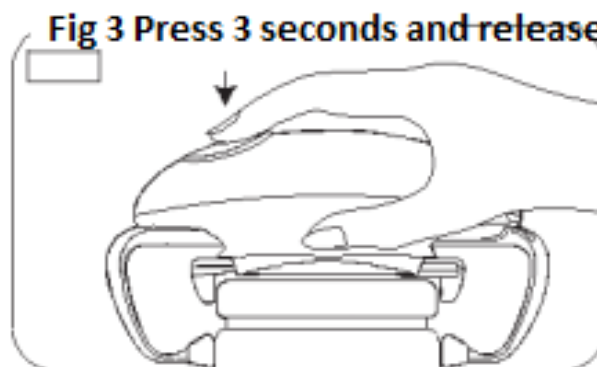

2. The Inner Jaws will grip the Jar Lid and then the Outer Jaws will resume their movement to hold the Jar securely. Then the Inner Jaw will rotate to open the jar lid.
3. After opening the lid, the jaws of your Hands Free Jar Opener will return to their original position and stop automatically.
4. Note: To prevent toppling and spillage when opening small or tall jars, please secure the jar with one hand and gently hold the Jar Opener Body with your other hand. Let the Jar Opener rotate until the lid is open.
5. When the Jar Opener switches off, lift the Jar Opener off the Jar. Always ensure that the lid is completely unscrewed from the jar by holding the jar with one hand while removing the lid with the other hand.
6. To re-open a jar that has been stored in the refrigerator, wipe the moisture from the Lid and Jar prior to using your Hands Free Jar opener (Any moisture might cause the jaws to slip).

CLEANING AND CARE

1. Gently wipe surfaces with a clean, damp, soft cloth.
2. Use only gentle and non-abrasive cleaners on your Hands Free Jar Opener.
3. DO NOT immerse the Jar Opener in water or any other liquids, as this may cause damage.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.


Please read and retain these instructions for future reference

v001: 14/08/20

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

