

# SOLAR POND OXYGENATOR

Item codes: M515

## Instructions for Use


v001: 16/01/24

Please read and retain these instructions for future reference

**GAINSBOROUGH**  
Garden & Wildlife

**Power Details:** lithium-ion battery(3.7V 18650 2600mah)  
Built-in rechargeable  
External DC 5V 1A input solar Panel(3w/6V)  
**Button Cell Compartment secured by screw.**

**Accessories:** 3M cable  
3W solar panel  
2\*1 M Oxygen tube

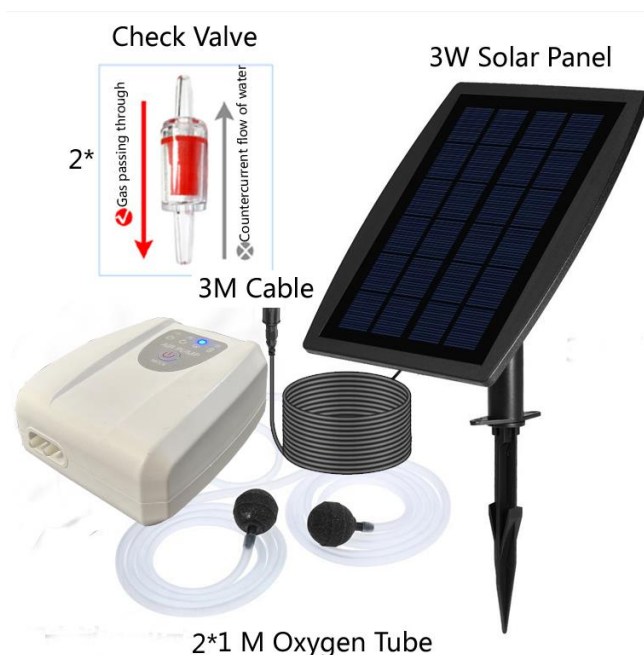

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new SOLAR POND OXYGENATOR.

### User Instructions:

1. Connect the oxygen tube, bubble stone, check vale and other accessories according to the correct method.
2. The oxygen pump should be placed on a smooth surface such as glass or ceramic tile to adsorb.
3. Long press "⏻" the button (3 seconds). Indicating that it has been turned on ,then press the button(3 seconds) Indicating that it has been turned off . After booting, press the button to select the desired mode, and the corresponding indicator light will be on.
4. Intermittent mode "🔄" : Run for 5secinds, pause for 3seconds, and cycle.
5. Continuous mode: '🔄' : Always play oxygen continuously.
6. Energy-saving mode "🔄" : oxygen cycle from small to large and then from large to small
7. The red light "🔴" is on when charging, and the green light is on when full. and the red light will flash rapidly when power is low.

### WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ANY APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC OUTDOOR USE.


- NOT FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT LEAVE SWITCHED ON OR UNATTENDED.

#### BATTERIES:

- **CONTAINS BUTTON CELLS**



- **IF LITHIUM BUTTON CELLS USED USE**

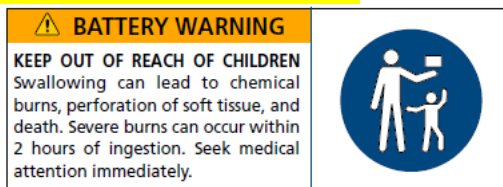

#### BATTERY SAFETY:

- **BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN. IF SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY SEEK IMMEDIATE MEDICAL ATTENTION.**
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BUTTON CELLS IN REVERSE.
- ENSURE THE BATTERY COMPARTMENT IS SECURED BY A SCREW OR SECURING DEVICE.
- IF THE BATTERY COMPARTMENT (DOES NOT CLOSE SECURELY, STOP USING THE PRODUCT AND KEEP IT AWAY FROM CHILDREN.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- **KEEP BATTERIES AWAY FROM CHILDREN AND PETS.**
- DO NOT MIX USED AND NEW BUTTON CELLS
- **NEVER DISPOSE OF BUTTON CELLS OR BATTERIES IN A FIRE.**

#### CARE AND CLEANING INSTRUCTIONS

- ALWAYS SWITCH OFF AND REMOVE BATTERIES BEFORE CLEANING.
- DO NOT IMMERSE IN WATER.
- DO NOT USE ABRASIVE CLEANERS OR SHARP UTENSILS TO CLEAN THIS APPLIANCE.
- WIPE SURFACES WITH A SOFT DRY CLOTH. DRY THOROUGHLY BEFORE FURTHER USE.
- STORE THE APPLIANCE IN A COOL, DRY PLACE.
- Please charge the oxygen pump when the battery is low. Please use DC5V charger and solar panel when charging.
- When the oxygen pump is placed below the fish tank, a check valve is required.
- Do not hold the oxygen pump on the side of the aquarium for a long time to avoid falling off.
- If not used for a long period of time, please fully charge it every 2 months.


#### BATTERY DISPOSAL

- SPENT OR EXPIRED BUTTON CELLS MUST BE DISPOSED SAFELY AWAY FROM CHILDREN ACCESS AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

#### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	Please Specify (includes ABS, Nylon)

#### CUSTOMER SERVICES:

Distributed by / Verteilt durch / Distribué par.

UK: The Enterprise Department Ltd.  
11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU  
Tel: 0330 331 0300

NI/EU:  
D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France  
Tel: (+44) 1279 701269

