


Please keep these instructions in a safe place for future reference

Important read before first use:

- Use the device on feet and heels only.
- Do not use this device anywhere else on the body except for the areas indicated above.
- Each buffing roller is recommended for one person only. The buffing roller should not be shared with others for hygiene reasons.
- Do not use if you have diabetes or poor blood circulation. If you have any other skin or other medical conditions, please consult with your physician prior to use.
- Do not use continuously for more than 2-3 seconds at a time.
- Do not use on skin that is red, irritated, inflamed, infected or blistered.
- Do not use on sores, warts or open wounds.
- Discontinue use immediately if you experience any pain or irritation.
- Overuse may cause skin irritation.
- Seek medical attention if skin becomes severely irritated or bleeds.
- For domestic use only.
- This product is not suitable for children.
- Store in a cool, dry place.
- Do not switch your device on if the buffing roller head is not attached.
- Do not drop or insert anything into any opening of the device.
- Keep the protective cover on your device when it is not in use.

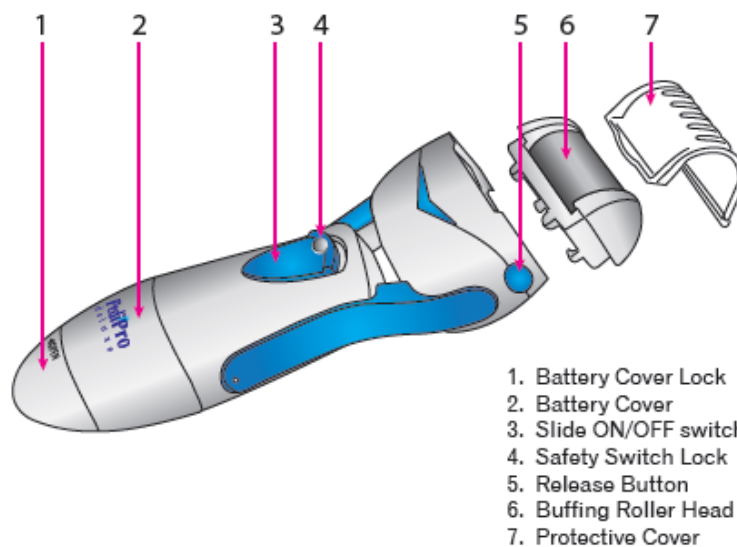

Battery Installation:

- Remove the battery cover by turning the cover lock anti- clockwise, then pull the cover away from the body of your device.
- Inset 2 x AA alkaline batteries into the compartment, ensuring to observe polarity. Please note that incorrect battery positioning can damage your product.
- Refit the battery cover and turn the lock 90 degrees to secure.
- Use only the batteries recommended.
- Insertion, removal and disposal of batteries should be done by an adult.
- Remove batteries from product if not using for a long time.
- Store batteries in a dry place at room temperature.

Operating Instructions:

- For best results, wash and fully dry skin before use.
- Remove the protective cover from the device and it is ready to use.
- Ensure that the buffing roller is correctly placed into the device.
- Turn the device on by pressing the safety lock, whilst simultaneously pushing the on/off switch up.
- Gently rotate and glide the device over the desired area. The device will stop if it is pressed too hard on the skin.
- Check if you have achieved the softness you desire. If not, gently glide the device over the area again for 2-3 seconds further.
- Turn the device off when finished.

Warning:

- Stop using if skin becomes irritated or sore.
- Do not use on skin continuously for more than 2-3 seconds at a time.

Cleaning:

- To ensure better performance, clean the device after each use.
- Detach the buffing head from the body and rinse under the tap after each use.
- Allow to dry before attaching the head to the body of the appliance.

Changing the Buffing head:

- Change the buffing head as needed for best results. One extra buffing head is included for each unit.
- Ensure the unit is off.
- Hold the head with one hand, and press the release button on the side of the unit using the other hand, the head can be lifted out and replaced.
- Place the new buffing head into the unit until you hear a "click" sound, this will ensure that the new head has fully installed properly.

Packaging:

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and card separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.

Technical Specification

Hard Skin Remover – Battery Operated

MODEL: 10243

2 x AA alkaline batteries

