



Technical Specification


Measurement: 50cm x35cm x 117cm

Weight: 3.7kg

Maximum weight load: 75kg

Maximum suitable pot height: 75cm (30")

Maximum suitable pot diameter: 50cm (20")

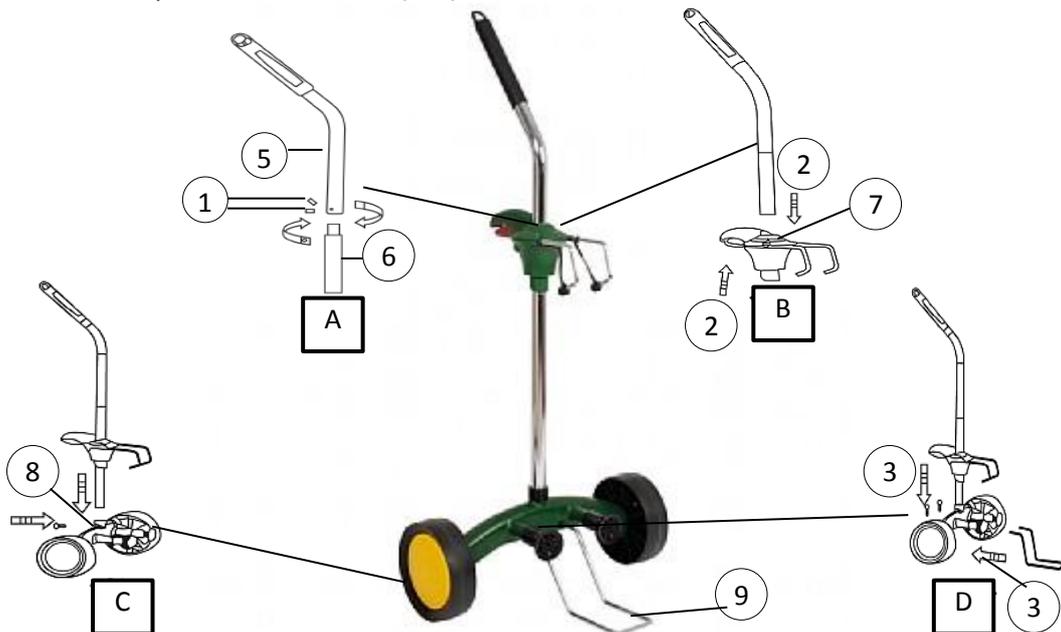

Assembly

Follow the below assembly instruction and use the Allen key supplied with the trolley to secure the hexagon bolts (1 and 2).

- A. Screw top pole to bottom pole section. Secure the pieces using the two small screws (1) and included Allen key. Ensure screws are inserted fully.

- B. Slide the moveable handle onto the assembled pole. Ensure you squeeze the trigger before trying to slide the handle onto the pole. Securing forks should be facing downwards.
- C. Take assembled pole and insert into wheeled base. Handle forks should be facing the same way as the extended suction cups on the base. Use the screw and washer (2) to secure handle to the base.
- D. Insert pot support forks into the base. Secure using the cotter pins (3). The pins will insert into the small holes in the support forks. Once inserted, take a pair of pliers and bend the cotter pins 90°. This will ensure the cotter pins stay in place.


To lift heavy items such as large pots, slide the assembled trolley so the lower suction cups come into contact with the base of the pot. Squeeze the trigger handle, and slide the handle down so the forks are able to grab the edge of the pot. Using your foot, gently push forward on the bottom of the trolley, while at the same time pulling back on the upper handle. Use caution on sloped surfaces.

Part list

No. Part	Quantity
1 M 6x8 Hexagon bolt/small screws	2
2 M 5x20 Hexagon bolt/screw and washer	2
3 Cotter pin 2.5x20	2
4 Hexagon wrench	1
5 Top pole	1
6 Lower pole	1
7 Removable handle	1
8 Pot support forks	1
9 Carriage	1




- Simply secure your pot between the two grips of the trolley and carefully manoeuvre your load to the area of your choice.

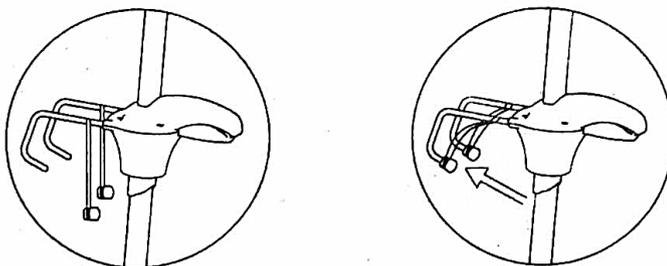

Note:

Ensure to use the included caps to cover the metal ends before moving any type of planter.

- Max weight load the trolley can withstand is 75kgs.

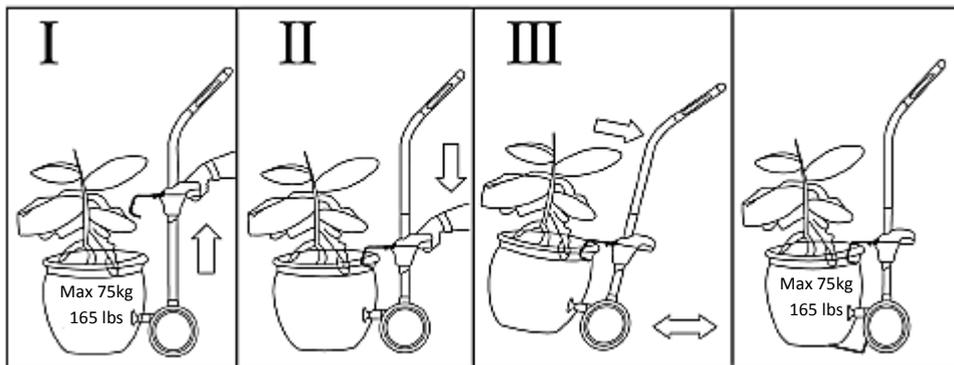

WARNING!

- Do not overload.
- Do not use the device while tired, ill or under influence of alcohol.
- Do not move loads that are too heavy for the operator.
- Do not use for transporting people
- Do not ride on the trolley.
- Do not use trolley if wheels are worn or bent.
- Do not use trolley if frame or carriage is bent, cracked or broken.

MAINTENANCE:

- Wipe down with a soft clean cloth. Dry thoroughly.
- Frequently inspect the state of the wheels.
- The screw assembly should be fastened when screws have loosened.
- Store the hand trolley indoors and keep dry.
- If necessary lubricate the bearing of the wheels.

Please read and retain for future reference

v003:29/04/20

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – the handle is made from the following recyclable plastic.



Code & Symbol	Type of Plastic	Commonly used for	Notes
	Polypropylene	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)
	ABS	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.