


## Parts

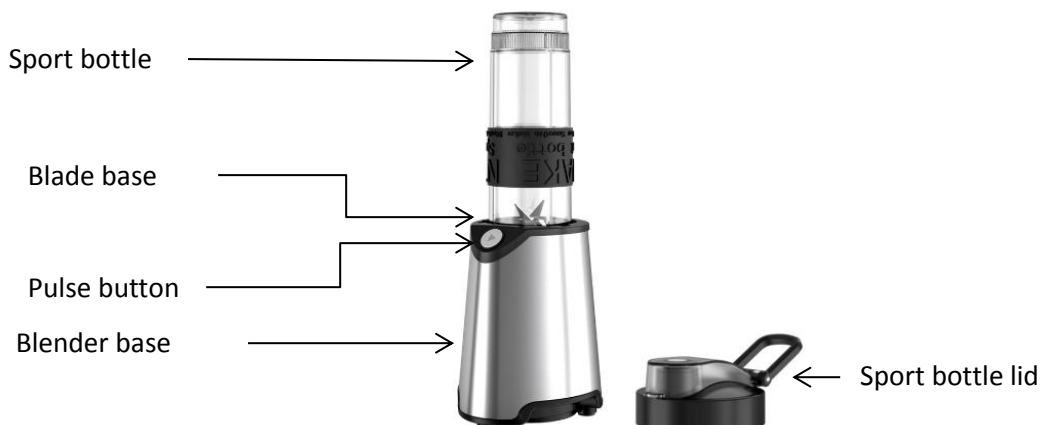

## TECHNICAL DETAILS:

VOLTAGE:	220-240V a.c.
POWER FREQUENCY:	50/60Hz
WATTAGE:	500W

## SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT USE OUTDOORS.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- **DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.**
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

## Usage of the blender

### WARNING

Before plugging the blender into a mains outlet socket, ensure the sport bottle is safely installed onto the blender base, as described below.

Unplug the blender base from the mains outlet before removing the sport bottle.

The power plug can be inserted into a mains outlet socket only after sport bottle is securely installed on blender base as per procedure below. Before removing the sport bottle from blender base, unplug the unit from mains outlet socket.

1. Place the sport bottle on a flat surface, open the bottle.
2. Fill the bottle with your favourite ingredients, do not fill above the bottle max level mark.
3. Screw the blade base onto the open end of the bottle.
4. Turn the sport bottle upside down, put the sport bottle and blade base together on the blender base, ensuring the three micro switch blocks are in the right position.
5. Press the pulse button to start the machine, hold the button to operate.
6. Do not operate the smoothie maker when empty.
7. If you want to stop the smoothie maker, please remove your finger from the pulse button.
8. After blending, turn the sport bottle over and place on a flat surface, take out the blade base, put the drinking lid on the sport bottle.

### Notes

1. The appliance must not be used continuously for longer than 60 seconds at a time. Allow sufficient time for the smoothie maker to cool down before using it again.
2. Only for liquids like water, milk and soft fruits like apple, banana, carrot, etc. Cut fruit into small pieces before putting it in the sport bottle.
3. For cool drink, please ensure ice cubes are no larger than 2x2cm weighing no more than 90g at a time. Add some liquid with the ice to blend.
4. The motor will automatically cut out when the sport bottle has been overloaded. Unplug the smoothie maker, empty sport bottle, and wait for 15 minutes for the motor to cool down, before reusing.

### CLEANING INSTRUCTIONS:

1. Unplug the appliance from wall outlet before cleaning.
2. After use, clean the main body with a damp cloth and dry with a dry cloth. Keep away from water or high humidity.
3. Sport bottle and lid are dishwasher safe, however we recommend washing and rinsing by hand.
4. Keep children away from the combined sport bottle and blade base.
5. Do not use abrasive cleaners.
6. Keep away from direct sunlight and damp.
7. Never immerse the blender base or power cord in water for cleaning.

## PLUG WIRING (UK & IRELAND)


This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

### The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

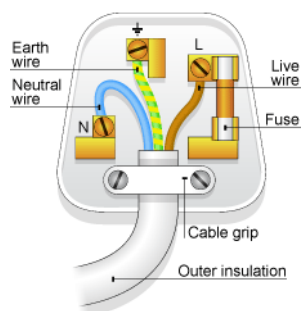

### DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

